


# GW-7472 QUICK START

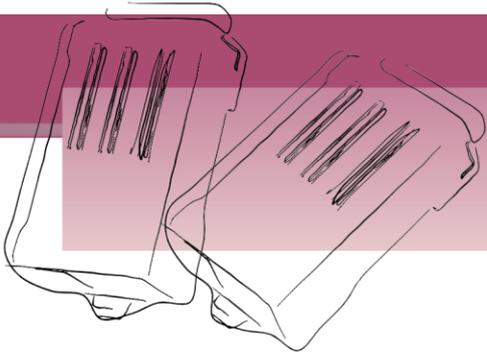

*For GW-7472*

English / Dec. 2014 / Version 2.1

## 1 What's in the shipping package?

The package includes the following items:



**GW-7472**



**Software CD**



**Quick Start Guide**  
(This Document)



**CA-002**  
(DC connector to  
2-wire power cable)

## 2 Installing software on your PC

### ■ Install GW-7472 Utility:

The software is located at:

Fieldbus\_CD:\EtherNetIP\Gateway\GW-7472\Utility

[http://ftp.icpdas.com/pub/cd/fieldbus\\_cd/ethernetip/gateway/gw-7472/utility/](http://ftp.icpdas.com/pub/cd/fieldbus_cd/ethernetip/gateway/gw-7472/utility/)


# 3 Connecting the Power and Host PC

1. Make sure your PC has workable network settings.
2. Disable or well configure your Windows firewall and anti-virus firewall first, else the "Network Scan" on step 4, 5 and 6 may not work. (Please contact with your system Administrator)
3. Check Init/Run DIP switch if it is on **Init** position.



4. Connect both the GW-7472 and your computer to the same sub network or the same Ethernet switch, and power the GW-7472 on.



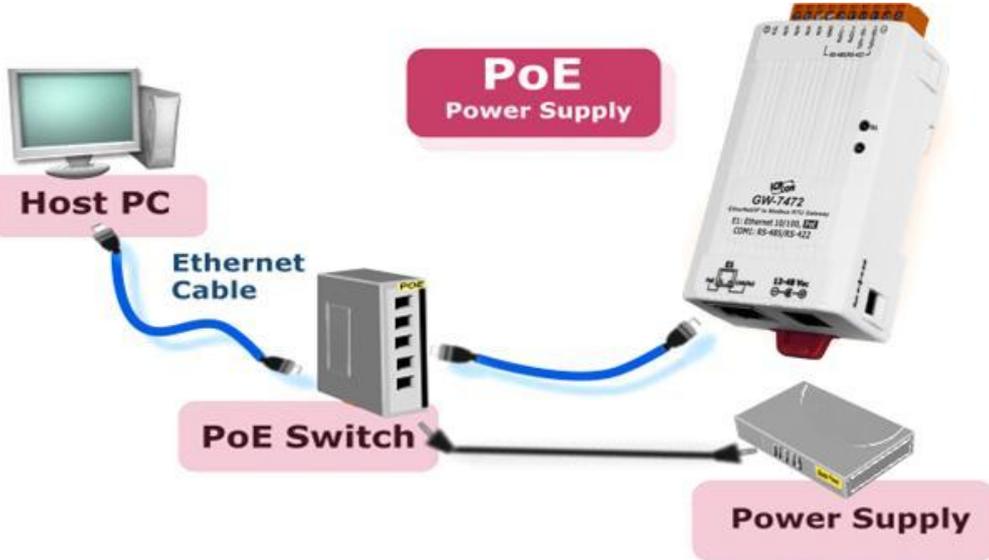

# 4 Searching the GW-7472

1. Double click the GW-7472 Utility shortcut on the desktop.
2. Click the "Network Scan" button to search your GW-7472.
3. Select "Configure" or "Diagnostic" buttons to configure or test the module


	Name	Version	IP
▶ 1	GW-7472	2.5	192.168.255.1

# 5

## Module configuration

1. Double click the GW-7472 Utility shortcut on the desktop.
2. Click the "Network Scan" button to search your GW-7472.
3. Select "Configure" buttons to configure the module
4. After setting, click the "Update Settings" button to finish the

c

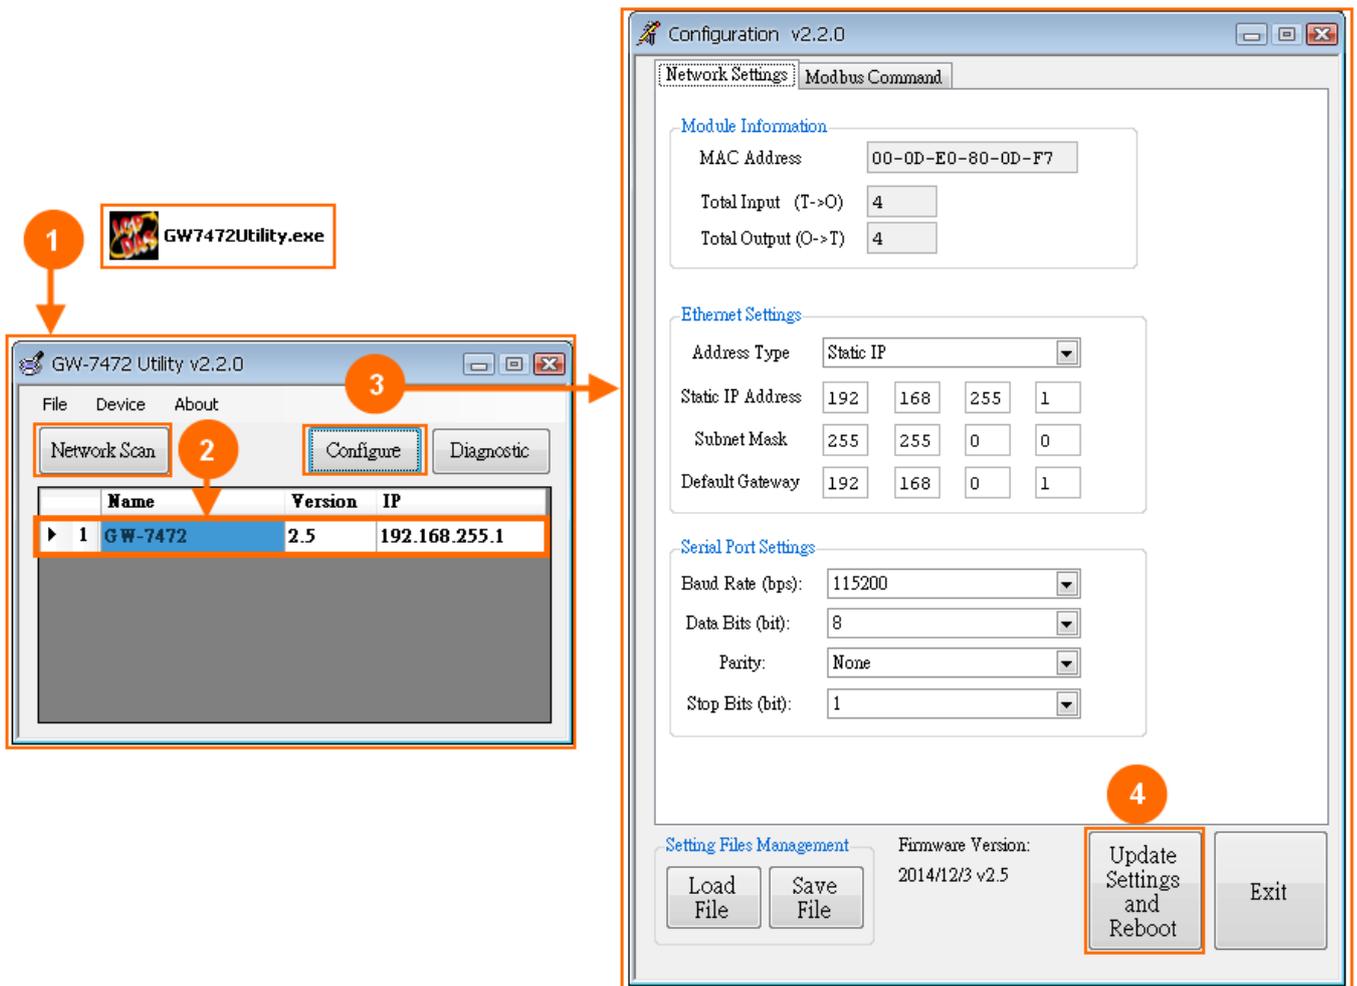

Item	Settings (Init Mode)
IP	192.168.255.1
Gateway	192.168.0.1
Mask	255.255.0.0

■ Item Descriptions:

Item	Description
<b>Network Settings</b>	For configuration of the <b><u>Address Type</u></b> , <b><u>Static IP Address</u></b> , <b><u>Subnet Mask</u></b> and <b><u>Default Gateway</u></b> of the GW-7472 Please refer to section “ <b>4.2.1 Network Settings</b> ”
<b>Modbus RTU Port Settings</b>	For configuration of the <b><u>Baud Rate</u></b> , <b><u>Data Sizes</u></b> , <b><u>Parity</u></b> , <b><u>Stop Bits</u></b> , of the RS-485/RS-422 port of the GW-7472 Please refer to section “ <b>4.2.2 Modbus RTU Serial Port Settings</b> ”
<b>Modbus TCP Server IP Setting</b>	For configuration of the IP of each Modbus TCP server. Please refer to section “ <b>4.2.3 Modbus TCP Server IP Settings</b> ”
<b>Setting File Management</b>	For the setting files management of GW-7472. Please refer to section “ <b>4.2.4 Setting File Management</b> ”
<b>Byte Order Setting</b>	For configuration of the order of two bytes in a word of AI and AO. Please refer to section “ <b>4.2.5 Byte Order Setting</b> ”
<b>Modbus Request Command Setting</b>	Modbus commands to communicate with the Modbus slaves Please refer to section “ <b>4.2.6 Modbus Request Settings</b> ”


# 6

## Module Diagnostic

1. Check Init/Run switch if it is on **Run** position.
2. Reboot your GW-7472. Then, reconnect it by utility.
3. Click "Diagnostic" button to open diagnostic window.



1 

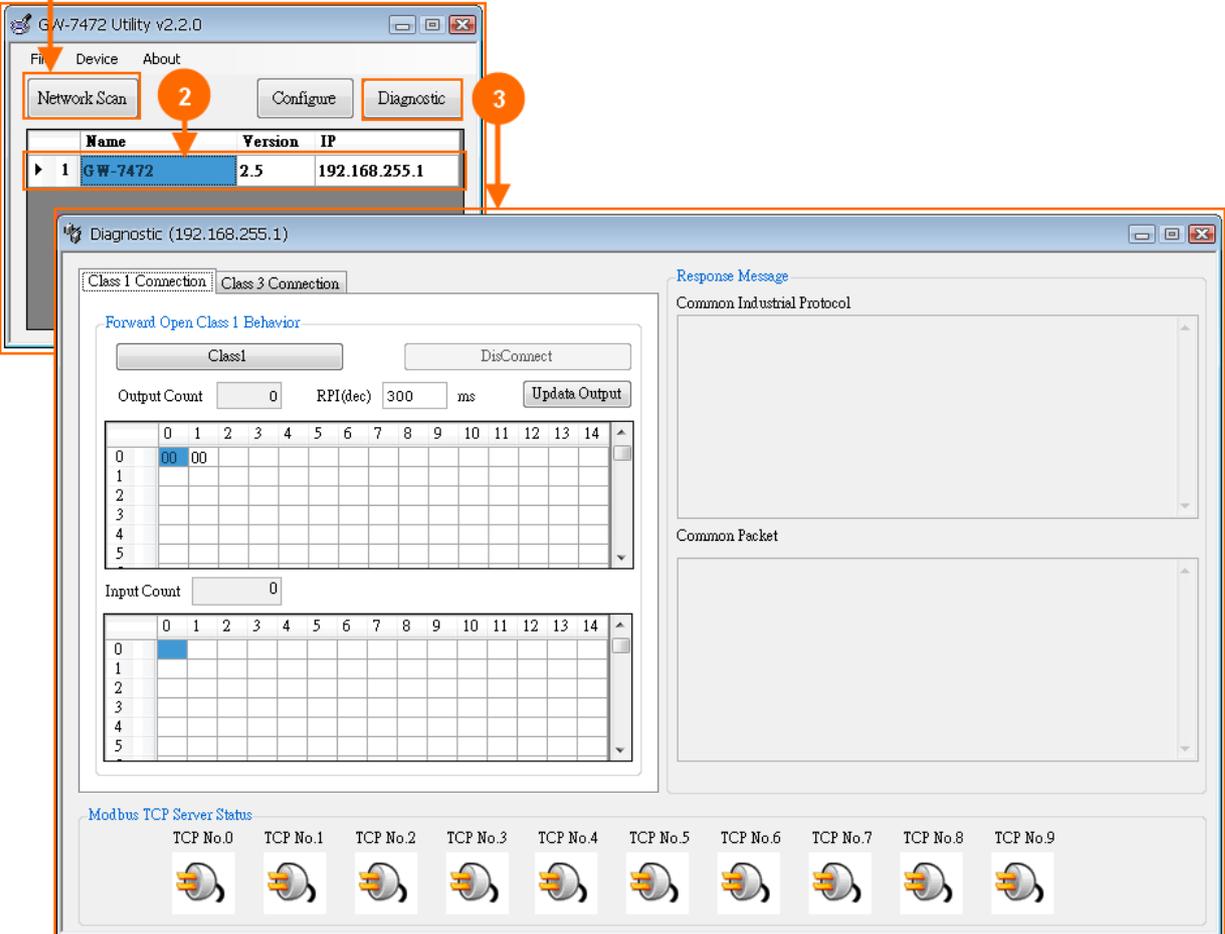

Name	Version	IP
1 GW-7472	2.5	192.168.255.1

Diagnostic (192.168.255.1)

Class 1 Connection | Class 3 Connection

Forward Open Class 1 Behavior

Class:  DisConnect

Output Count:  0 RPI(dec):  300 ms

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14
0	00	00													
1															
2															
3															
4															
5															

Input Count:  0

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14
0															
1															
2															
3															
4															
5															

Modbus TCP Server Status

TCP No.0	TCP No.1	TCP No.2	TCP No.3	TCP No.4	TCP No.5	TCP No.6	TCP No.7	TCP No.8	TCP No.9
									

■ Item Descriptions:

Item	Description
<b>UCMM/Forward Open Class 3 Behavior</b>	Send UCMM packets or use the Forward_Open service to build the CIP class 3 connection to communicate with the GW-7472. Please refer to section “ <b>4.3.1 UCMM/Forward Open Class 3 Behavior</b> ”
<b>Forward Open Class 1 Behavior</b>	Use the Forward_Open service to build the CIP class 1 connection to communicate with the GW-7472. Please refer to section “ <b>4.3.2 Forward Open Class 1 Behavior</b> ”
<b>Response Message</b>	EtherNet/IP packets responded from the GW-7472.
<b>Modbus TCP Servers Status</b>	The connection status of Modbus TCP servers. Please refer to section “ <b>4.3.3 Modbus TCP Servers Status</b> ”

## Related Information

■ **GW-7472 Product page:**

[http://www.icpdas.com/products/Remote\\_IO/can\\_bus/GW-7472.htm](http://www.icpdas.com/products/Remote_IO/can_bus/GW-7472.htm)

■ **GW-7472 Documentations:**

Fieldbus\_CD:\EtherNetIP\Gateway\GW-7472\Manual

[http://ftp.icpdas.com/pub/cd/fieldbus\\_cd/ethernetip/gateway/gw-7472/manual/](http://ftp.icpdas.com/pub/cd/fieldbus_cd/ethernetip/gateway/gw-7472/manual/)

■ **GW-7472 Utility:**

Fieldbus\_CD:\EtherNetIP\Gateway\GW-7472\Utility

[http://ftp.icpdas.com/pub/cd/fieldbus\\_cd/ethernetip/gateway/gw-7472/utility/](http://ftp.icpdas.com/pub/cd/fieldbus_cd/ethernetip/gateway/gw-7472/utility/)

■ **GW-7472 firmware:**

Fieldbus\_CD:\EtherNetIP\Gateway\GW-7472\firmware

[http://ftp.icpdas.com/pub/cd/fieldbus\\_cd/ethernetip/gateway/gw-7472/firmware/](http://ftp.icpdas.com/pub/cd/fieldbus_cd/ethernetip/gateway/gw-7472/firmware/)

