

## Packing List

In addition to this guide, the package includes the following items:



CAN-2024C



Screw Driver

Quick Start

## Resources


How to search for drivers, manuals and spec information on ICP DAS website.

## Technical Support

[service@icpdas.com](mailto:service@icpdas.com)

[www.icpdas.com](http://www.icpdas.com)


- For Mobile Web

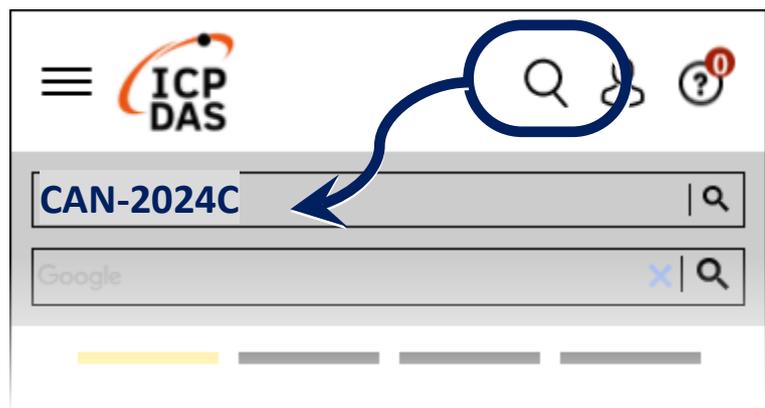


- For Desktop Web

# 1 Node ID, baud rate and terminator resistance

According to the user's requirements for CANOpen network, set the node ID and CAN baud rate of this module on the CANOpen network. If the module is located at the terminal of the network, according to the standard CANOpen network specification, this module must enable the terminator resistance.

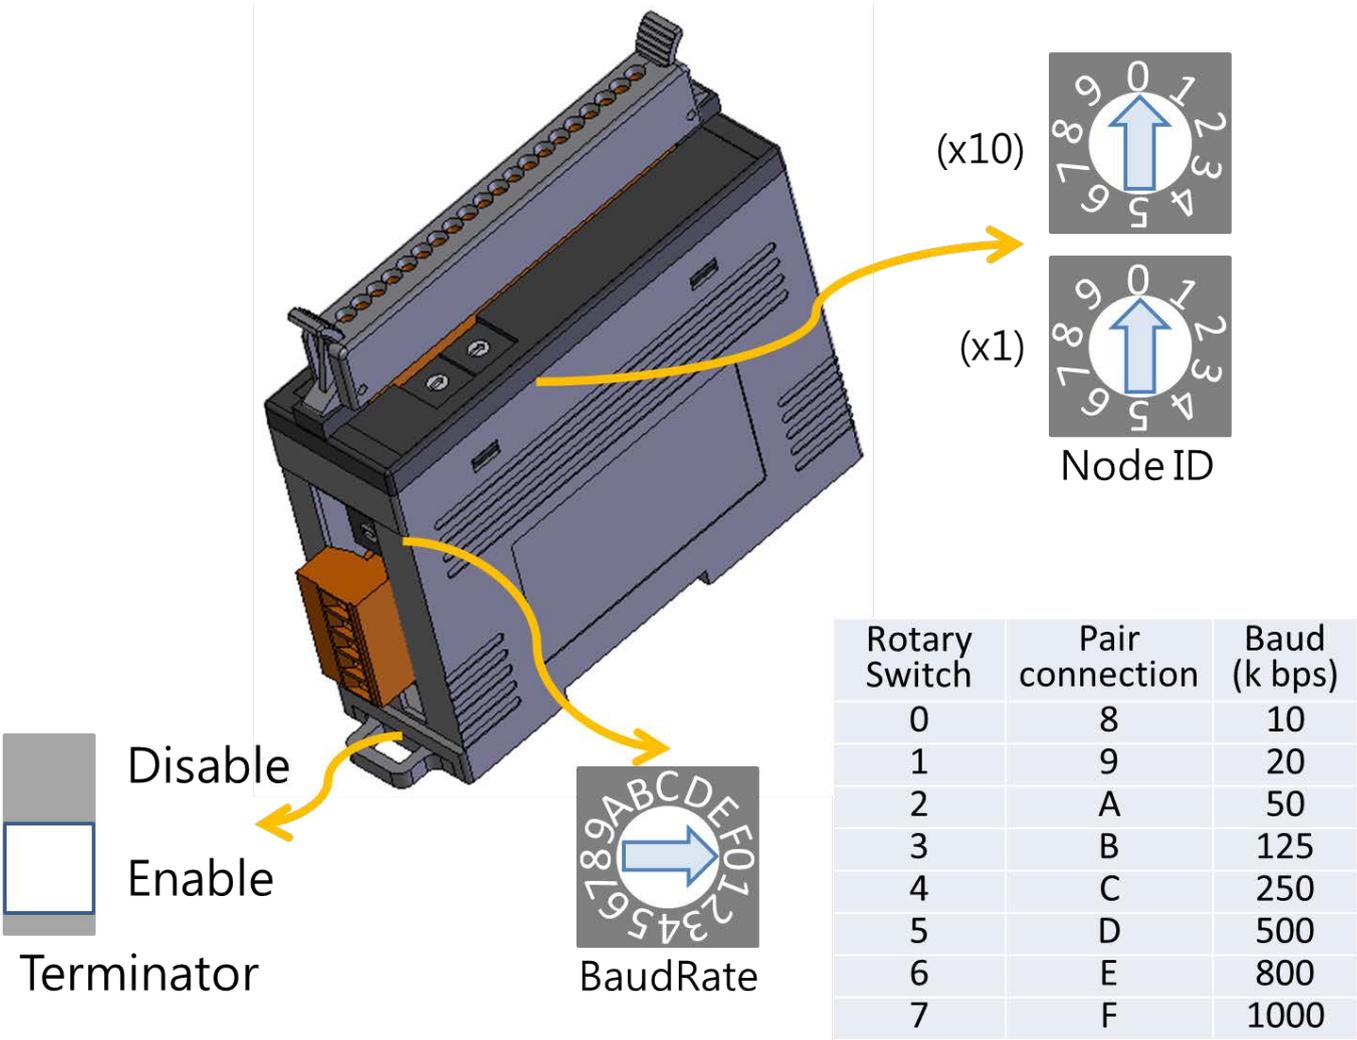


## 2 I/O channel connection

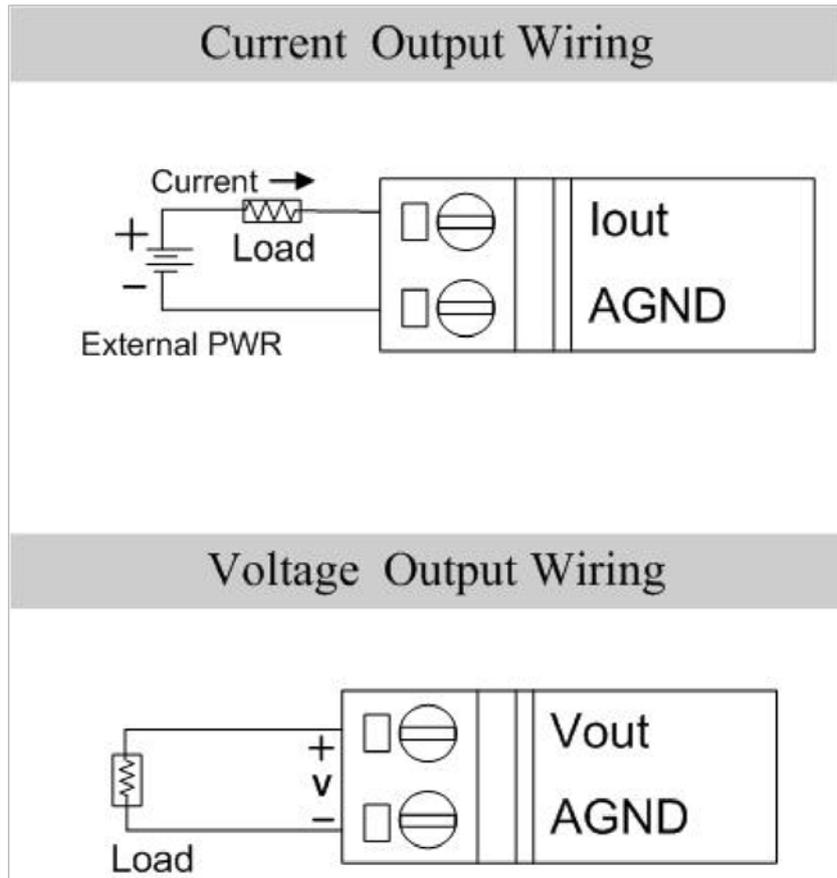


## 3 CAN port connection

### 2-wire Connection

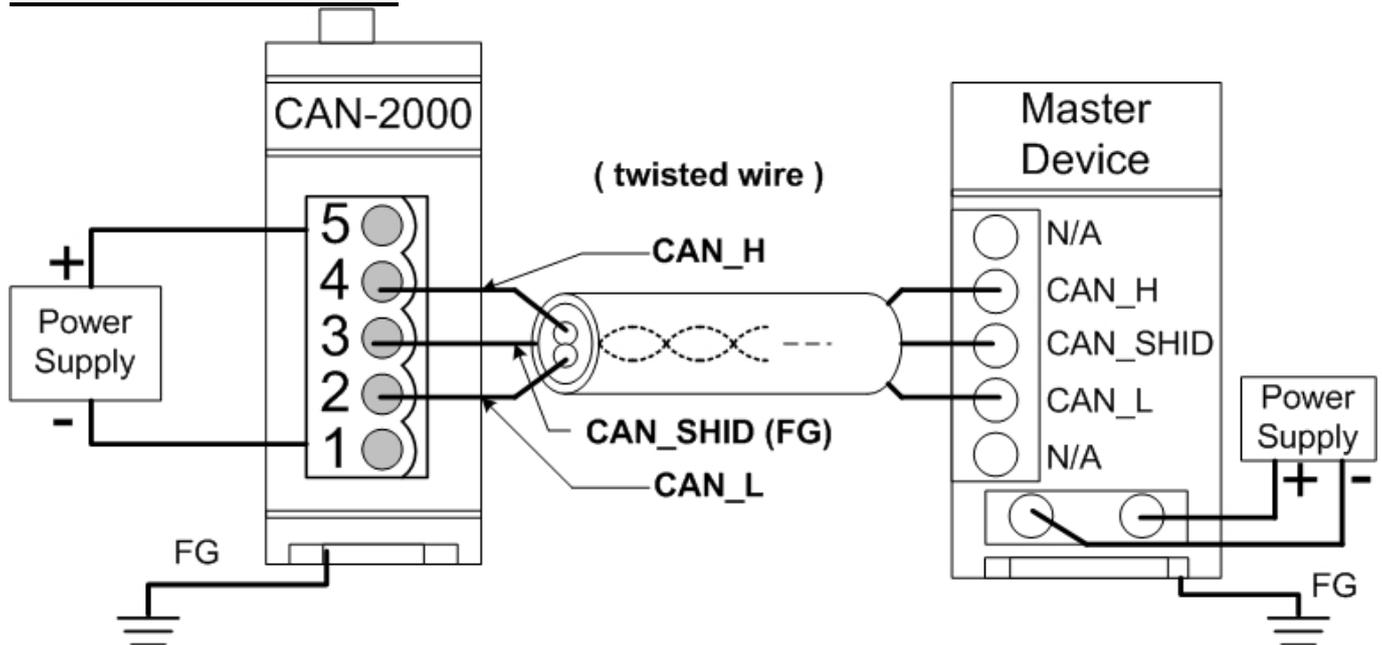

### 3-wire Connection

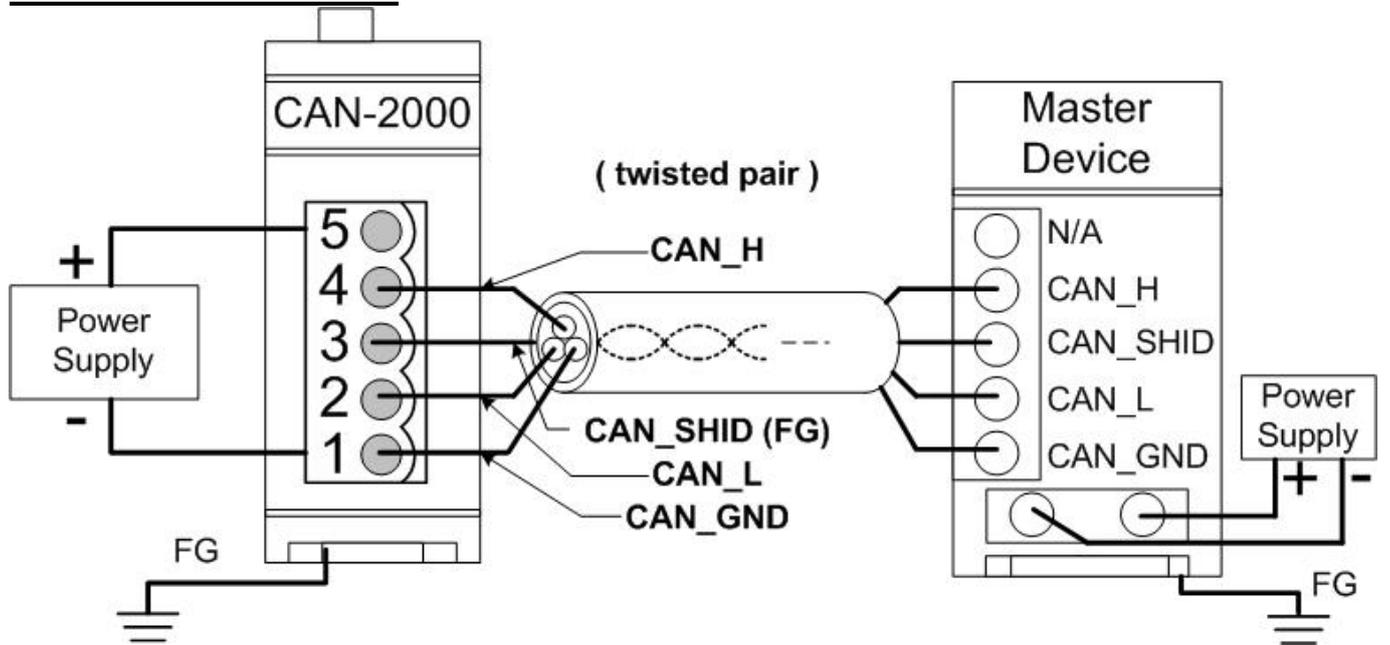

### 4-wire Connection

