

Packing List

In addition to this guide, the package includes the following items:

PROFI-8155 or	PROFI-8255	or PROFI-8455	or PROFI-8455			
EMI CORE	Screw Driver	CA-0915	CA-0904			
PROFI-8855	PROFI-8X55	PROFI-8455	PROFI-8155			
		PROFI-8855	PROFI-8255			
Technical Support service@icpdas.com www.icpdas.com Comparison Wowlicpdas.com Service@icpdas.com Wowlicpdas.com Service@icpdas.com Service@icpdas.com Service@icpdas.com Wowlicpdas.com Service@icpdas.com Service@icpdas.com						
 For Desktop Web 						
Model/Name Coogle X Q A PRODUCTS SOLUTIONS NEWS & EVENTS SUPPORT CORPORATE						

Status Indicator

Status Indicator	Status Indicator	Meaning	Recommend solution
RUN PWR ERR	ERR ON & RUN OFF	Offline	Check the address setting of PROFI-8X55 and DP-master.
	ERR Flash(0.5 sec)	Prm is fault	Check the setting of PROFI-8X55 in the master interface and make sure of the consistency.
	ERR Flash(1 sec)	Cfg is fault	Same as above
	ERR OFF & RUN ON	Operation mode	
	PWR Flash(1 sec)	Detect module(s) offline	Find the reason of the fault of corresponding module

Node Address

(LSB)	Rotary Switch(dec)	Pre-saved address (EEPROM)	PROFI-8X55 Station Address	
	BCD	0~125	Don't care	MSB*16+LSB
(MSB)	S S S S S S S S S S S S S S S S S S S	126	126(default)	SSA Telegram and save address to EEPROM
		255	Clear to 126	SSA Telegram and save address to EEPROM

EMI CORE Installation



Both side of the PROFIBUS cable which connect PROFI-8855 can add a core to reduce noise.