



# WF-2026

## Quick Start

### 「 WF-2026 」 Package Checklist

The package includes the following items:

- One WF-2026 module
- One Quick Start
- One software utility CD
- One screw driver
- One RS-232 cable (CA-0910)
- One Antenna 2.4GHz - 5 dBi (ANT-124-05)



### Note:

1. If any of these items are missed or damaged, contact the local distributors for more information. Save the shipping materials and cartons in case you want to ship in the future.

2. This document supports the RevB version for the WF-2026 module. For the previous version, please refer the v1.x version quick start on the CD.

## ● Appearance and pin assignments

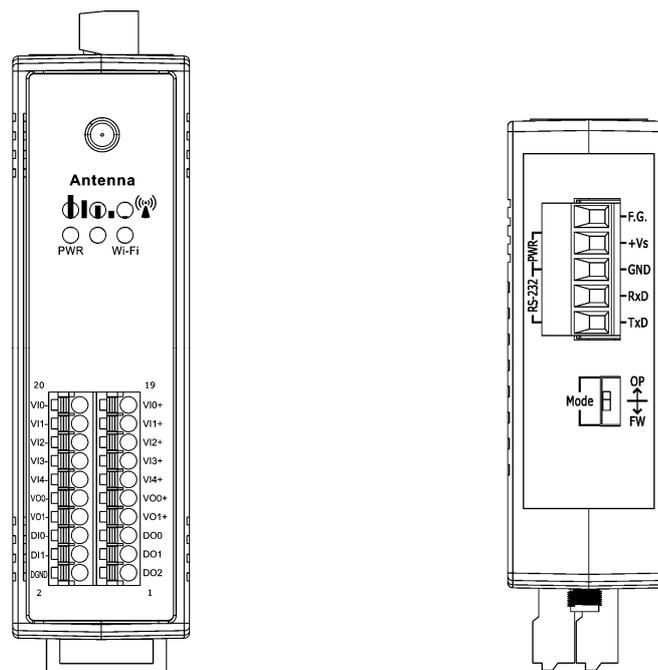


Figure 1: Appearance of the WF-2026

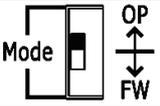
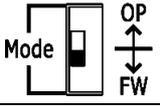
Pin Assignment Name		Terminal No.	Pin Assignment Name
VI0-	20		VI0+
VI1-	18		VI1+
VI2-	16		VI2+
VI3-	14		VI3+
VI4-	12		VI4+
VO0-	10		VO0+
VO1-	8		VO1+
DI0	6		DO0
DI1	4		DO1
DGND	2		DO2

Figure 2: I/O Connector of WF-2026

Table 1: Power/Signal Connector

Power/Signal connector	
Pin Assignment	Description
F.G	Frame Ground
+Vs	+10 ~ +30 VDC
GND	Power / RS-232 GND
RxD	RS-232 RxD
TxD	RS-232 TxD

Table 2: Operating Mode Selector Switch

Operating Mode Selector Switch		
Mode	Jumper Position	Description
FW		Firmware update mode
OP		Firmware operation mode

# ● Hardware Connection

## Power and Serial port connection

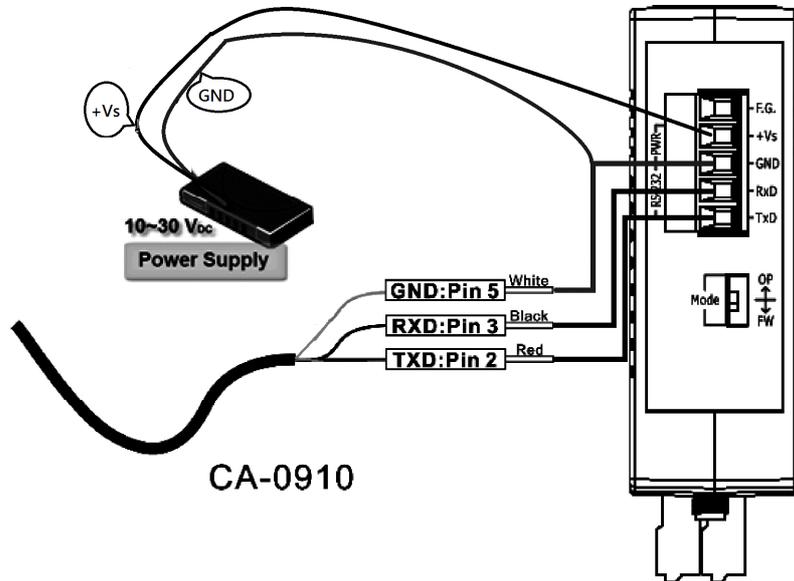


Figure 4: Power and Serial port wire connection

## I/O connection

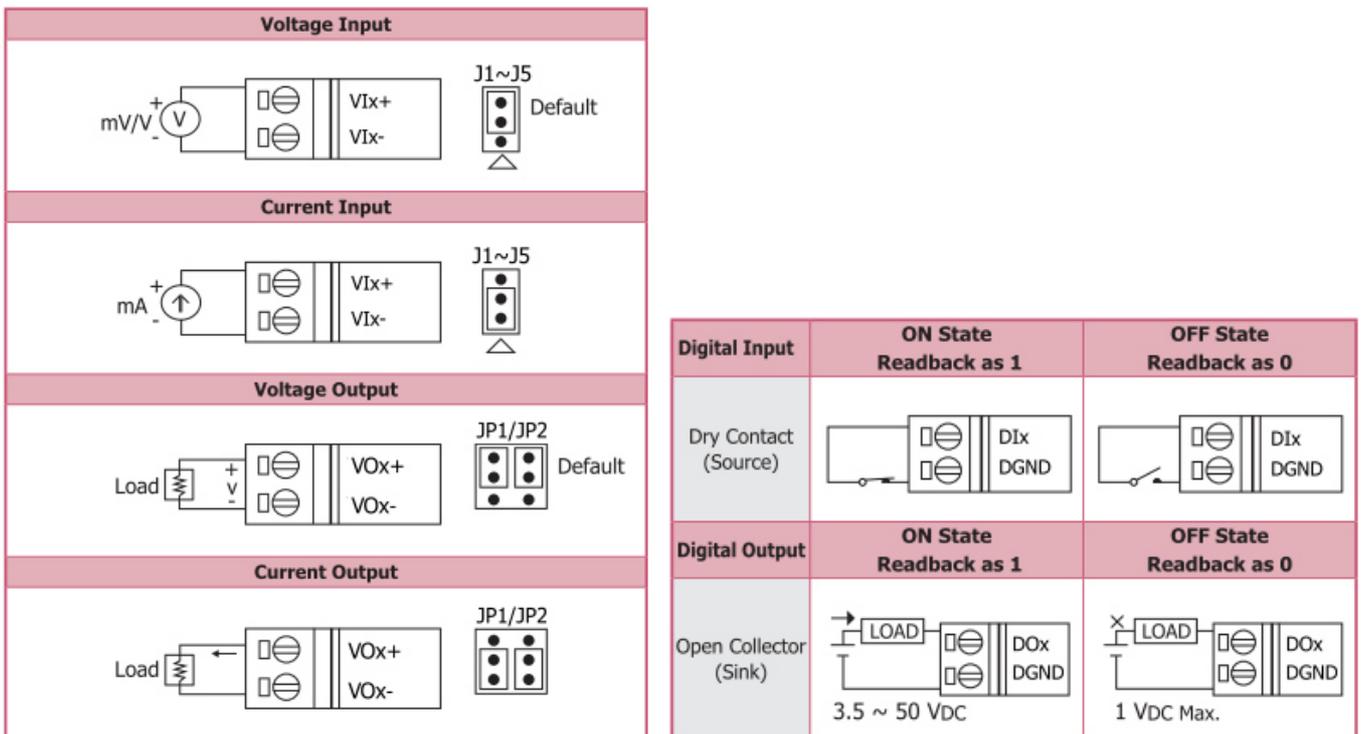


Figure 5: Wire connections

## ● Installation

Before use, associated hardware configuration, the steps described as follows :

### Step 1: Checking the WF-2000 series firmware operation mode

It needs to set the DIP switch to the "OP" position (operation mode), as resetting the power, WF-2000 series will be in the operation mode.

### Step 2: Serial port connection

WF-2000 series supports RS-232 serial communication. The circuit configuration is as shown in Figure 4.

If you do not need parameter setting, this step can be omitted.

### Step 3: Power connection

Connect the power supply to WF-2000 series' power terminator, as shown in Figure 4.

## WF-2000 series connection setting

### WF-2000 Series Wireless Network Configuration (WF IO Utility\_RevB)

The screenshot shows the NetworkConfig utility window with three main sections: Network, Wi-Fi, and General.

- Network:**
  - Net ID: 1
  - DHCP Enable
  - IP Address: 192, 168, 255, 1
  - Subnet Mask: 255, 255, 0, 0
  - Gateway: 192, 168, 255, 254
  - MAC Address: 00-1D-C9-1A-C7-BF
  - DHCP Server Enable (Limited AP Mode)
  - Start IP Addr: 192, 168, 255, 100
- Wi-Fi:**
  - Wi-Fi Modes: Limited AP
  - SSID Auto Search [Search]
  - SSID: WF-20
  - Encryption: NONE
  - Wireless Key: [Empty]
  - Wireless CH: 2
- General:**
  - F/W Version: B.1
  - Date Created: 2016/7/21
  - Auto Disconnect
  - Comm. Net ID: 1
  - RS-232: [Dropdown]
  - COM3: [Dropdown]
  - [Write] [Read]

Figure 6: Wi-Fi Configuration

- 01 、 Net ID : The Unit Identifier in Modbus TCP/IP application data unit. This case is set as "1".
- 02 、 IP Address: WF-2000 series' IP address. Here set to "192.168.255.1".
- 03 、 Subnet Mask : Net Mask settings. Here set to "255.255.0.0".
- 04 、 Gateway : Gateway settings. Here set to "192.168.255.254".
- 05 、 Wi-Fi Mode : Wireless network connection mode settings. Here set to "Limited AP" mode. (If select the "Limited AP" mode, the "DHCP Server" function is enabled)
- 06 、 SSID : Service set identifier. Here set to "WF-2026".
- 07 、 Encryption : Encryption mode settings. Here set "NONE" (without encryption).
- 08 、 Wireless Key : Wireless encryption Key. Here does not have the setting.
- 09 、 Wireless CH : Wi-Fi connection channel settings. Here set to "2".
- 10 、 Upload parameters : After completing the settings above, select the "RS-232" interface, communication "Net ID" and "COM Num". Press "Write" button to upload the parameters.

## PC Wireless Network Configuration and Connection

### 01 、 TCP/IP Setting :

- a. Entry the **IP address** as "192.168.255.x", where "x" is a number between 1 and 254 **except 1**, **Subnet mask** as "255.255.255.0". Finally, press "OK" button, please refer the Figure 7.

### 02 、 Wireless network connection :

- a. View available wireless networks and you can see the "WF-2026" wireless network in the list.
- b. Select the "WF-2026" and press the "Connect" button.
- c. After waiting for a while, there will appear connection success screen.

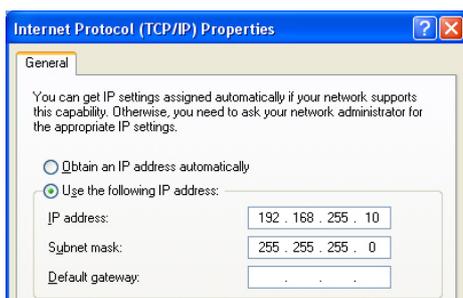


Figure 7: IP configuration interface

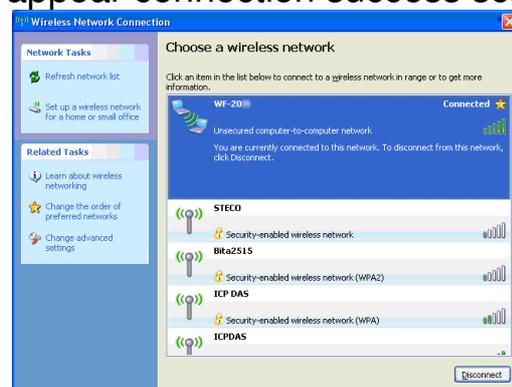


Figure8: Connection interface

## Access I/O data

### 01 、 Connection with Modbus TCP utility

- a. Open Modbus TCP utility and key in the IP address as "192.168.255.1", Port as "502". Finally, press the "Connect" button.

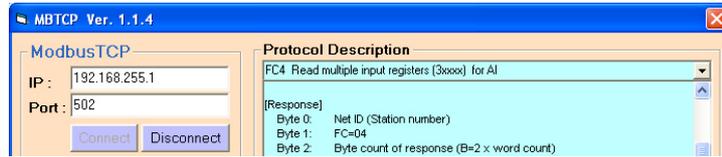


Figure9: Modbus TCP utility Connection interface


### 02 、 The following Modbus command function codes are available for WF-2000 series control

Table 2: Modbus request command list

	FC1 Read multiple coils status (0xxxx) for DO	FC2 Read multiple input discrete (1xxxx) for DI	FC3 Read multiple registers (4xxxx) for AO	FC4 Read multiple input registers (3xxxx) for AI	FC15 Force multiple coils (0xxxx) for DO	FC16 Write multiple registers (4xxxx) for AO
Byte 0	Net ID					
Byte 1	FC=0x01	FC=0x02	FC=0x03	FC=0x04	FC=0x0F	FC=0x10
Byte 2-3	Reference number					
Byte 4-5	Bit count	Bit count	Word count	Word count	Bit count	Word count
Byte 6	N/A	N/A	N/A	N/A	Byte count (B)	Byte count (B)
Byte 7-( B+6)	N/A	N/A	N/A	N/A	Data to be written	Register values

### 03 、 Modbus TCP request command examples

#### a. Read multiple coils status (0xxxx) for DO

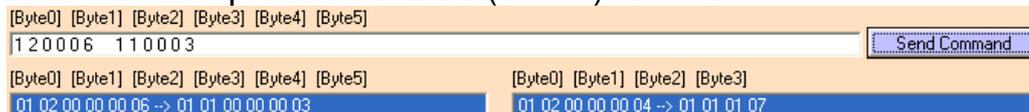

#### b. Force multiple coils (0xxxx) for DO



c. Read multiple input discretets (1xxxx) for DI

The screenshot shows a command input field with the text "1 2 0 0 0 6 1 2 0 0 0 3" and a "Send Command" button. Below the command field, the response is displayed in two parts: "01 02 00 00 00 06 --> 01 02 00 00 00 03" and "01 02 00 00 00 04 --> 01 02 01 00".

d. Read multiple input registers (3xxxx) for AI

The screenshot shows a command input field with the text "1 2 0 0 0 6 1 4 0 0 0 5" and a "Send Command" button. Below the command field, the response is displayed in two parts: "01 02 00 00 00 06 --> 01 04 00 00 00 05" and "01 02 00 00 00 0D --> 01 04 0A FF DA FF CD FF E6 FF DA FF FD".

e. Read multiple registers (4xxxx) for AO

The screenshot shows a command input field with the text "1 2 0 0 0 6 1 3 0 0 0 2" and a "Send Command" button. Below the command field, the response is displayed in two parts: "01 02 00 00 00 06 --> 01 03 00 00 00 02" and "01 02 00 00 00 07 --> 01 03 04 3F FF 3F FF".

f. Write multiple registers (4xxxx) for AO

The screenshot shows a command input field with the text "1 2 0 0 0 6 1 10 0 0 0 2 4 7F FF 7F FF" and a "Send Command" button. Below the command field, the response is displayed in two parts: "01 02 00 00 00 06 --> 01 10 00 00 00 02 04 7F FF 7F FF" and "01 02 00 00 00 06 --> 01 10 00 00 00 02".

WF-2026 IO Address Mapping

Table 2: (3xxxx) AI address

Begin Address	Points	Descriptions	Range	Access Type
30001	1~5	Analog Input	-32768 ~ +32767 (Bipolar) 0 ~ +65535 (Unipolar)	R

Table 3: (4xxxx) AO address

Begin Address	Points	Descriptions	Range	Access Type
40001	1~2	Analog Output	-32768 ~ +32767 (Bipolar) 0 ~ +65535 (Unipolar)	R/W


Table 4: (0xxxx) DO address

Begin Address	Points	Descriptions	Range	Access Type
00001	1~3	Digital Output	0=OFF, 1=ON	R/W

Table 5: (1xxxx) DI address

Begin Address	Points	Descriptions	Range	Access Type
10001	1~2	Digital Input	0=OFF, 1=ON	R

### Troubleshooting

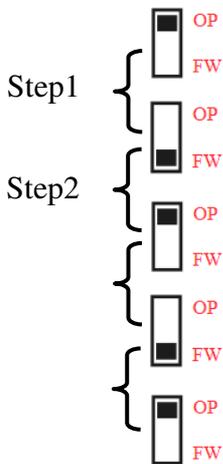Item	Problem Description	Solution
1	Power Failure (PWR LED Off)	1. Please return to the ICP DAS for inspection and repair
2	WLAN connection can not be established	<ol style="list-style-type: none"> <li>1. Make sure that the service set identifier device (SSID) settings are the same.</li> <li>2. Make sure Wi-Fi transmission Channel settings are the same.</li> <li>3. Make sure encryption is set, encryption keys are the same way</li> <li>4. Make sure antenna is connected</li> <li>5. Please confirm whether there are barriers on the scene. That could result in poor signal quality.</li> </ol>
3	TCP connection can not be established	<ol style="list-style-type: none"> <li>1. Make sure WLAN connection is established successfully</li> <li>2. Make sure the network configuration is good (TCP / IP Port, Local IP, Net Mask)</li> </ol>
4	<p>How to restore factory default</p>  <p>The diagram illustrates the sequence of dip switch positions for restoring factory defaults. It shows two steps: Step 1 involves moving the switch from OP to FW, and Step 2 involves moving it from FW back to OP. This sequence is repeated five times.</p>	<ol style="list-style-type: none"> <li>1. Power on the WF-2000 series I/O module</li> <li>2. Change the Dip-Switch position of the WF-2000 series and to complete the following steps in 5 seconds.                     <ul style="list-style-type: none"> <li>Step1. From “OP” to “FW” position.</li> <li>Step2. From “FW” to “OP” position.</li> <li>Step3. From “OP” to “FW” position.</li> <li>Step4. From “FW” to “OP” position.</li> </ul> </li> <li>3. When the correct implementation of the above steps, the Signal Strength LEDs and PWR/Wi-Fi LEDs of the WF-2000 series should be turn on, and that should be turn off after 500 ms later.</li> <li>4. Reset the power the WF-2000 series would back to factory defaults.</li> </ol>

## ● Technical Support

If you have problems about using the WF-2000 series I/O module, please contact ICP DAS Product Support.

Email: [service@icpdas.com](mailto:service@icpdas.com)