









Packing List

In addition to this guide, the package includes the following items:


				
LP-2241ME-GC	CA-0910 Cable	Pin Terminal * 16	microSD card	Screw Driver

		
44 mm DIN-Rail Clip* 1 M3x6L Screw* 4	GSM/GPRS External Antenna(ANT-421-04)	GPS Active External Antenna(ANT-115-03)

Technical Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

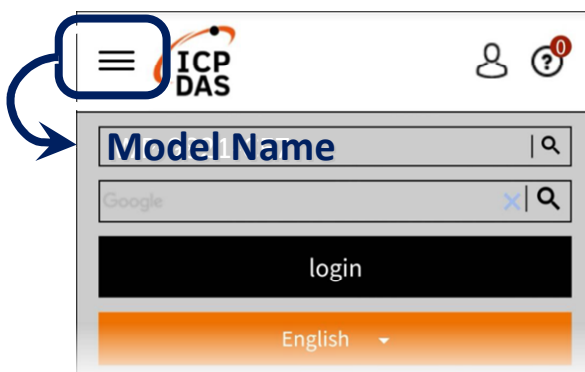

Technical Support

service@icpdas.com

www.icpdas.com

- For Desktop Web



1. Preparations for Device

Step 1: Power Supply: +12 ~ +48 VDC

Step 2: Ethernet Hub or Switch

Step 3: PC/NB: Can connect to the network and set the network


2. Hardware Connection

Step 1: Connect the positive terminal (+) of the power supply to the terminal PWR and the negative terminal (-) of the power supply to the P.GND.

Step 2: Connect the USB mouse or the USB keyboard to the USB port.

Step 3: Connect the monitor to the VGA port.

Step 4: Connect to PC or the laptop to the LAN port via an Ethernet switch.

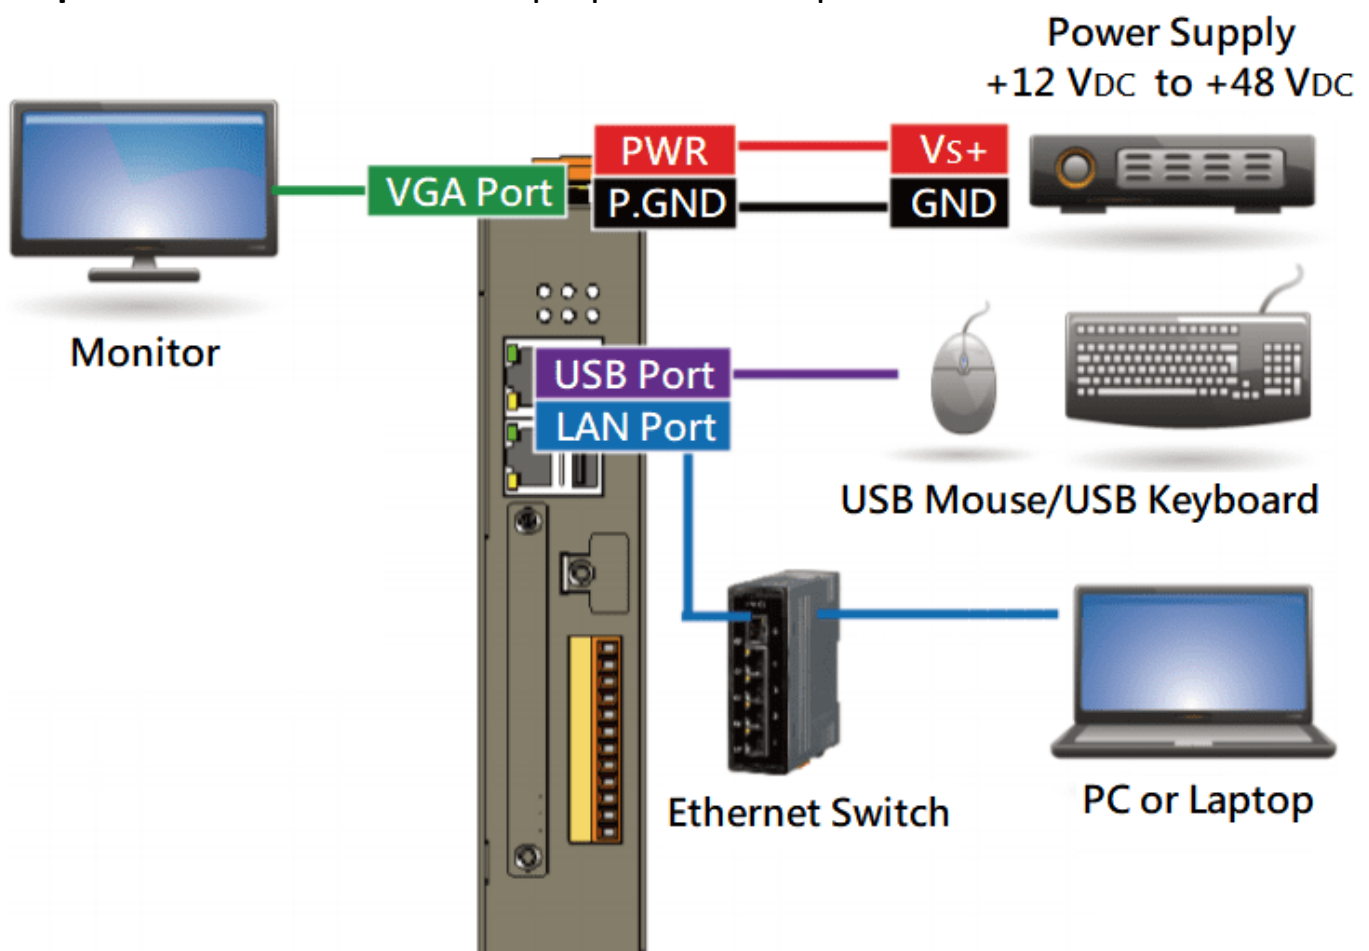

3. Network Connection

Interface	LAN1 (eth0)	LAN2 (eth1)	User ID: root Password: icpdas
IP (Default)	192.168.0.1	192.168.0.2	
Netmask	255.255.255.0	255.255.255.0	