




WISE-7119 Jumpers Setting

December 2010, Version 1.0

The WISE-7119 module is designed for use with voltage and current inputs. No external resistor required but the corresponding jumper must be shorted. The following figure shows the WISE-7119 jumper positions:

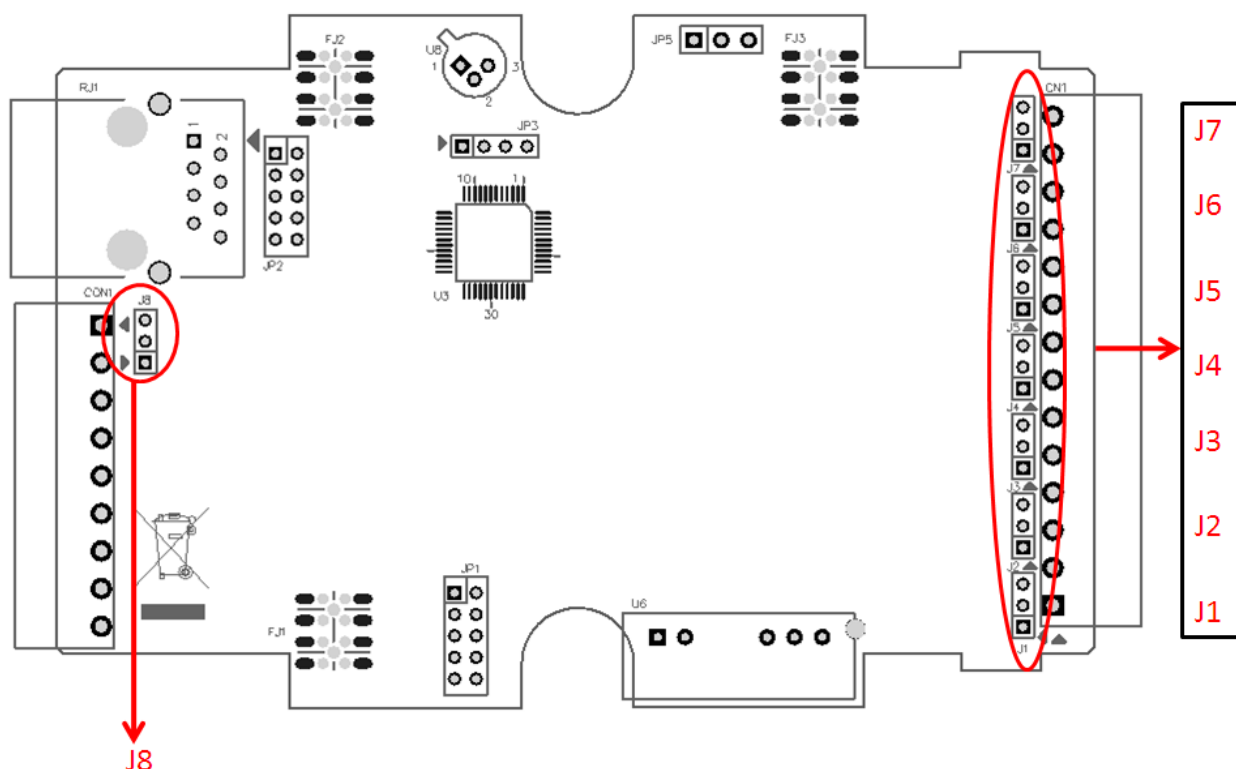

The corresponding mapping table between jumpers and channels are as follows.

AI Channel	AI0	AI1	AI2	AI3	AI4	AI5	AI6	AI7
Jumper	J1	J2	J3	J4	J5	J6	J7	J8

The jumper position for voltage/current inputs are:

AI Voltage Input or Thermocouple Input (Default)	AI Current Input