




# WISE-7126 Jumpers Setting

December 2010, Version 1.0

The WISE-7126 module is designed for use with voltage and current inputs. It also provides voltage and current outputs. No external resistor required but the corresponding jumper must be shorted. The following figure shows the WISE-7126 jumper positions:

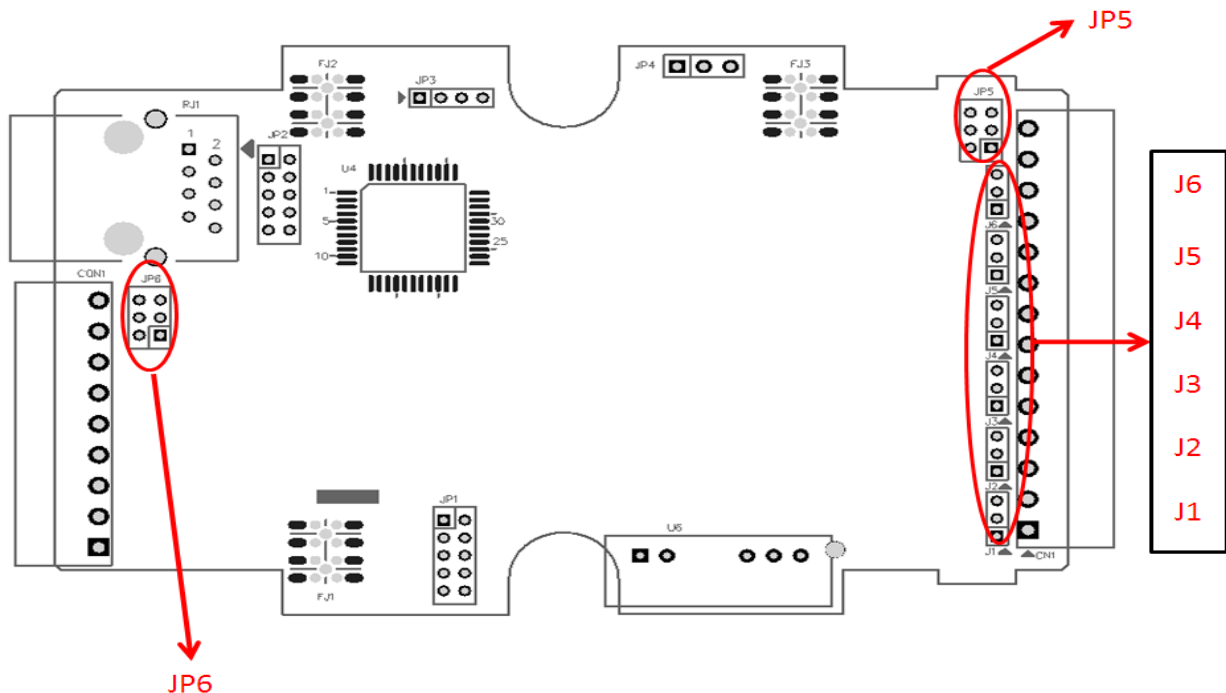

The corresponding mapping table between jumpers and channels are as follows.

AI Channel	AI0	AI1	AI2	AI3	AI4	AI5
Jumper	J1	J2	J3	J4	J5	J6

AO Channel	AO0	AO1
Jumper	JP5	JP6

The jumper position for voltage/current inputs and voltage/current outputs are:

AI Voltage Input (Default)	AI Current Input	AO Voltage Output (Default)	AO Current Output