
DL-300 Series Quick Start


For DL-301/DL-302/DL-303

Jan. 2018
Version 1.2.2


What's in the shipping box?



DL-300 Logger

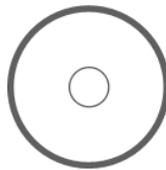

Software Utility CD

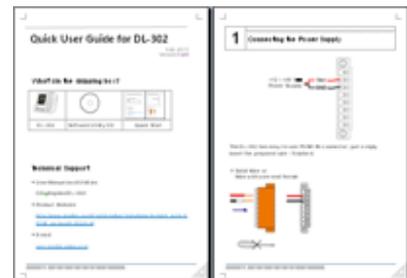

Quick Start

Technical Support

- User Manual and Utilities

CD:\Napdos\IloT\DL-300\

- Product Website

http://www.icpdas.com/root/product/solutions/remote_io/rs-485/dl_series/dl-300.html

- E-mail


service@icpdas.com

1 Connecting the Power Supply

The DL-300 logger can be powered by either a PoE switch or a +12 ~ +48 V power supply as below:

+12 ~ +48 V_{DC}
Power Supply


Vs+
GND

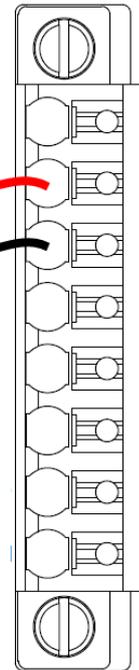


Wire requirement:

- Stripping length: 8 ~ 10 mm
- 0.20 - 1.5 mm² (IEC) / 28 - 16 AWG (UL)


➤ Push In (Solid Wire or Wire with wire-end ferrule)

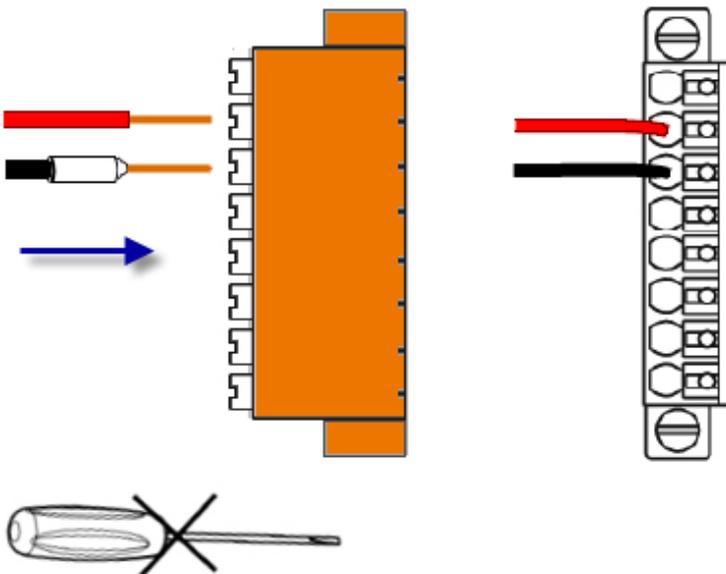

➤ Flexible Wire

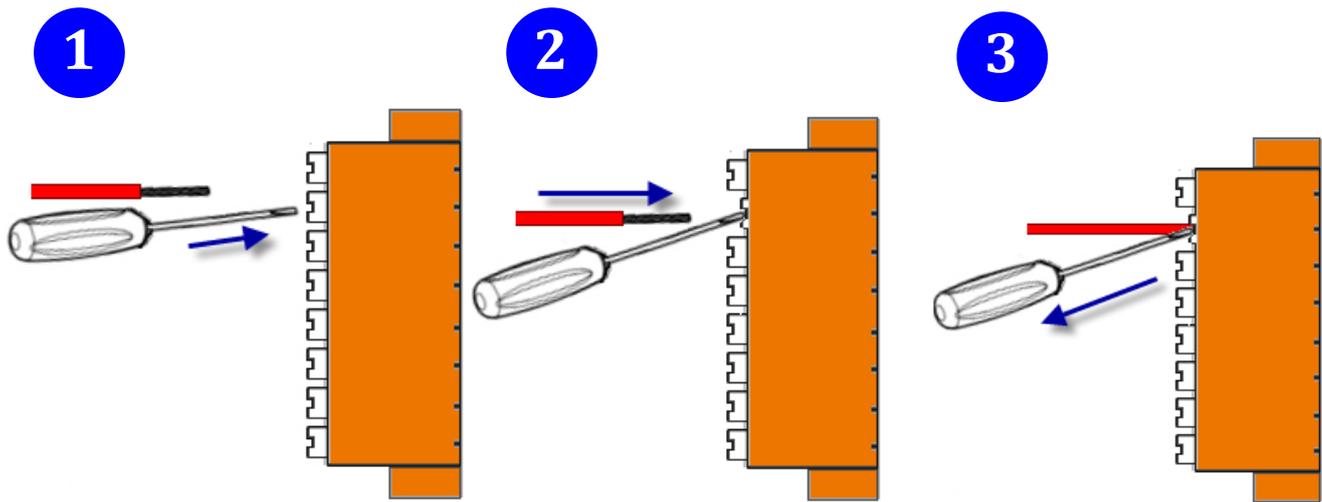


➤ Push and Release

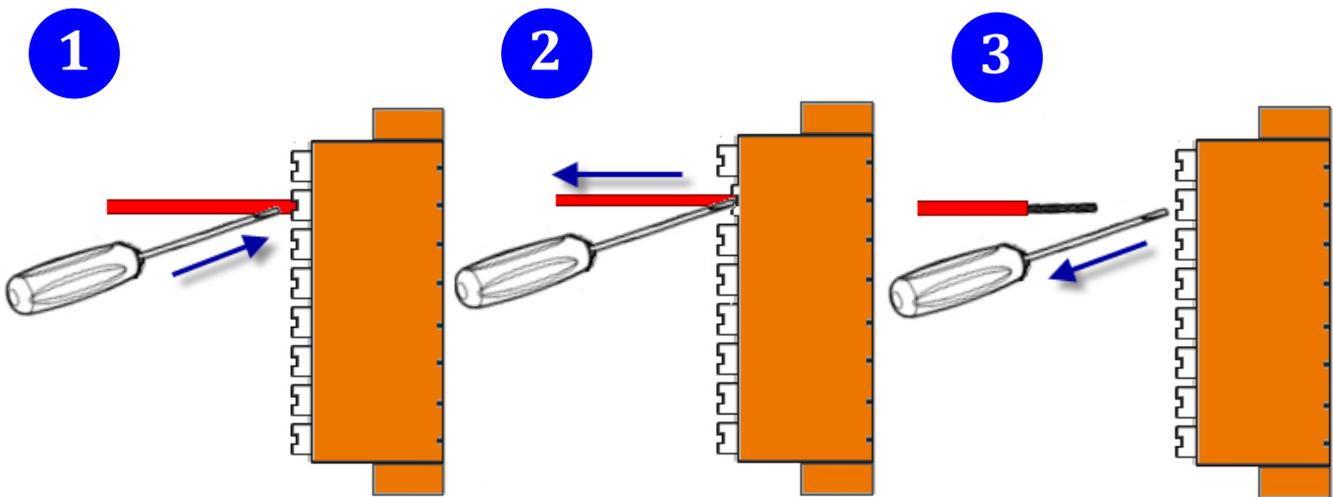

2

Powering-on the DL-300 logger

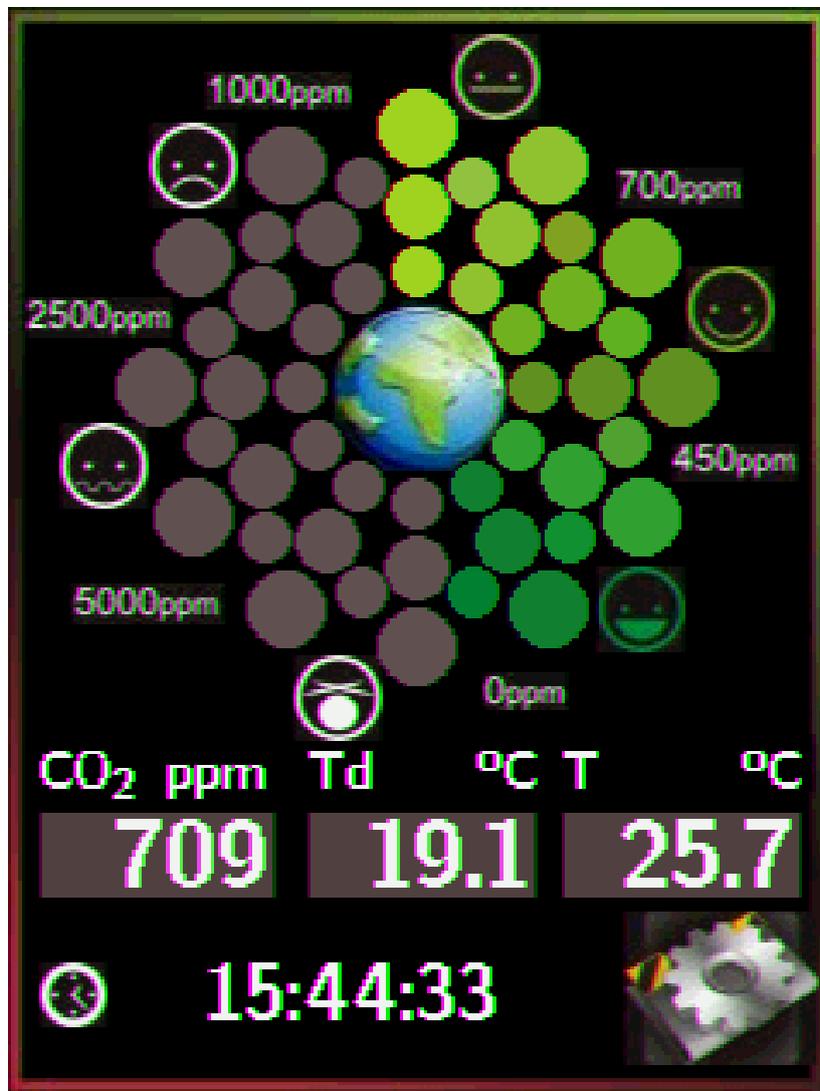

NOTE:

To increase the lifetime of the LCD screen, the default screen saver time is changed to 30 seconds, i.e. the LCD screen will be turned off when it is not touched for more than 30 seconds, for the shipment after Jan 5 2018.