


Download firmware into the i-7540D

1. The i-7540D firmware, ECAN_xxx, can be obtained from the following location:


- `fieldbus_cd\can\converter\i-7540d\firmware\`
- http://ftp.icpdas.com/pub/cd/fieldbus_cd/can/converter/i-7540d/firmware/

2. Connect the module and Host PC with download-cable, CA0910. As shown in the below diagram.

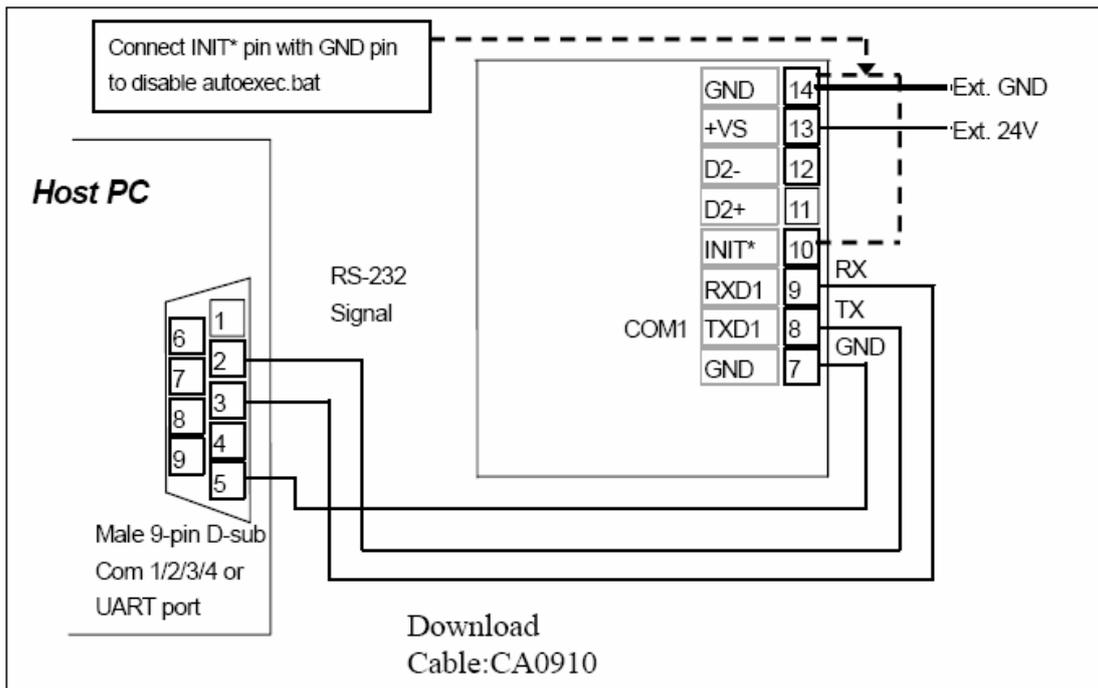


3. Connect Init* with GND pin of the i-7540D and boot up it.


4. Run the MiniOS7 Utility and then search the i-7540D.

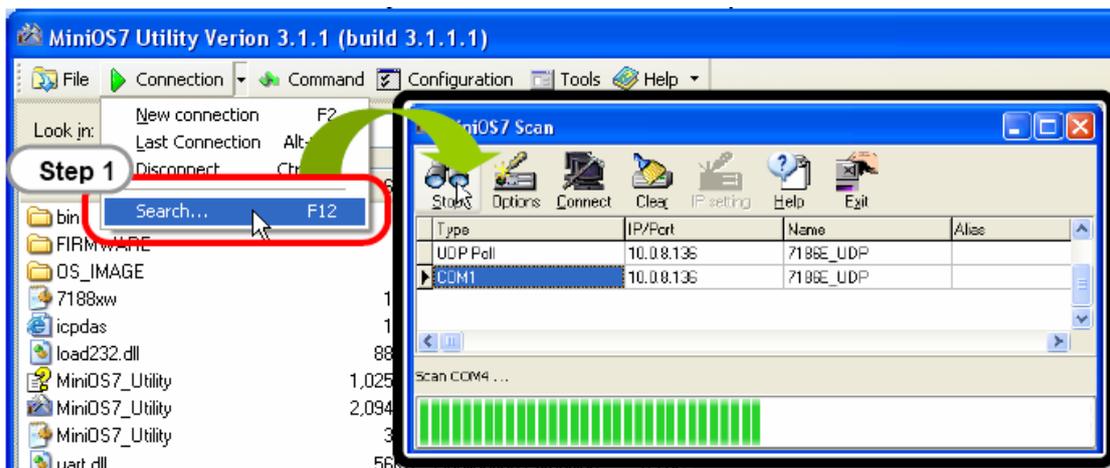

5. Double click the module name to go into the download window.
6. Click the mouse right button on the right hand window and select “Erase Disk” option to erase the flash of the 7540D.

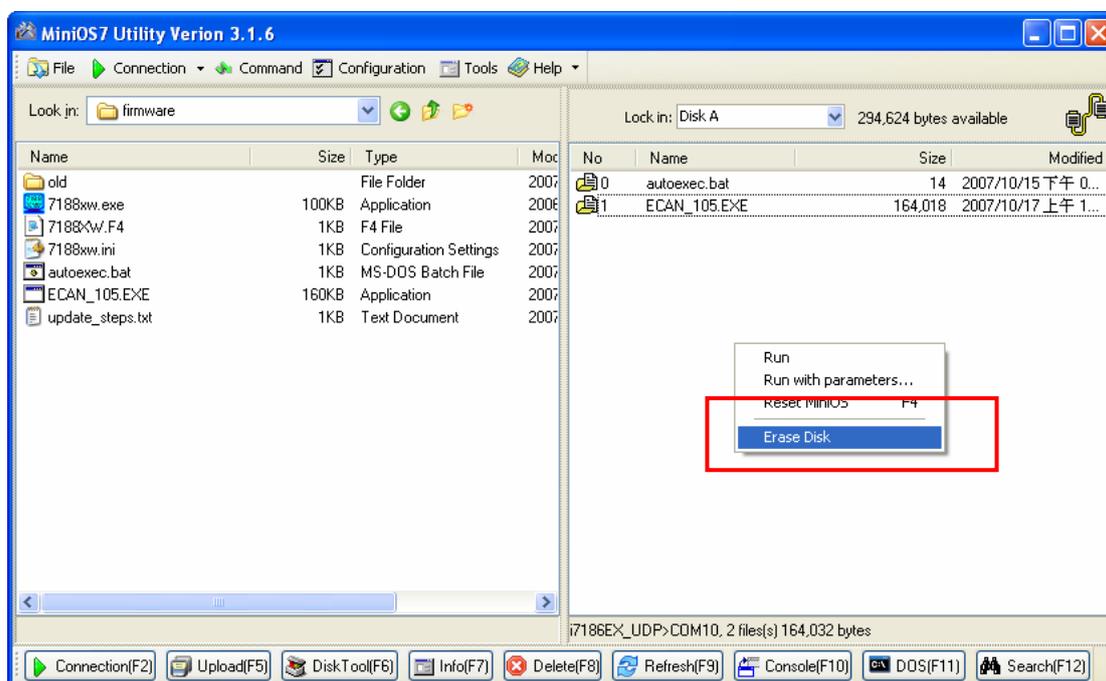

7. Then a confirm window will be pop-up. Click the “Yes” button and go on.
8. Click the “Look in” pull down menu to the location of i-7540D firmware.
9. Drag and drop the files from the left window to right hand window.

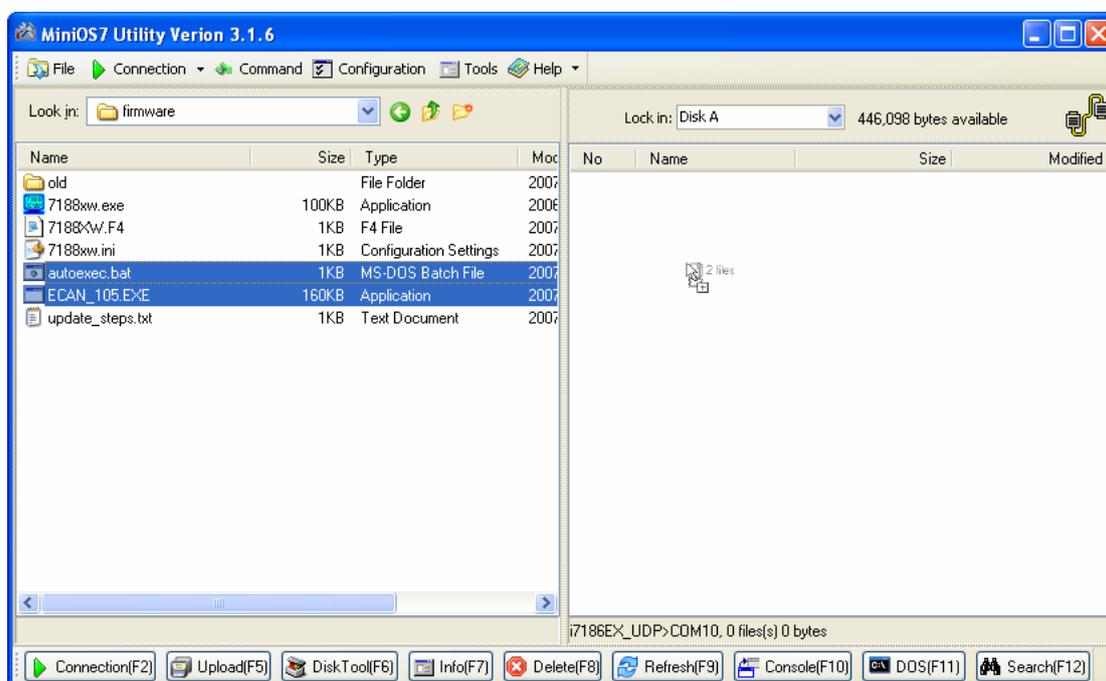

10. Reboot the i-7540D and make sure the i-7540D is in run mode. Then the 5-digits 7-SEG LED will show system information.

Download MiniOS7 Utility:

MiniOS7 Utility:

8000cd:\Napdos\MiniOS7\utility\MiniOS7_utility

<http://www.icpdas.com/download/minios7.htm>