

# GW-2492M/GW-2493M Quick Start

v1.0, December 2021

### **Packing List**

In addition to this guide, the package includes the following items:



<u>GW-2492/3M</u>

Screw Driver (1C016)

#### Resources


#### **Technical Support**

service@icpdas.com www.icpdas.com


• For Desktop Web

How to search for drivers, manuals and spec information on ICP DAS website.

• For Mobile Web

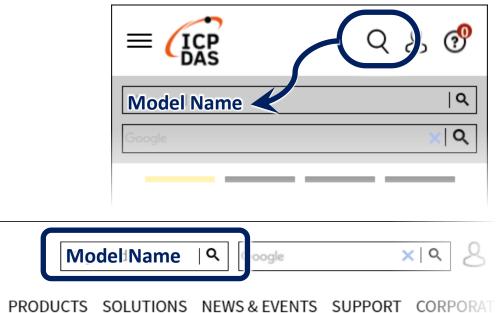

## **LED Indicators**

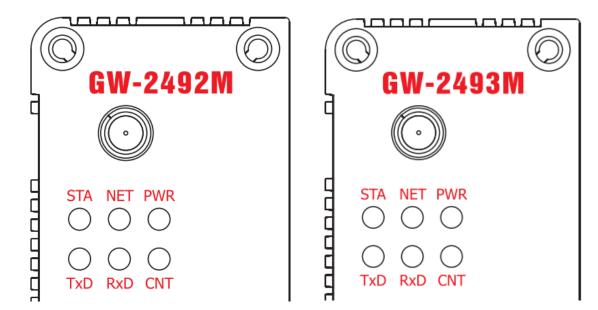

LED Name	GW-2492M/GW-2493M Status	LED Status
ALL LEDs	FW Updating Mode	LED will be twinkled
		sequentially.
	FW Initial Mode	LED will be twinkled
		per 500ms.
PWR	Power On	On
(Module)	Power Failure	Off
NET	Connected by least one client	On
(BACnet/IP)	No clients connect	Blink per 200 ms
STA	Communication OK	On
(BACnet/IP)	Communication Failure	Blink per 200 ms
CNT	Connect to least one device	On
(Modbus)	No devices are connected	Blink per 200 ms
RxD	Data reception	On
(Modbus)	No Data reception	Off
TxD	Data transmission	On
(Modbus)	No Data reception	Off

### **Network Connection**

GW-2492M/GW-2493M Factory Defaults & Initial Mode				
	IP	192.168.255.1	Please follow your	
Network	Mask	255.255.0.0	case to modify the	
	Gateway	192.168.0.1	network settings.	