



PIR-234(L)-E Series Quick Start

v1.0, May 2023

Packing List

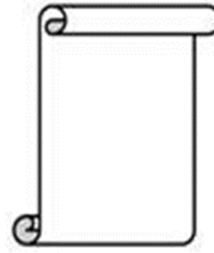
In addition to this guide, the package includes the following items:



PIR-234(L) Series
Module



Mounting Plate



Quick Start



M4x12 Drywall
Screws*2

Resources

Technical Support

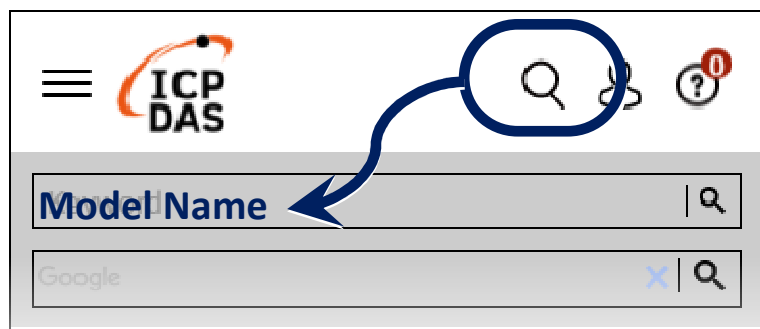
service@icpdas.com

www.icpdas.com



How to search for drivers, manuals and spec information on ICP DAS website.




- For Mobile Web



- For Desktop Web



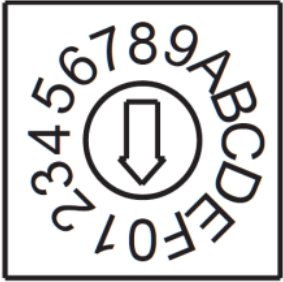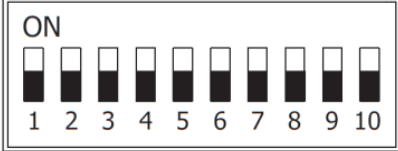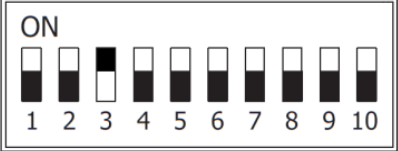Address Settings via Hardware Configuration

		When DIP3=OFF Rotary Switch 0 ~ F for Node Addresses 160~175 (Low Node Address)
		When DIP3=ON Rotary Switch 0 ~ F for Node Addresses 176~191 (High Node Address)

DIP Switch Settings

SW1	ON	OFF
10	ON Time Control	
9		
8		
7	DO Control	
6		
5		
4	INIT	Run
3	High Node	Low Node
2	SW Config	HW Config
1	DCON	Modbus
4	Enable PIR	Disable PIR
3		
2		
1		

Function			SW1		
DO Control	DO0	DO1	5	6	7
	PIR	PIR	OFF	OFF	OFF
	PIR	TEM	ON	OFF	OFF
	TEM	PIR	OFF	ON	OFF
	TEM	TEM	ON	ON	OFF
	PIR	CMD	OFF	OFF	ON
	TEM	CMD	ON	OFF	ON
	CMD	PIR	OFF	ON	ON
	CMD	CMD	ON	ON	ON

ON Time Control (Sec.)	Time	8	9	10
	6	OFF	OFF	OFF
	16	OFF	OFF	ON
	33	OFF	ON	OFF
	66	OFF	ON	ON
	131	ON	OFF	OFF
	262	ON	OFF	ON
	524	ON	ON	OFF
	1049	ON	ON	ON

Wire Connections

