

# ACS Manager Quick Start

---

## Table of contents

1.Set up MySQL web server by XAMPP.....	1
1.1    Install XAMPP .....	1
1.2    Start Apache and MySQL service .....	1
1.3    Open phpMyAdmin and Add user account .....	2
2.Configure Reader with ACS Manager and Reader Sync.....	4
2.1    System configuration.....	4
2.1.1    Set up MySQL Server connection .....	4
2.1.2    Add operator account.....	6
2.1.3    Delete operator account.....	7
2.2    Login/Logout.....	7
2.2.1    Login.....	7
2.2.2    Logout.....	8
2.3    Reader configuration and elevator control .....	9
2.3.1    Add reader and turn on elevator control .....	9
2.3.2    Disable reader.....	10
2.4    Edit group.....	11
2.4.1    Add group.....	11
2.4.2    Edit group member and floor setting of elevator.....	11
2.4.3    Delete group .....	12
2.5    Edit card information.....	13
2.5.1    Add card UID .....	13
2.5.2    Edit card information.....	15
2.5.3    Delete card UID.....	16
2.5.4    Look up access record .....	17
2.5.5    Delete card number Automatically.....	17
2.6    Look up card information.....	17
2.7    Contact.....	21
2.7.1    Set the sender.....	21

---

---

2.7.2	Set the recipient .....	22
2.7.3	Send Email Test.....	23
2.7.4	Save .....	24
2.7.5	Enable alarm letter.....	25
2.8	Passwrod.....	25
2.8.1	Set password.....	26
2.8.2	Remove password.....	27
2.9	Voice upload.....	29
2.9.1	Customize the reader's voice .....	29
2.9.2	Upload Voice File.....	30
2.10	Language/Exit.....	32
2.10.1	Langrage .....	32
2.10.2	Exit .....	32

# 1. Set up MySQL web server by XAMPP


## 1.1 Install XAMPP

Step1. Click the URL below and download the installation package.

<https://www.apachefriends.org/index.html>

Step2. Install


Choose the service we need. (Apache and MySQL must be chosen)

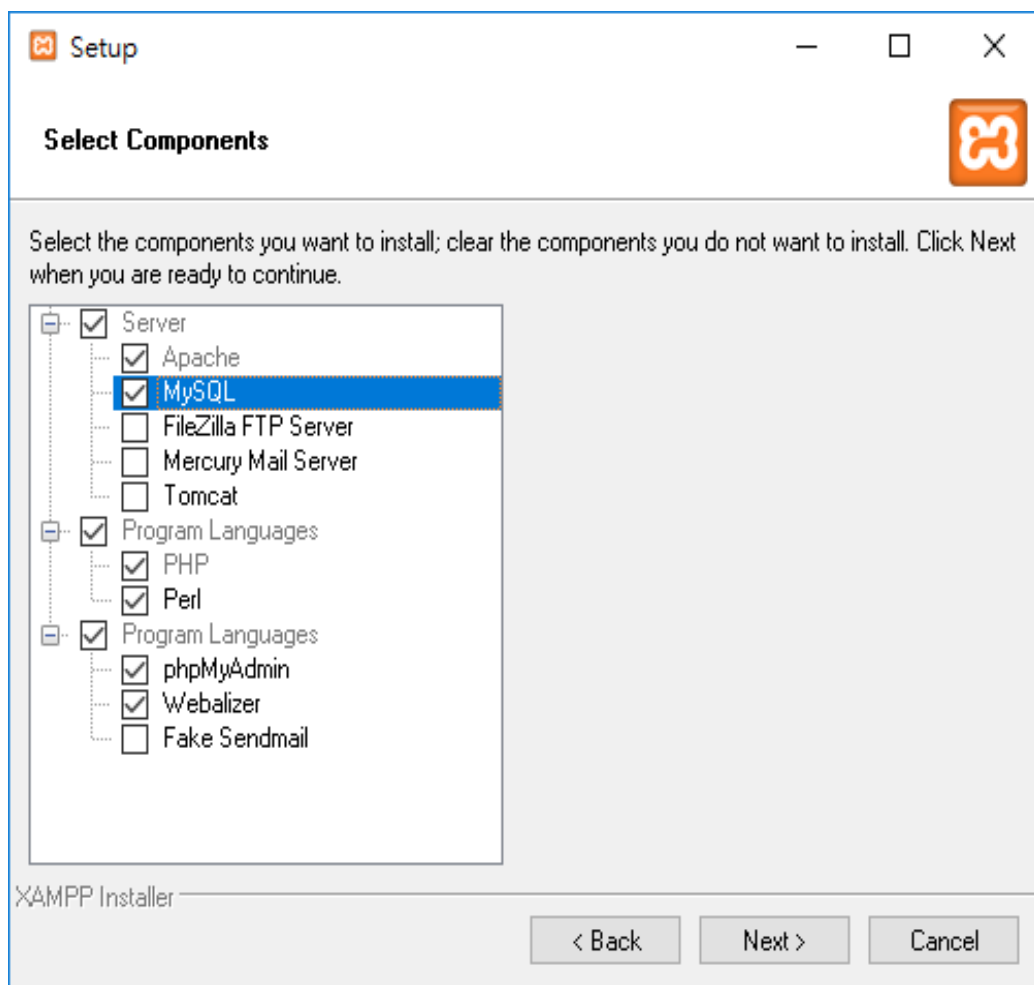

## 1.2 Start Apache and MySQL service


Step1. Open XAMPP Control Panel. (default path: c:\xampp\xampp-control.exe)

Step2. Click start to begin Apache and MySQL Web service.

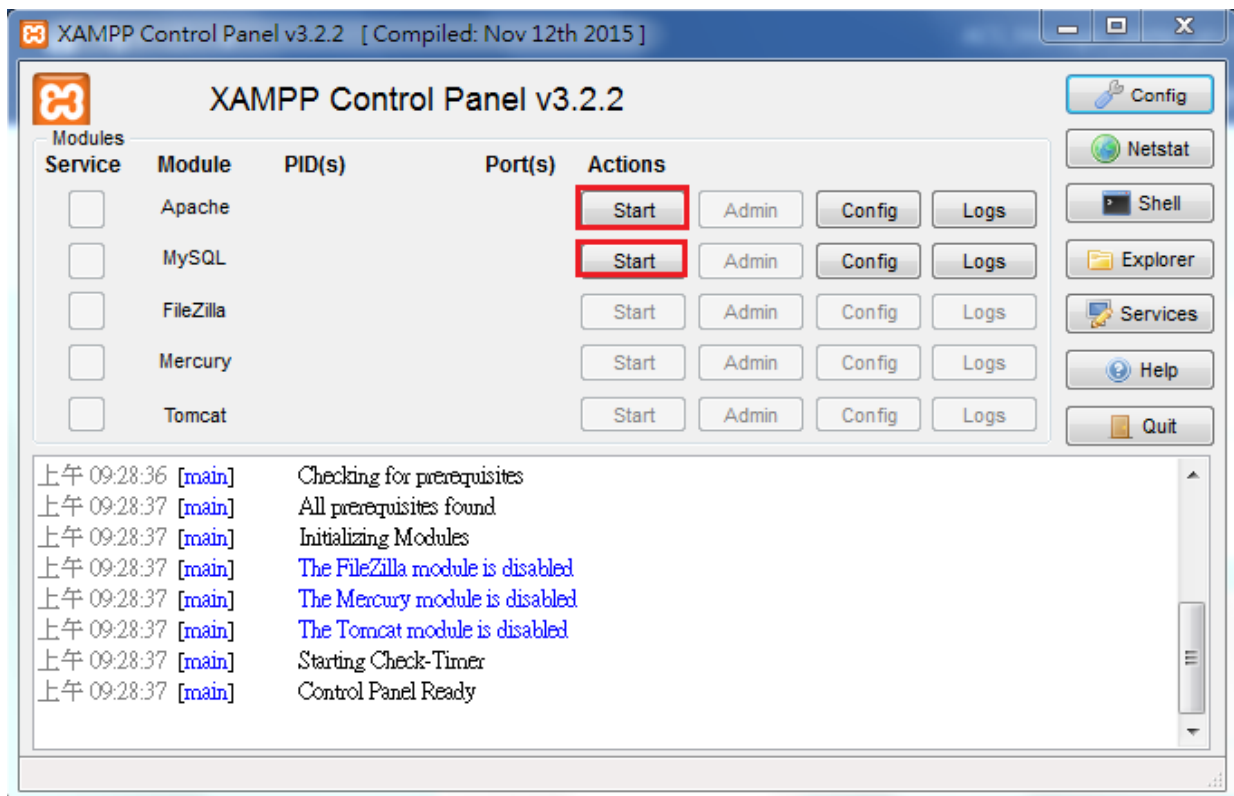


### 1.3 Open phpMyAdmin and add user account


Step1. Click MySQL Admin button to open phpMyAdmin.

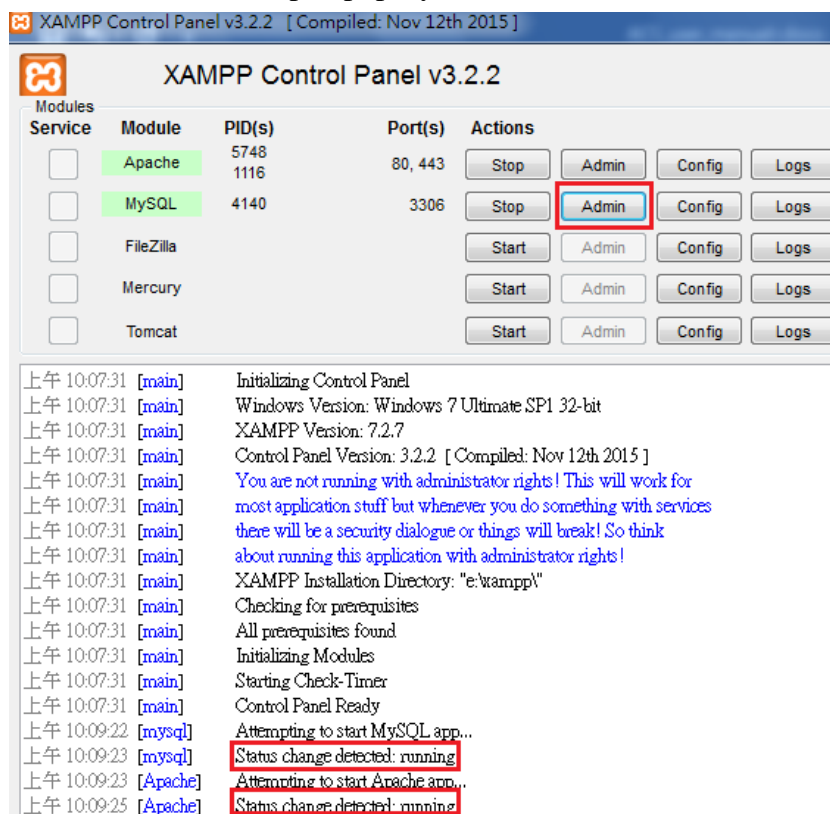

Step2. Click user accounts to input user accounts overview page and then click the button below to execute the command which is add user account.

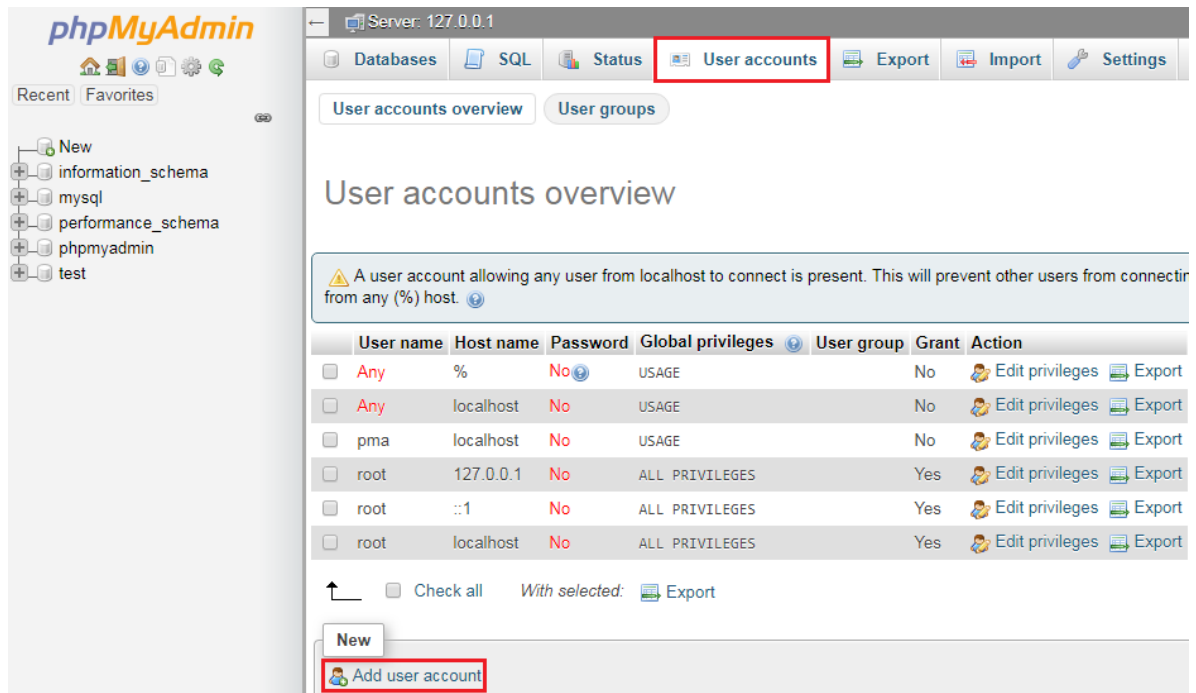

Step3. Input user name, password, and choose localhost for the host name. Check "Create database with same name and grant all privileges".

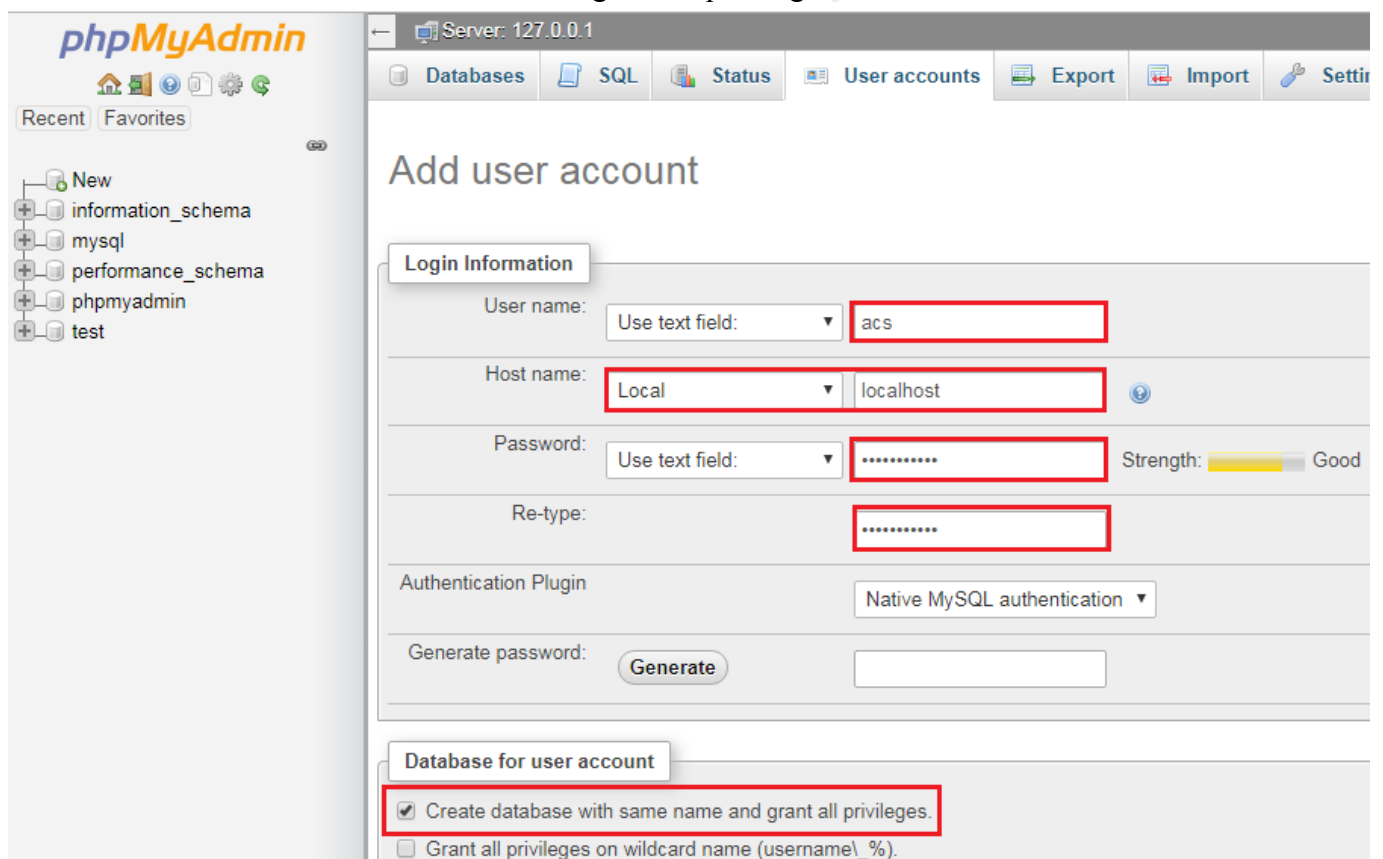

Step4.Click Go to execute.

## 2. Configure Reader with ACS Manager and Reader Sync


Open ACSManager.exe



### 2.1 System configuration

#### 2.1.1 Set up My SQL Server connection

Click System button then input MySQL Server IP, ID, password, and the name of database. Click Save button and it will display a message box like the picture below. If the content of message box is “Connecting to database fail.”, it means there are some problems of database connection should be solved.

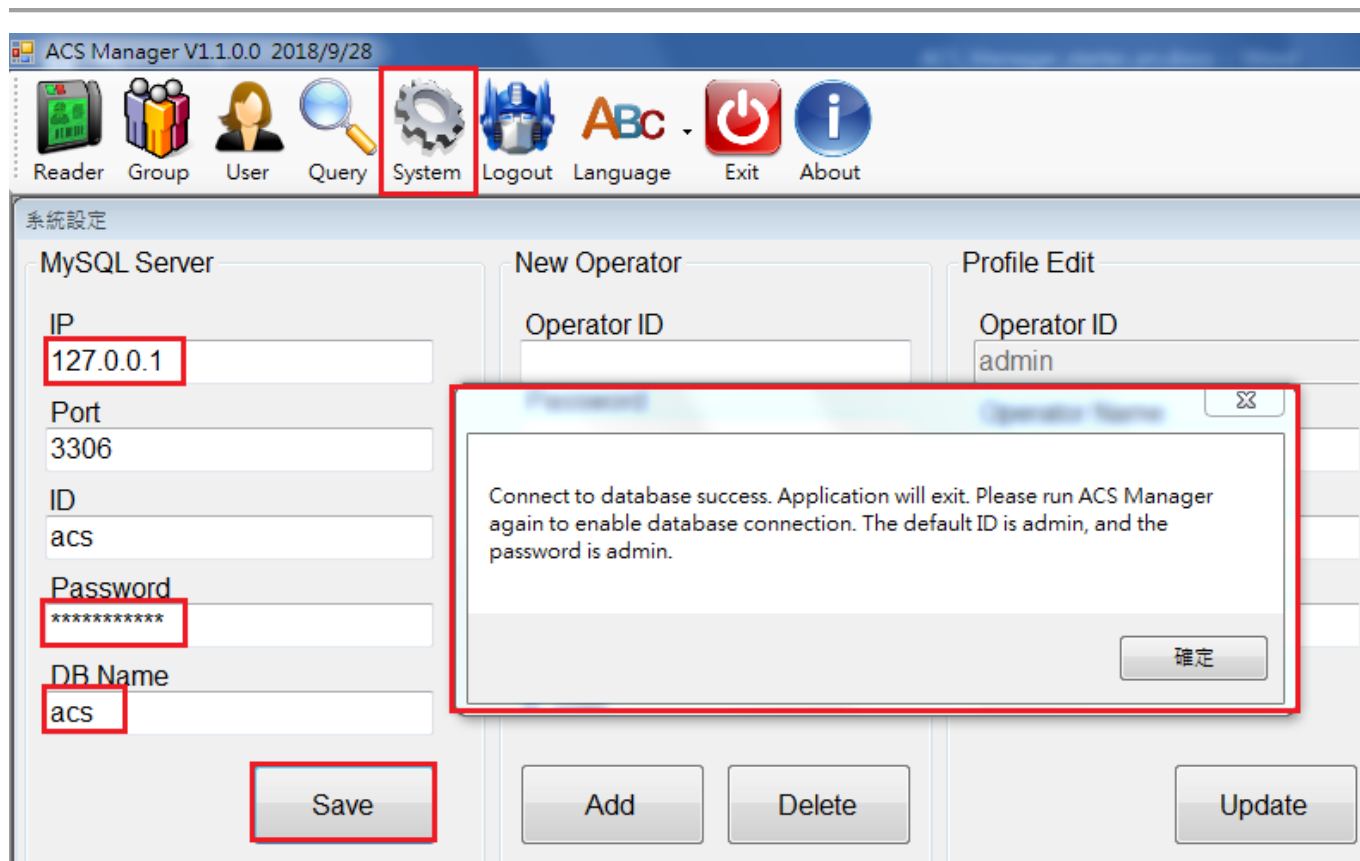

After connecting to database successfully, there will be 7 new tables added to database and any change of reader information will be recorded in these tables. User can check record by opening phpMyAdmin.

The information recorded by tables are listed below:

tb\_group->record member of each group

tb\_groupname->record group name


tb\_operator->record ACS operator account and permission

tb\_reader->record reader information

tb\_readercard->record card ID saved in reader


tb\_record->pass record

rb\_user->record users and their card ID

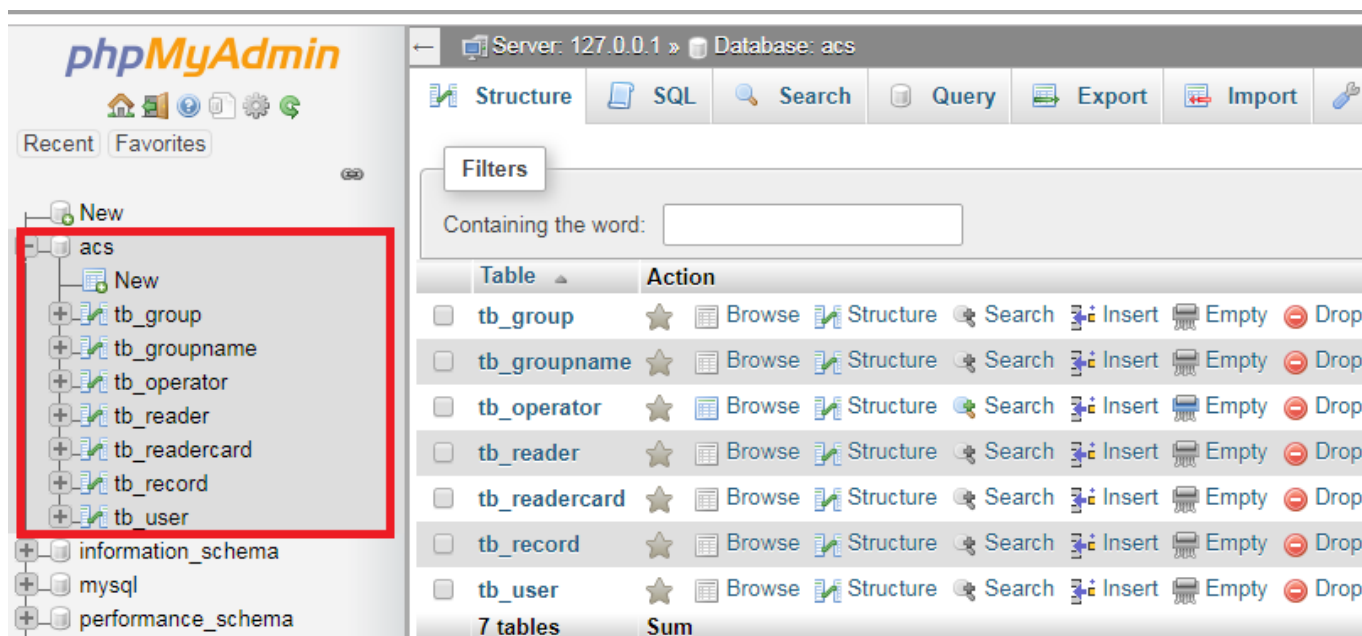


### 2.1.2 Add operator account

Input necessary information in the middle area and click add button . If a message box written success display, it means adding operator account was finished.

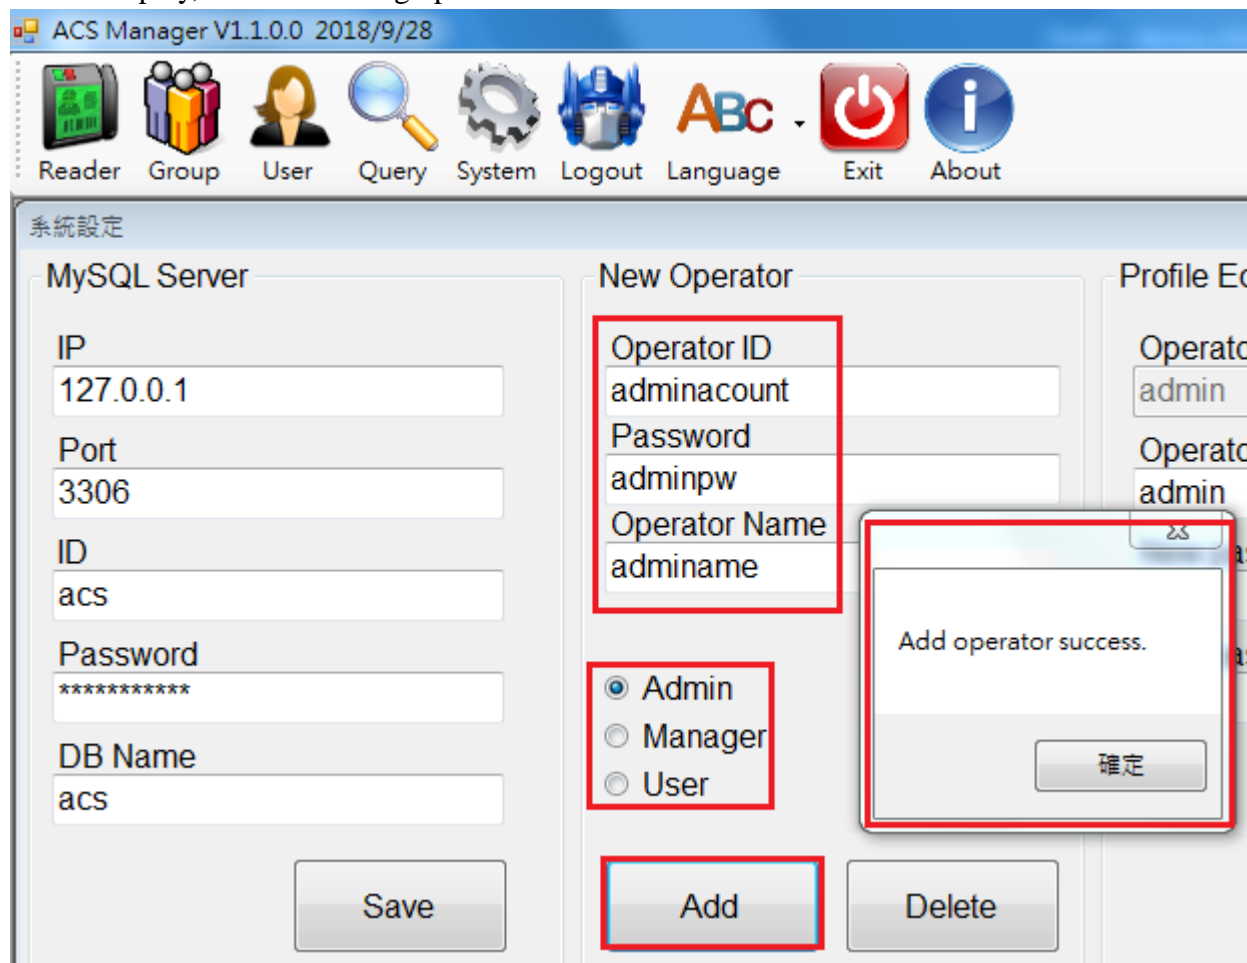

### 2.1.3 Delete operator account


Input necessary information in the middle area and click Delete button . If a message box display as below, it means deleting operator account was finished.

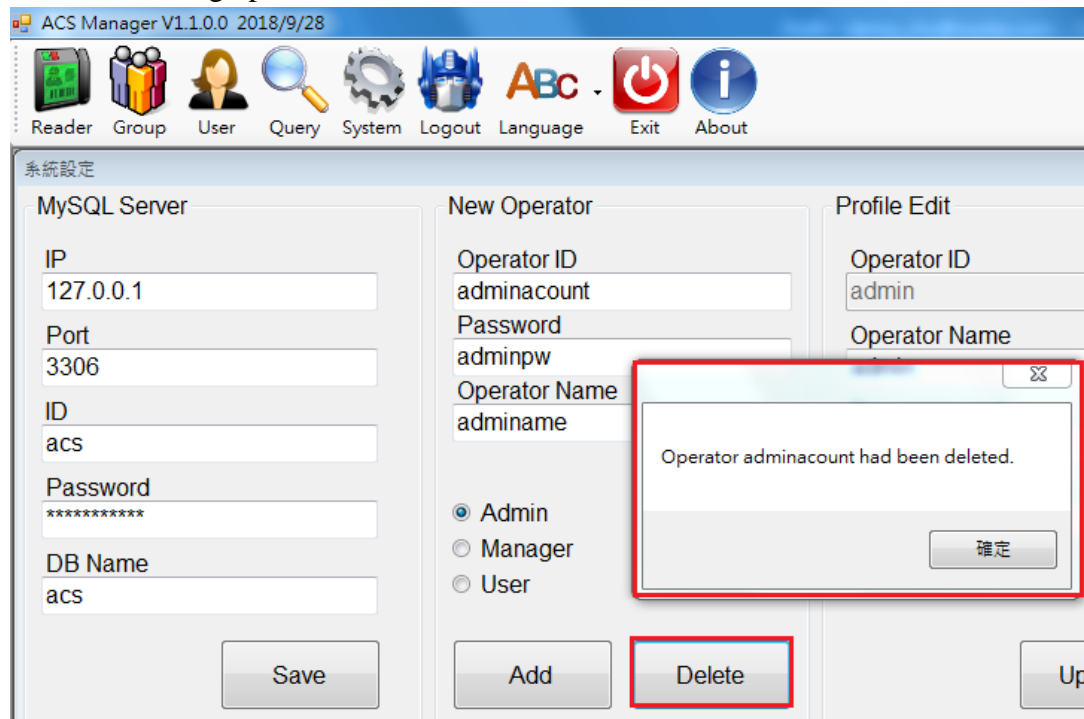

## 2.2 Login/Logout

### 2.2.1 Login

Restart and click Login button. It will fill in Operator ID and password automatically. The default ID and password are admin. Please change password after login.

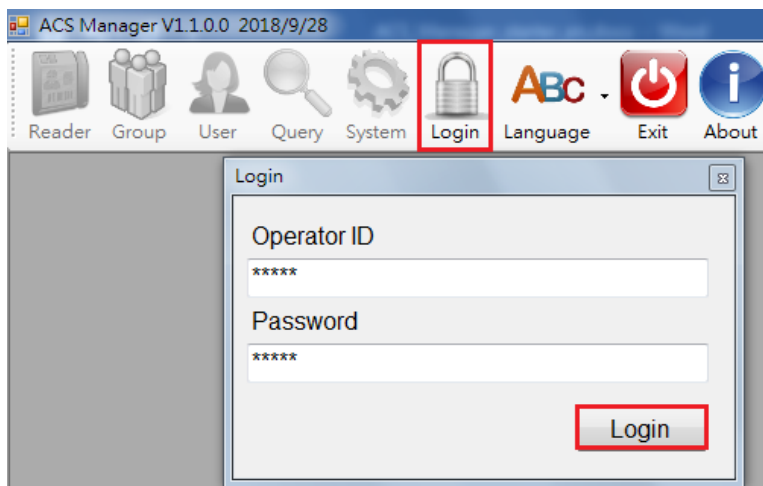

Permission:


Admin: Can change any configuration.



Manager: Only can change user information and look up record.



User: Only can look up record.

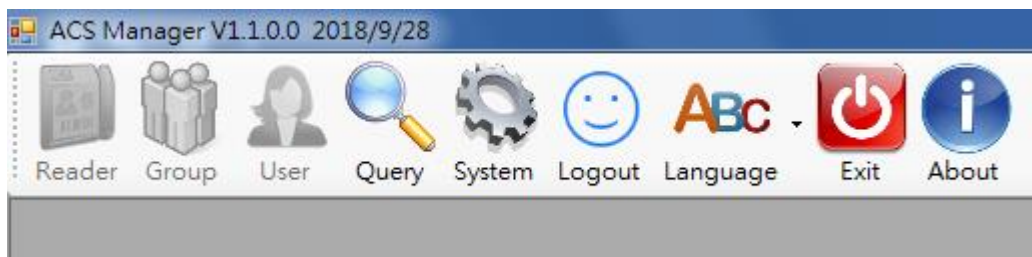

## 2.2.2 Logout


Click Logout button.




## 2.3 Reader configuration and elevator control

### 2.3.1 Add reader and turn on elevator control

Step1. Click Reader button and green plus button in the right side. Input reader name and click OK. The reader name just added will be listed on the left side.

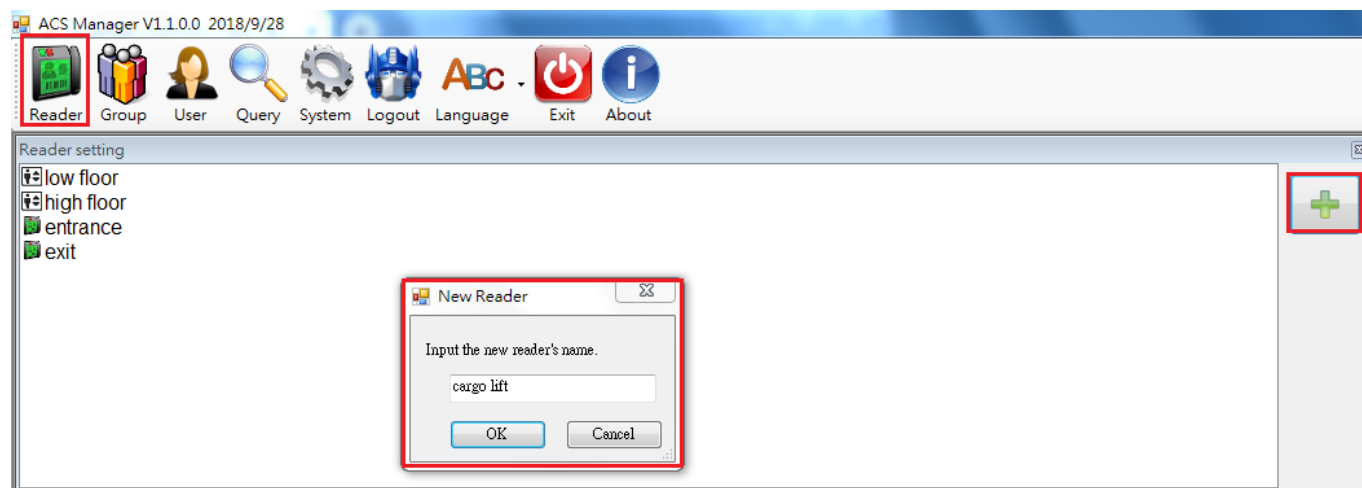

Step2. Select the new added reader in left side and check enable function. Input IP address and port. Users can turn on elevator control function by checking Elevator Control, inputting floor according to DO Channel Description, saving changes, and setting up IP address of elevator I/O module on the reader website. Users should access reader website by reader IP address and the default password is Admin.

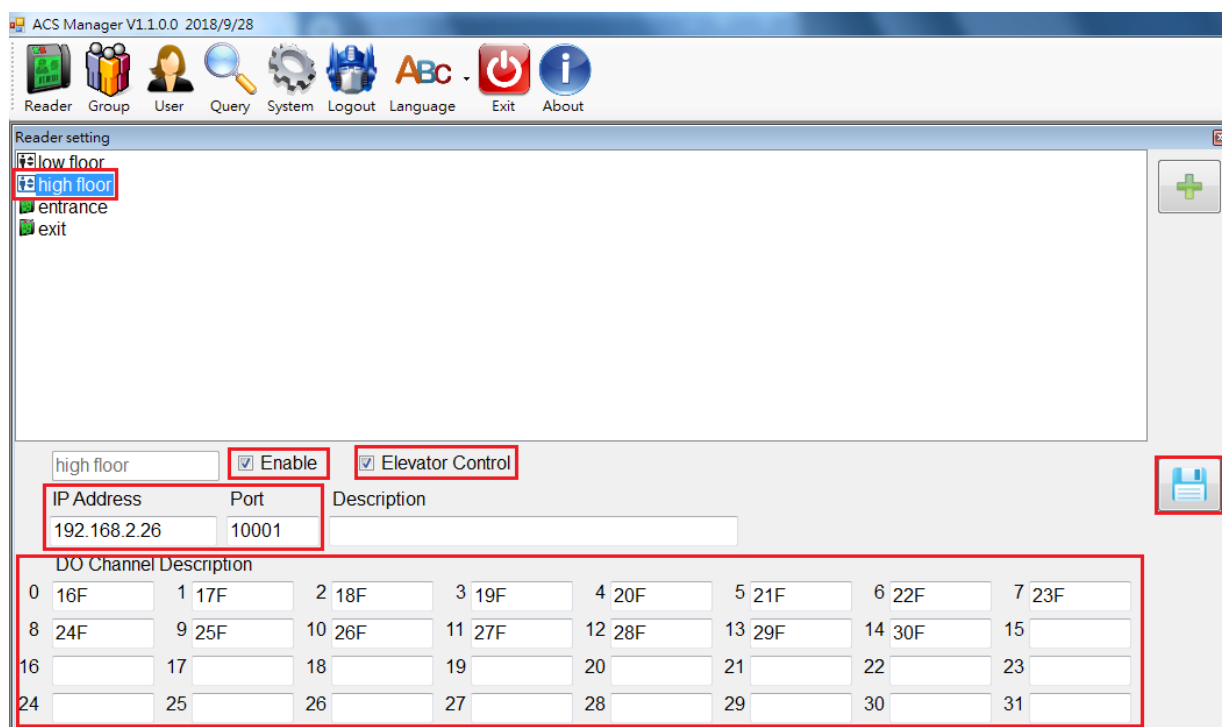

ICPDAS Access Card System

English

IP Config

Reader Config

RTC Config

Change Password

Logout

**IP Config**

**Reader**

IP: 192 168 2 20

Mask: 255 255 0 0

Gateway: 192 168 2 254

MAC: 00:0D:E0:C0:00:42

FW Ver.: v2.73

**Camera control I/O**

IP: Disable 192 168 1 1

**Elevator control I/O**

IP1: 01-16F Enable 192 168 2 1

IP2: 17-32F Disable 192 168 2 2

Setting

### 2.3.2 Disable reader

Select the reader to be disabled in left side and uncheck enable function. Then click the save button to save the changes.

ACS Manager V1.1.0.0 2018/9/28

Reader Group User Query System Logout Language Exit About

**Reader setting**

low floor

high floor

entrance

exit

exit

☒ Enable ☐ Elevator Control

IP Address Port Description

10001


**DO Channel Description**

0	1	2	3	4	5	6	7
8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23
24	25	26	27	28	29	30	31

## 2.4 Edit group


### 2.4.1 Add group

Click Group button, click green plus button, input group name, and click OK. The group just added will be listed on the left side.

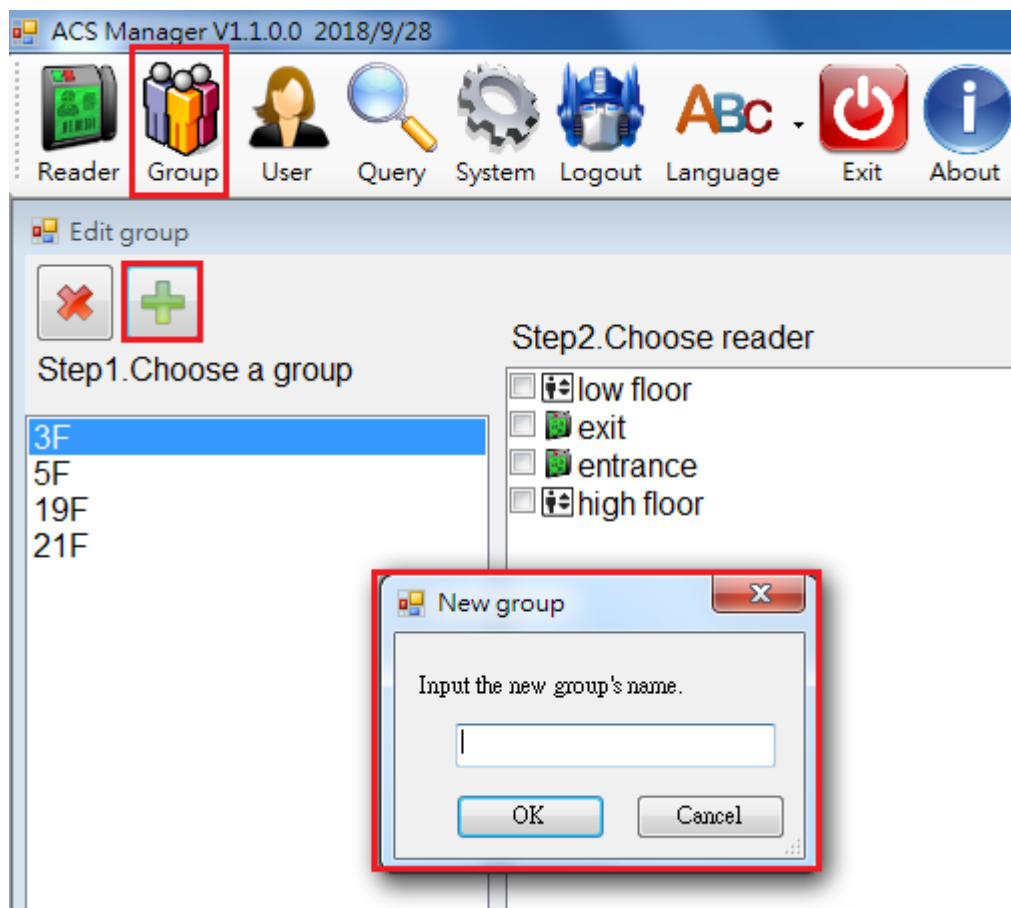


### 2.4.2 Edit group member and floor setting of elevators

Select the group to be changed on the left side and check the reader to be added on the right side. Or uncheck the reader to be removed from group.

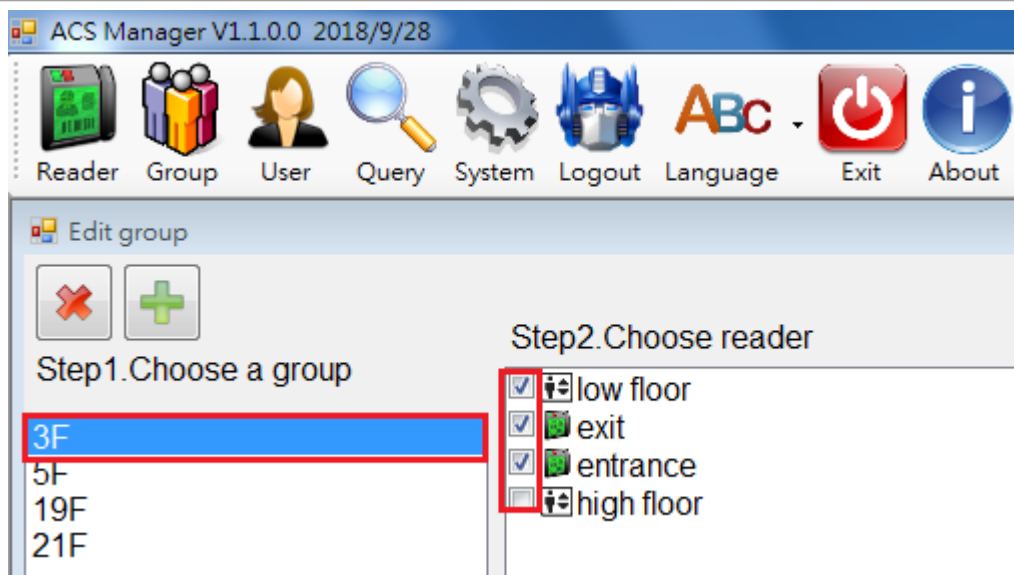


Select the group to be changed on the left side, select the reader which has elevator access permission on the right side, and check the floor to open access below.

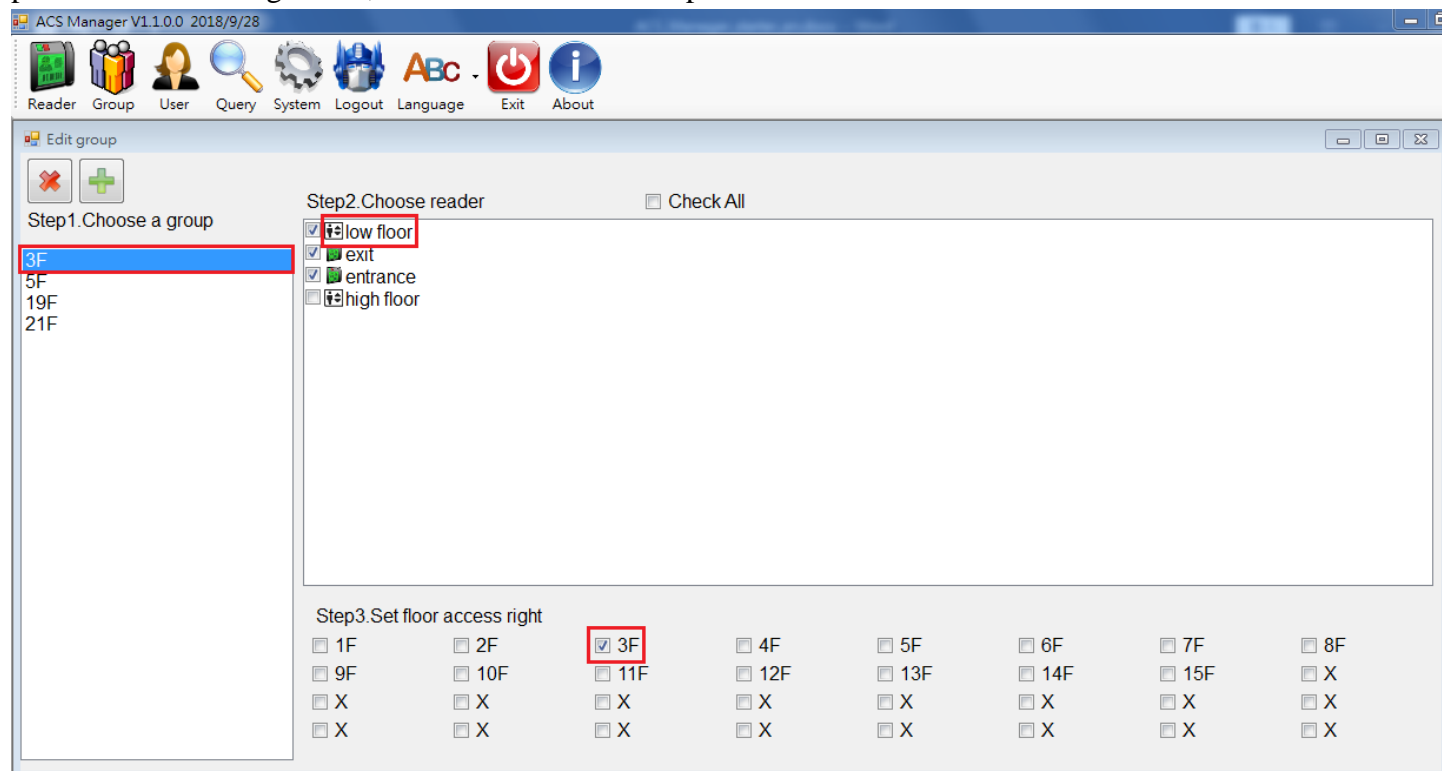

### 2.4.3 Delete group


Select the group to be deleted on the left side and click the red x button. A double check message box will be displayed. Make sure the group name to be deleted is correct and click OK.

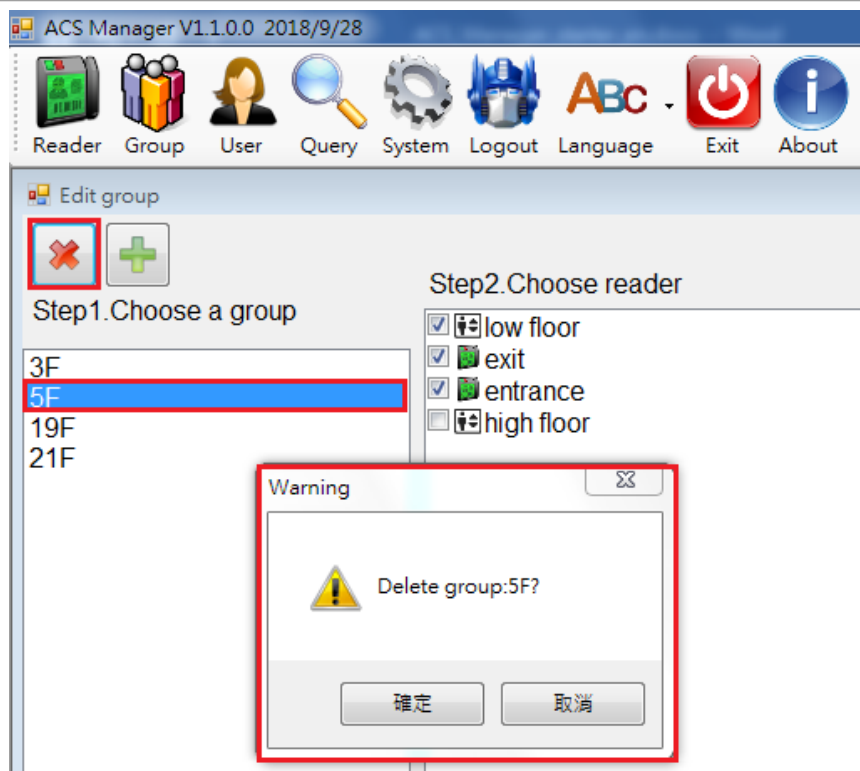

## 2.5 Edit card information

### 2.5.1 Add card UID

Step1. Click user button, click Add Card UID, and input Card UID.

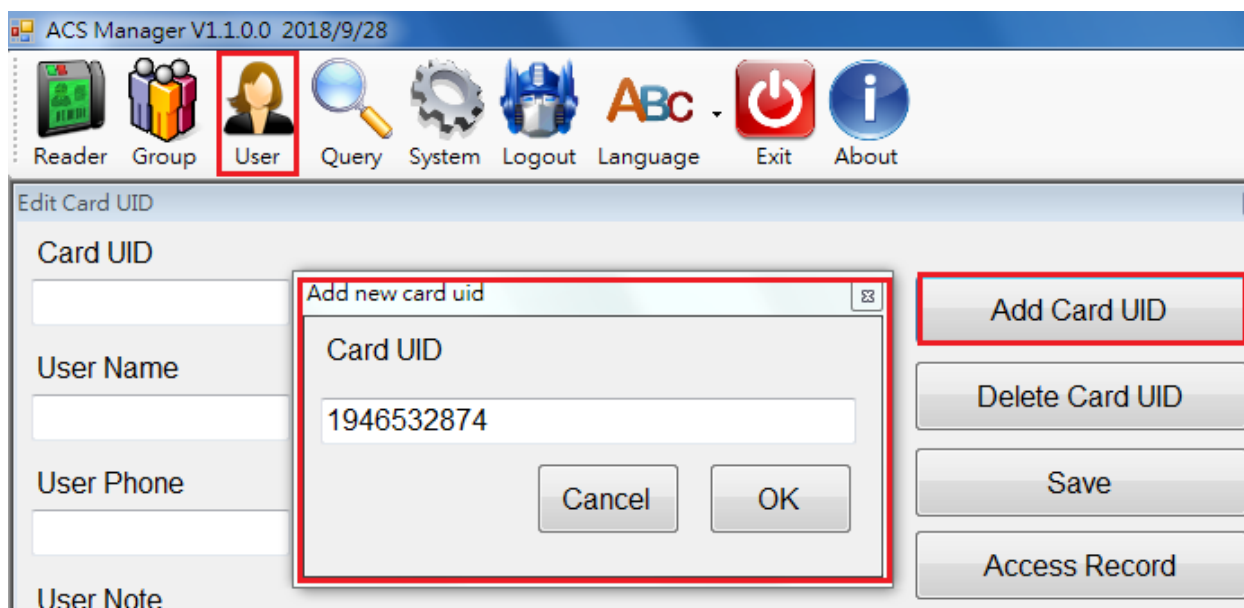

Step2. After click OK, Card UID just added will fill in field automatically. User should fill in other fields and select proper Voice Code and group.

ACS Manager V1.1.0.0 2018/9/28

Reader Group User Query System Logout Language Exit About

Edit Card UID

Card UID  
1946532874

Add Card UID

Delete Card UID

Save

Access Record

User Name User ID User Tag  
Chole Chan 101951 PM

User Phone User Mail

User Note

Voice Code  
01 Welcome

Group  
☐ 3F  
☐ 5F  
☒ 19F  
☐ 21F

Step3. Click the Save button on the right side. A message box asking user to execute reader synchronization program will be displayed. Click OK and execute ReaderSync.exe. If adding user card UID succeeded, it will seem like below.

ACS Manager V1.1.0.0 2018/9/28

Reader Group User Query System Logout Language Exit About

Edit Card UID

Card UID  
1946532874

Add Card UID

Delete Card UID

Save

Access Record

User Name User ID User Tag  
Chole Chan 101951 PM

User Phone User Mail


User Note

Voice Code  
01 Welcome

Group  
☐ 3F  
☐ 5F  
☒ 19F  
☐ 21F


Update card UID success. Please run ReaderSync to sync the readers.

確定

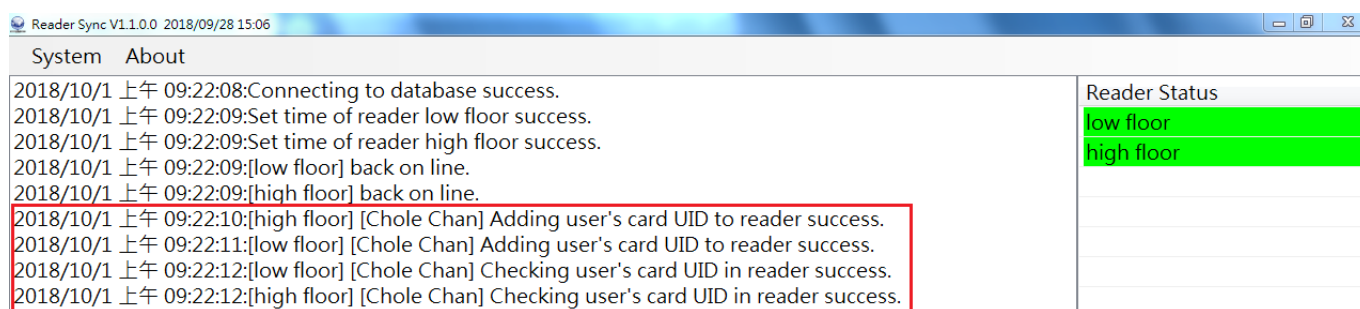

## 2.5.2 Edit card information



Step1. Input the Card UID and other fields will be automatically filled up by the information has been saved. User can edit and update information.

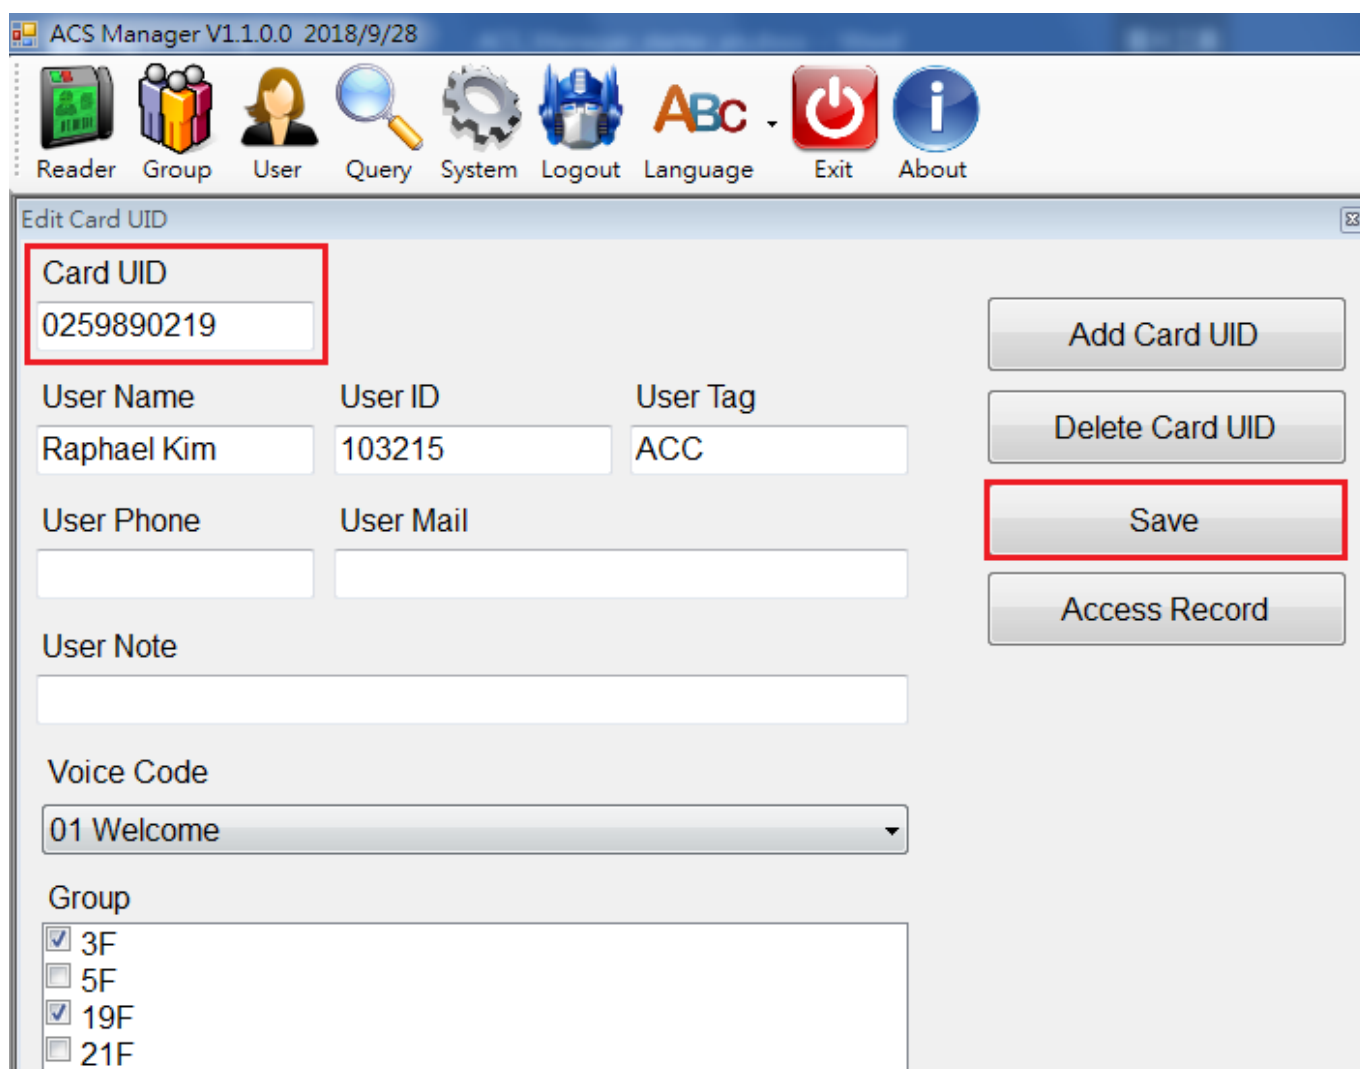

Step2. Click the Save button on the right side. A message box asking user to execute reader synchronization program will be displayed. Click OK and execute ReaderSync.exe.


### 2.5.3 Delete card UID

Input the Card UID to be deleted and other fields will be automatically filled up by the information has been saved. Click Delete Card UID on the right side. A message box asking user to execute reader synchronization program will be displayed. Click OK and execute ReaderSync.exe. If deleting user card UID succeeded, it will seem like below.

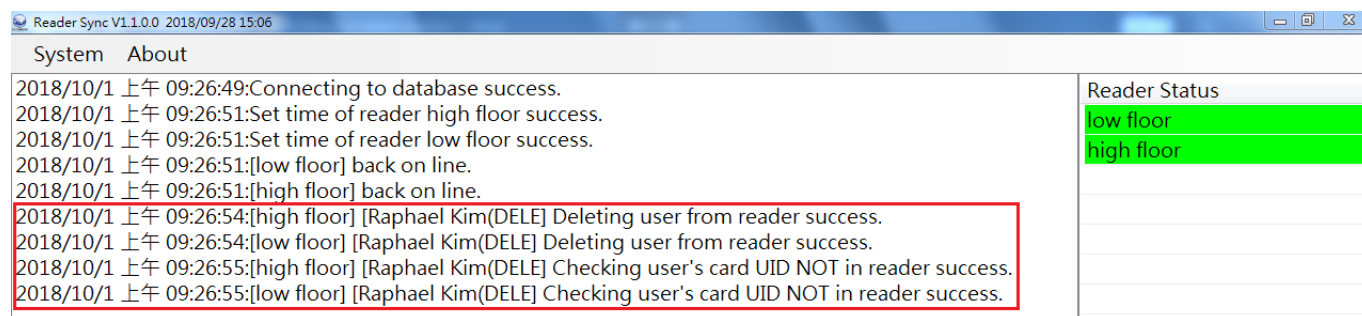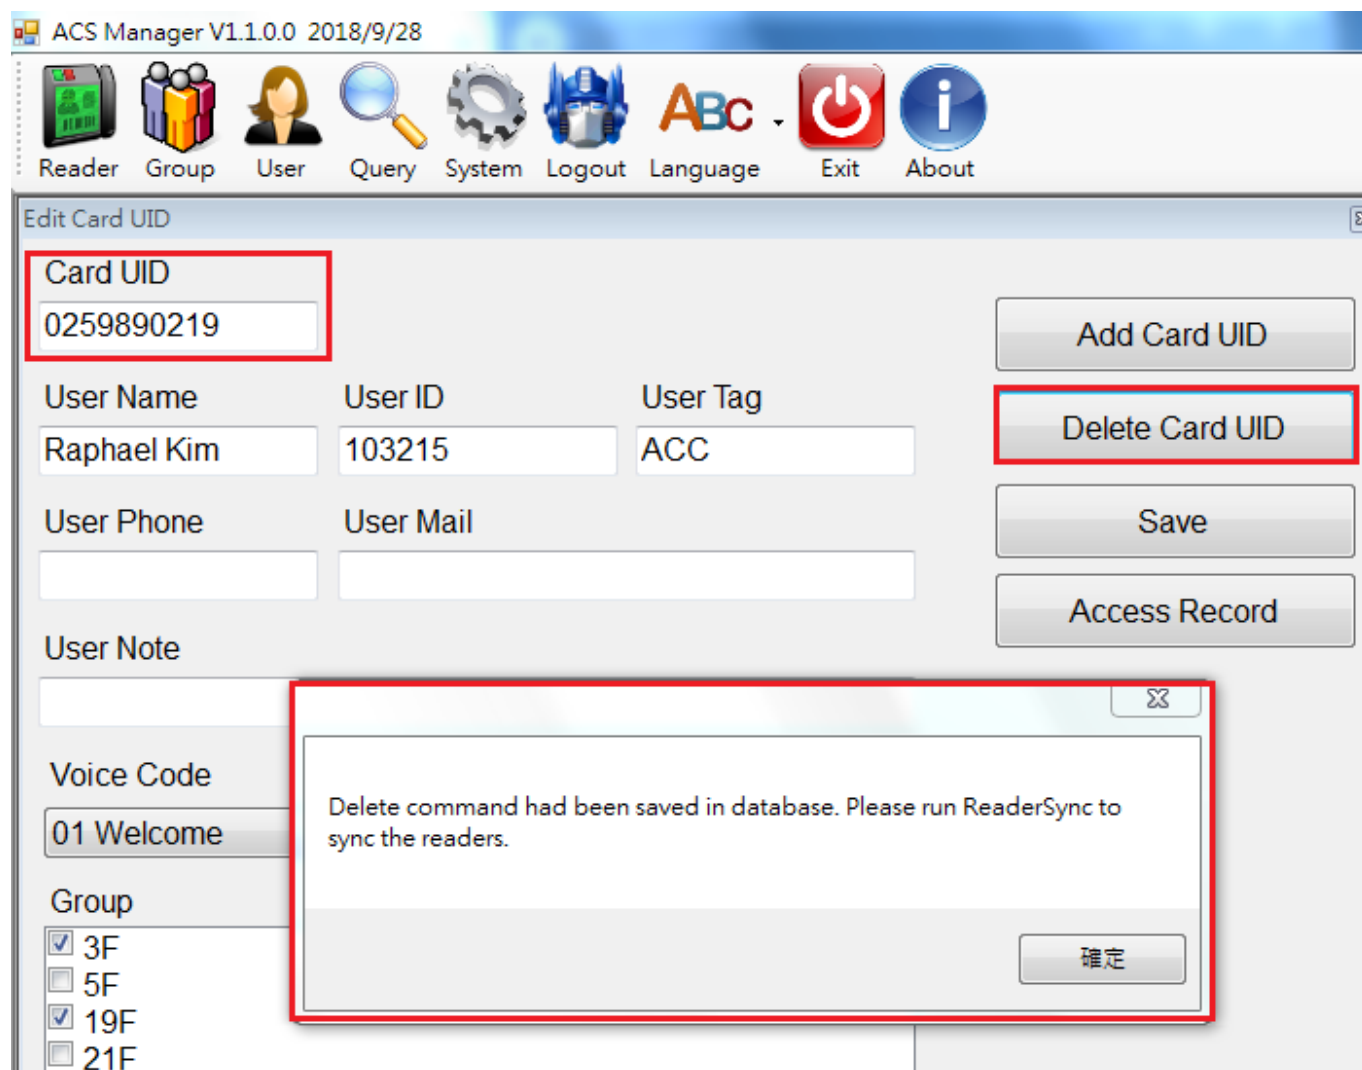

## 2.5.4 Look up access record


Input the Card UID to be looked up and other fields will be automatically filled up by the information has been saved. Click Access Record on the right side. User can choose to check the record By Date or List All.

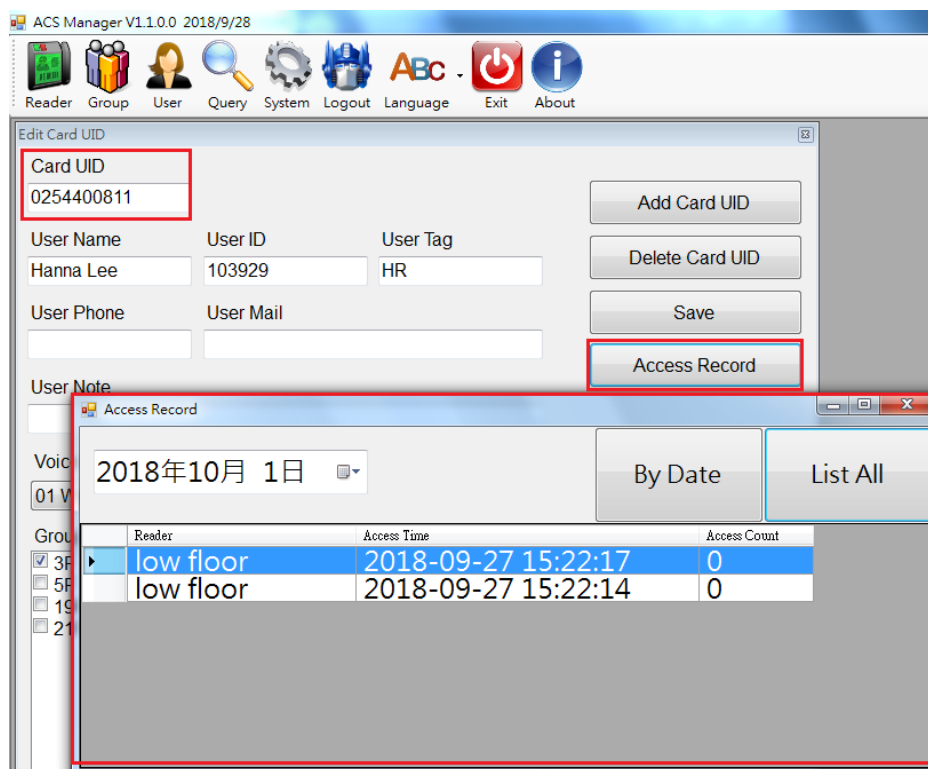

## 2.5.5 Delete card number Automatically


ACS Manager provides automatic card deletion function; if the card has not been swiped for a long time, ACS Manager will automatically delete the card number from the card reader.

Set the number of days to delete the card number in the system settings. If the card in the database does not have a swipe record after the set number of days, the card will be deleted from all card readers.

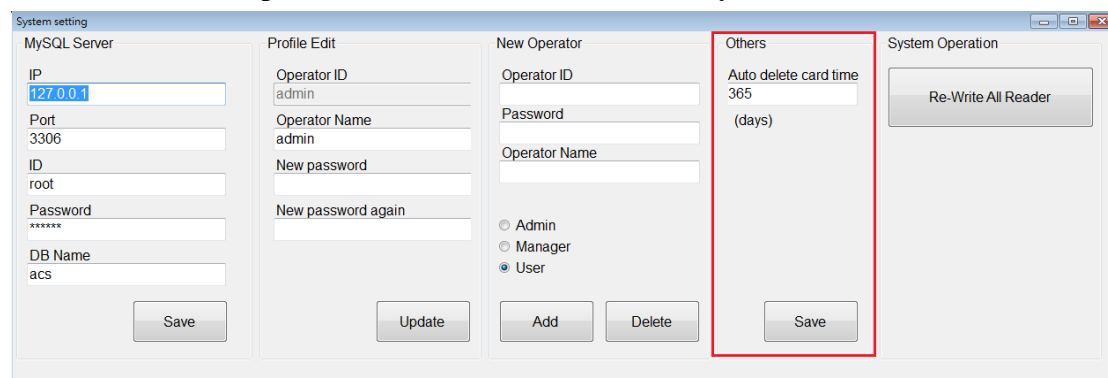


## 2.6 Look up card information


Click Query button on the top and on the right side one. All the user card information recorded will be displayed.

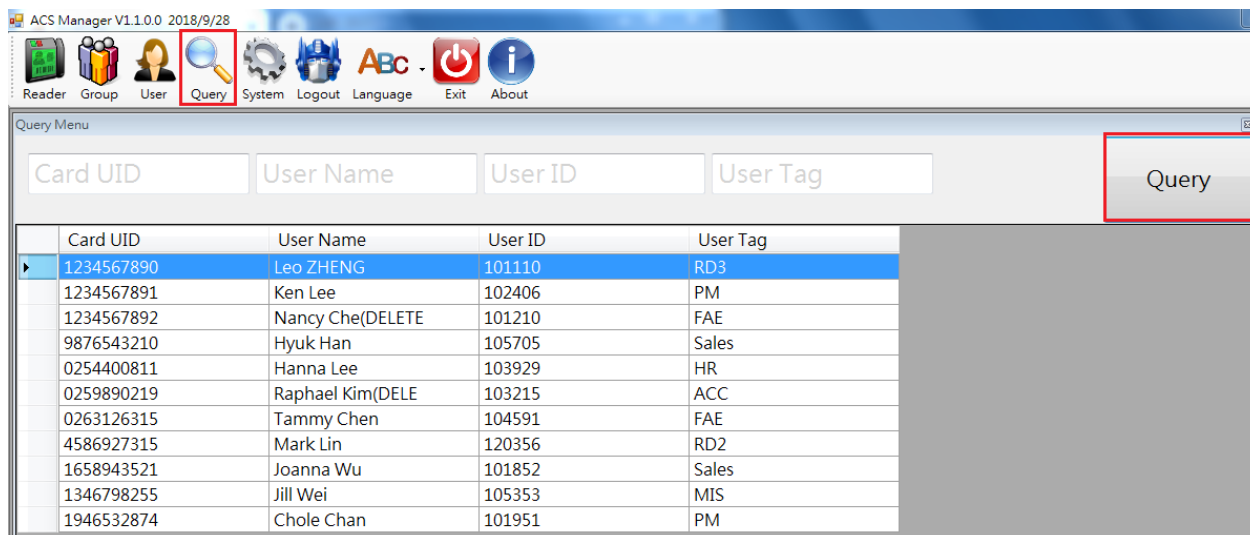

User can also input any one of the fields and click Query button to look up for specific user.

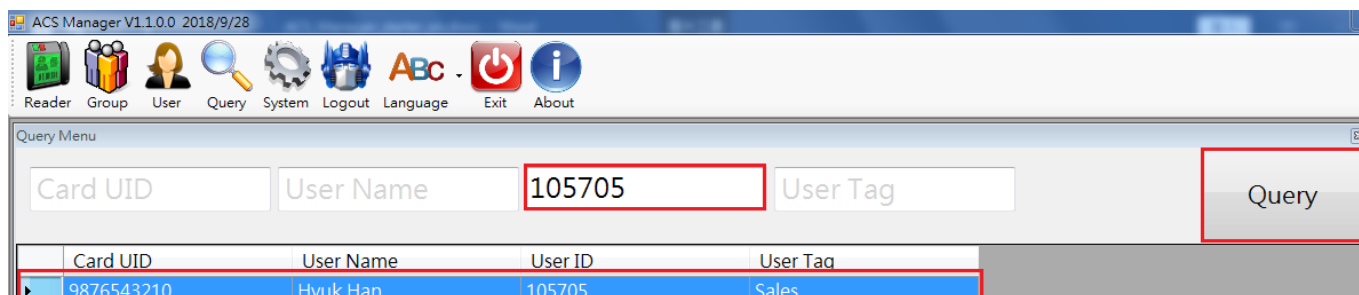

There are three function buttons on the bottom. The one on the far left can edit the selected card information. The middle one can check access record for specific user card. The one on the far right can list all the access denied record and add these Card UIDs into database

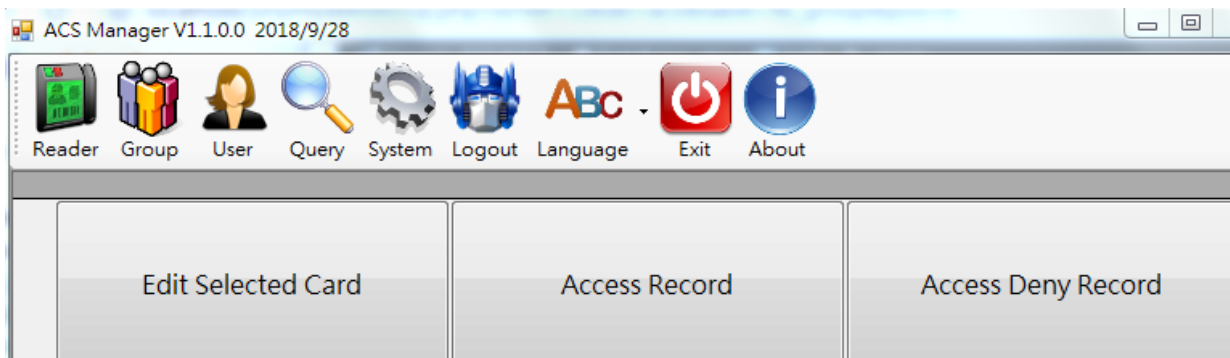

ACS Manager V1.1.0.0 2018/9/28

Reader

Group

User

Query

System

Logout

Language

Exit

About

Query Menu

Card UID

User Name

User ID

Card UID	User Name	User ID
1234567890	Leo ZHENG	101110
1234567891	Ken Lee	102406
1234567892	Nancy Che(DELETE	101210
9876543210	Hyuk Han	105705
0254400811	Hanna Lee	103929
0259890219	Raphael Kim(DELE	103215
0263126315	Tammy Chen	104591
4586927315	Mark Lin	120356
1658943521	Joanna Wu	101852
1346798255	Jill Wei	105353
1946532874	Chole Chan	101951

Edit Selected Card

Edit Card UID

Card UID

0263126315

User Name

Tammy Chen

User ID

104591

User Tag

FAE

User Phone

User Mail

User Note

Voice Code

01 Welcome

Group

☐ 3F

☒ 5F

☐ 19F

☐ 21F

Delete Card

Save

Access Reco

ACS Manager V1.1.0.0 2018/9/28

Reader Group User Query System Logout Language Exit About

Query Menu

Card UID User Name User ID User Tag

Card UID	User Name	User ID	User Tag
1234567890	Leo ZHENG	101110	RD3
1234567891	Ken Lee	102406	PM
1234567892	Nancy Che(DELETE)	101210	FAE
9876543210	Hyuk Han	105705	Sales
0254400811	Hanna Lee	103929	HR
0259890219	Raphael Kim(DELE	103215	ACC
0263126315	Tommy Chan	104501	FAE
4586927315			
1658943521			
1346798255			
1946532874			

Access Record

2018年10月 1日

By Date List All

Reader	Access Time	Access Count
low floor	2018-09-27 15:22:17	0
low floor	2018-09-27 15:22:14	0

Edit Selected Card Access Record

ACS Manager V1.1.0.0 2018/9/28

Reader Group User Query System Logout Language Exit About

Query Menu

Access Deny Record

Refresh Record

Reader Name	Card UID	Access Time	Access Status
low floor	0259890219	2018-09-27 16:36:59	Access Deny
low floor	0263126315	2018-09-27 16:36:55	Access Deny
low floor	0263126315	2018-09-27 16:36:52	Access Deny
low floor	0259890219	2018-09-27 16:36:08	Access Deny
low floor	0254400811	2018-09-27 15:22:17	Access Deny
low floor	0254400811	2018-09-27 15:22:14	Access Deny

Add Selected Card UID

Edit Selected Card Access Record Access Deny Record

## 2.7 Contact

Clicking on the contact will bring up the contact setting page, where you can set the contact for the alert notification letter.

The screenshot shows the 'Alarm Mail' configuration window in the ACS Manager. The top navigation bar includes icons for Reader, Group, User, Contact (highlighted with a red box), Query, Password, Voice, System, Logout, Language, Exit, and About. The main form is titled 'Alarm Mail' and contains the following fields and controls:

- Sender Name:** Text input field.
- Sender Email Address:** Text input field.
- ID:** Text input field.
- Password:** Text input field.
- Port:** Text input field with the value '587'.
- SMTP Server:** Radio button selection between 'GOOGLE Gmail (smtp.gmail.com)' (selected) and an empty field.
- Use SSL:** Checked checkbox.
- Recipient Email Address:** Radio button selection between an empty text input field (selected) and a dropdown menu.
- Buttons:** 'OK' and 'Send Test' buttons on the right side.

### 2.7.1 Set the sender

Step1.Fill sender name, sender e-mail address, mail ID and password.

The screenshot shows the 'Alarm Mail' configuration window with the following values entered:

- Sender Name:** ACS Manager
- Sender Email Address:** ACSManager@test.com
- ID:** ACSManager
- Password:** \*\*\*\*
- Port:** 587
- SMTP Server:** GOOGLE Gmail (smtp.gmail.com) (selected)
- Use SSL:** Checked checkbox

Step2. Select the SMTP server address to send mail, and choose whether you want to enable SSL.

Sender Name: ACS Manager  
Sender Email Address: ACSManager@test.com  
ID: ACSManager  
Password: \*\*\*\*  
Port: 587  
SMTP Server: ☒ GOOGLE Gmail (smtp.gmail.com) ☐   
☒ Use SSL

You can also enter the SMTP server address and port, and choose whether to enable SSL.

Sender Name: ACS Manager  
Sender Email Address: ACSManager@test.com  
ID: ACSManager  
Password: \*\*\*\*  
Port: 587  
SMTP Server: ☐ GOOGLE Gmail (smtp.gmail.com) ☒   
☒ Use SSL

## 2.7.2 Set the recipient

Step1. Enter the recipient's e-mail address.


Recipient Email Address  
☒ ACS\_User@test.com  
☐ ACSTest@test.com

Or choose e-mail from the users.


Recipient Email Address  
☐ ACS\_User@test.com  
☒ ACSTest@test.com

### 2.7.3 Send Email Test


To test if the alarm mail can be sent successfully, enter the sender / recipient information and press `Send Test`

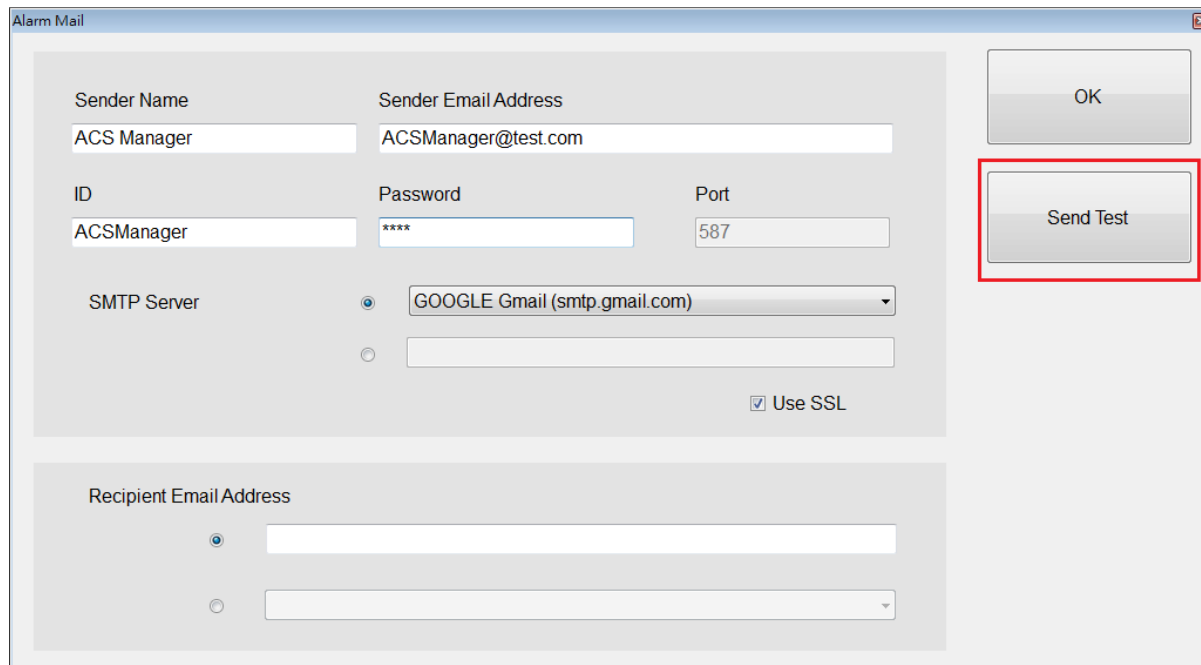

If the mail is sent successfully, the `Test OK!` window will pop up. Please go to the mailbox to confirm that recipient has received the alarm mail correctly.

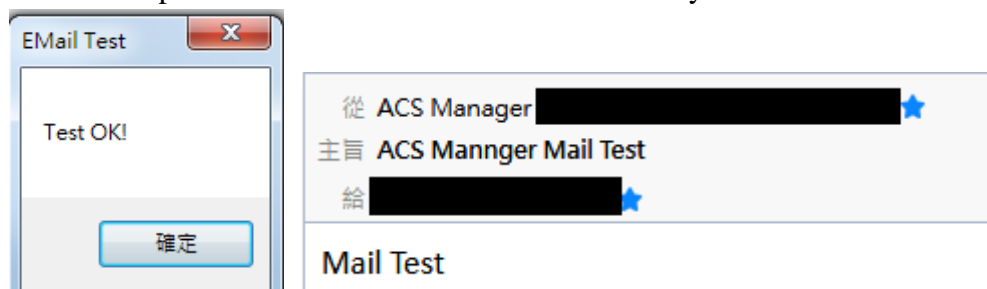

If the test fails, the `Test Fail` window pops up. At this time, please check whether the sender's information is entered incorrectly.

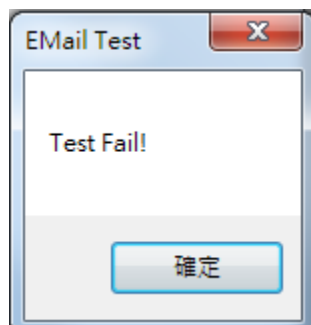


Note: To use Gmail Google please turn up **`less secure apps`**.

For details, please refer to google description

<https://support.google.com/accounts/answer/6010255?hl=en>



## 2.7.4 Save

If you confirm that the fields are correct, click `OK` to save the contact information.

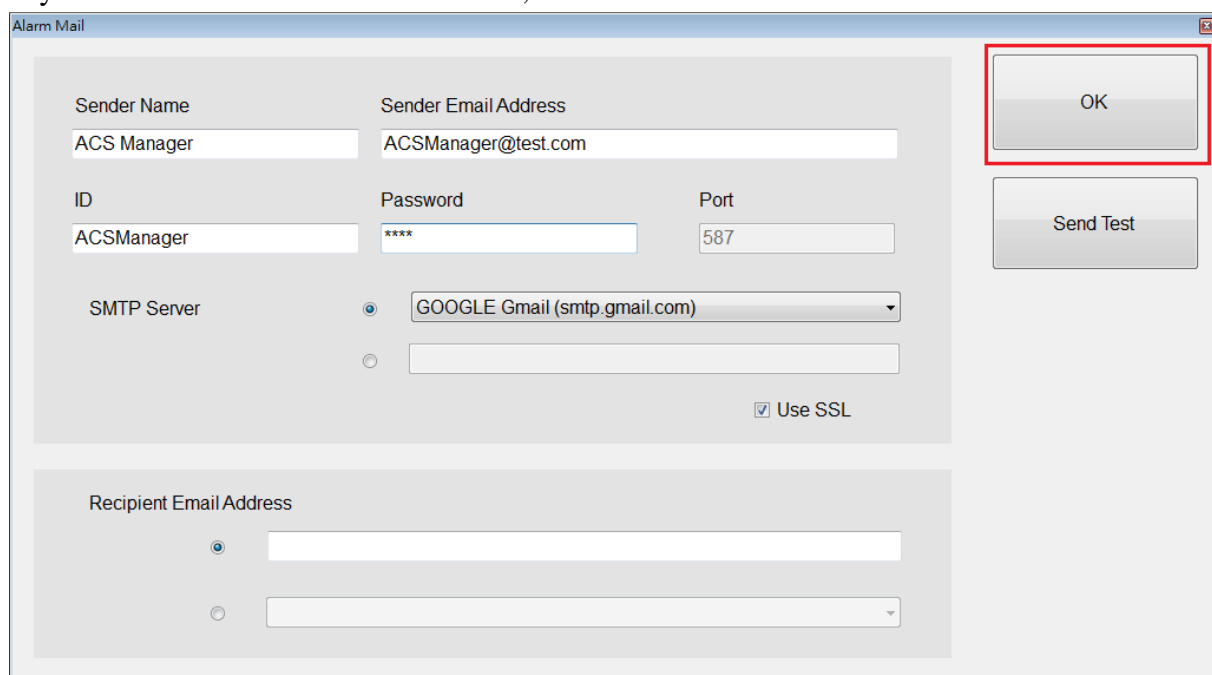A screenshot of the "Alarm Mail" configuration window. The window contains several input fields and buttons. The "Sender Name" field is filled with "ACS Manager". The "Sender Email Address" field is filled with "ACSManager@test.com". The "ID" field is filled with "ACSManager". The "Password" field is filled with "\*\*\*\*". The "Port" field is filled with "587". The "SMTP Server" dropdown menu is set to "GOOGLE Gmail (smtp.gmail.com)". The "Use SSL" checkbox is checked. The "Recipient Email Address" field is empty. On the right side of the window, there are two buttons: "OK" and "Send Test". The "OK" button is highlighted with a red rectangle.


## 2.7.5 Enable alarm letter

In ReaderSync, System- > Settings, you can choose whether to enable the alarm mail notification.

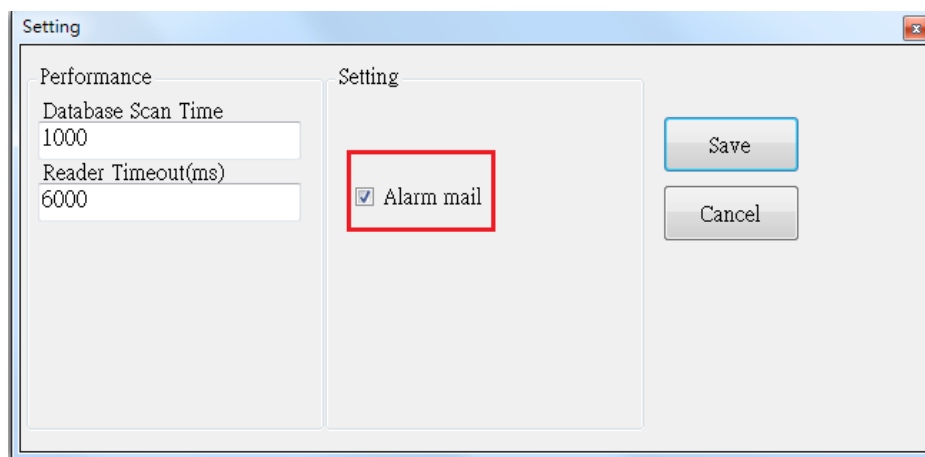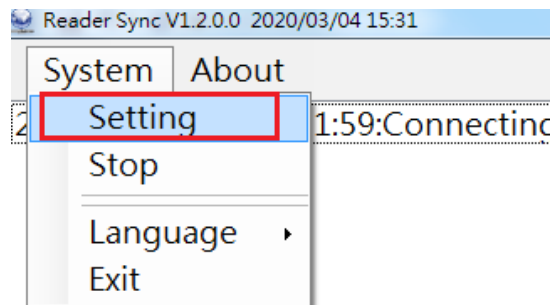


## 2.8 Password

Click the password to display the password setting page, where you can set the password of the readers.

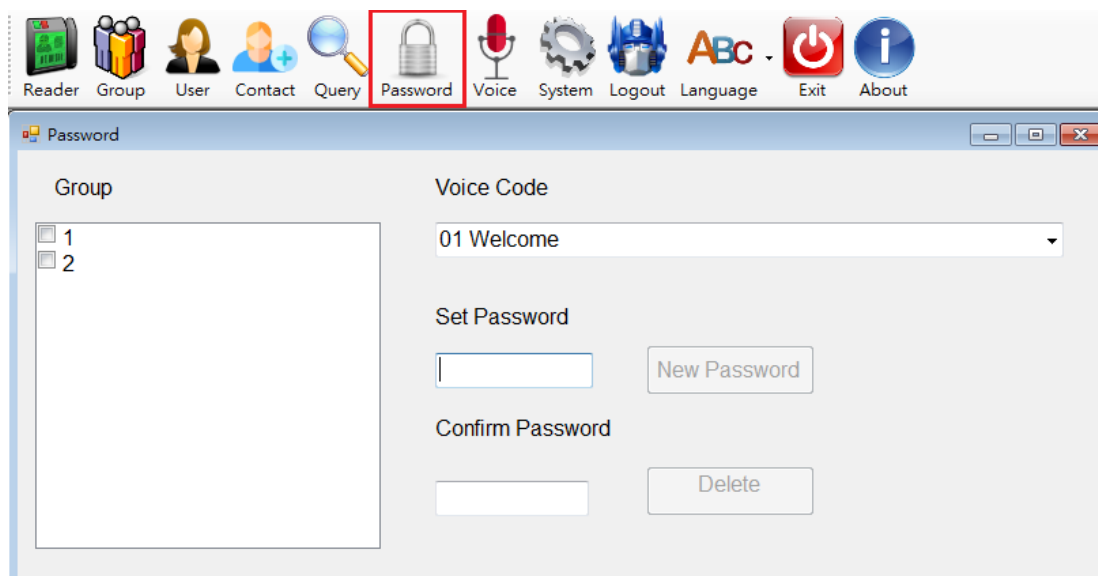


## 2.8.1 Set password


Step1. Select the group and select voice.

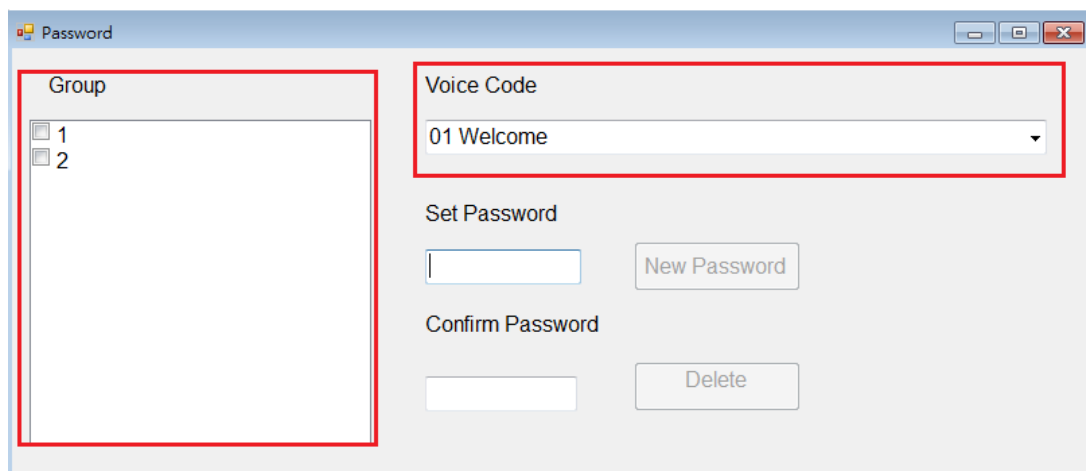


Step2. Enter the password (must be 4 digits) and confirm the password, then click `New Password`.

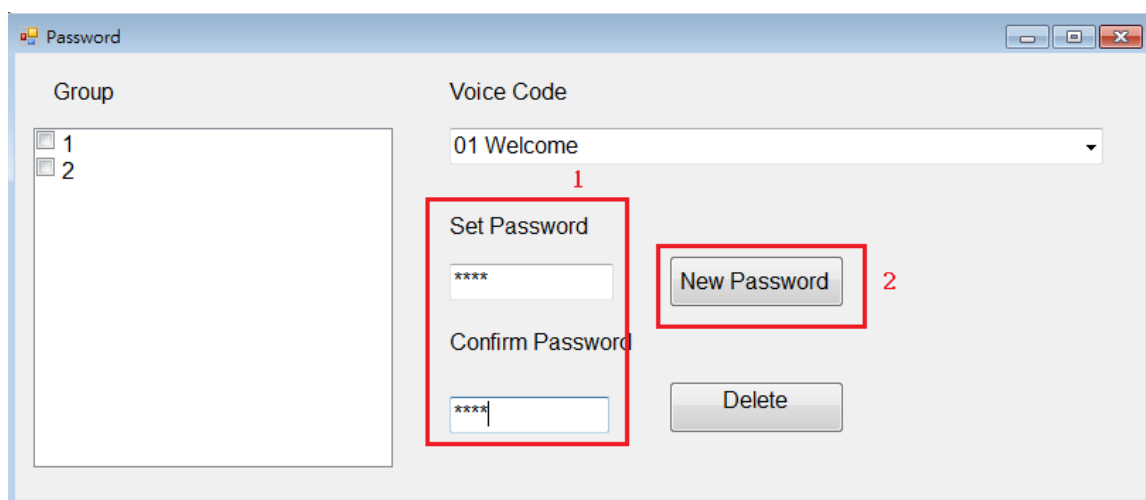

Step3. The check window will pop, to add this password please click `Yes`.

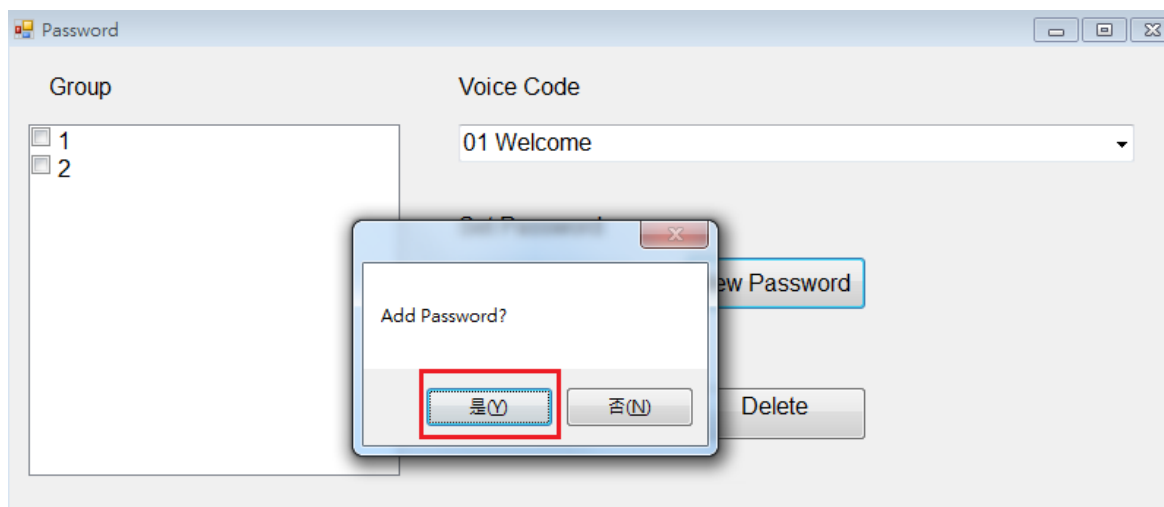


Step4. Update password success, please run ReaderSync to sync the password to readers.

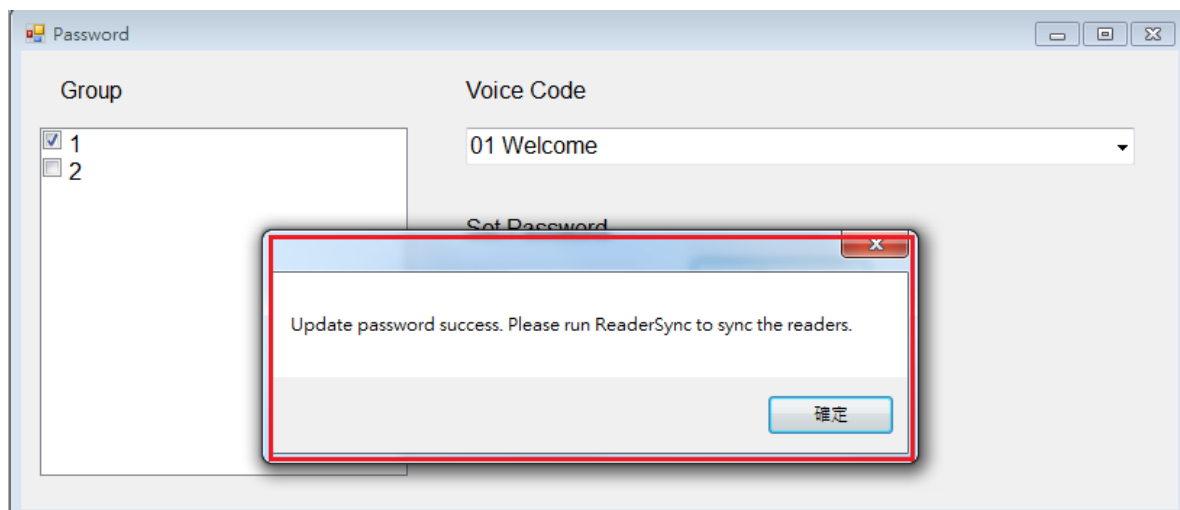


## 2.8.2 Remove password


Step1. Select the group which want to delete the password.

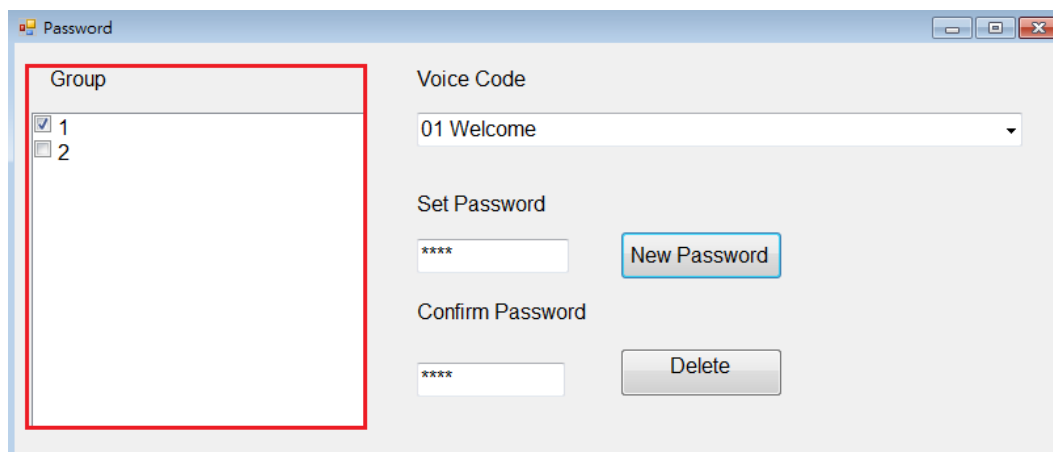


Step2. Enter the password you want to delete (must be 4 digits) and enter the password again to confirm, then click `Delete Password`.

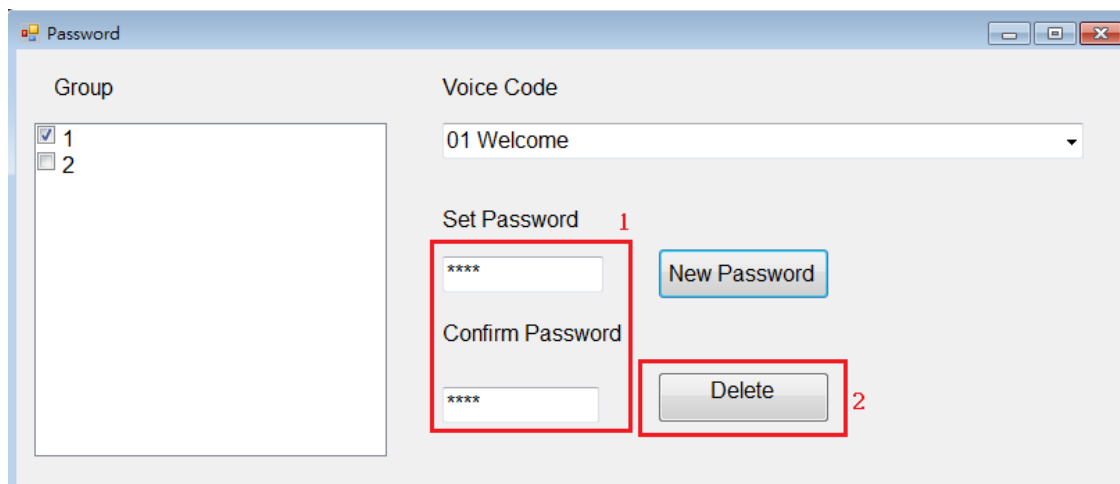

Step3. The check window will pop, to delete this password please click `Yes`.

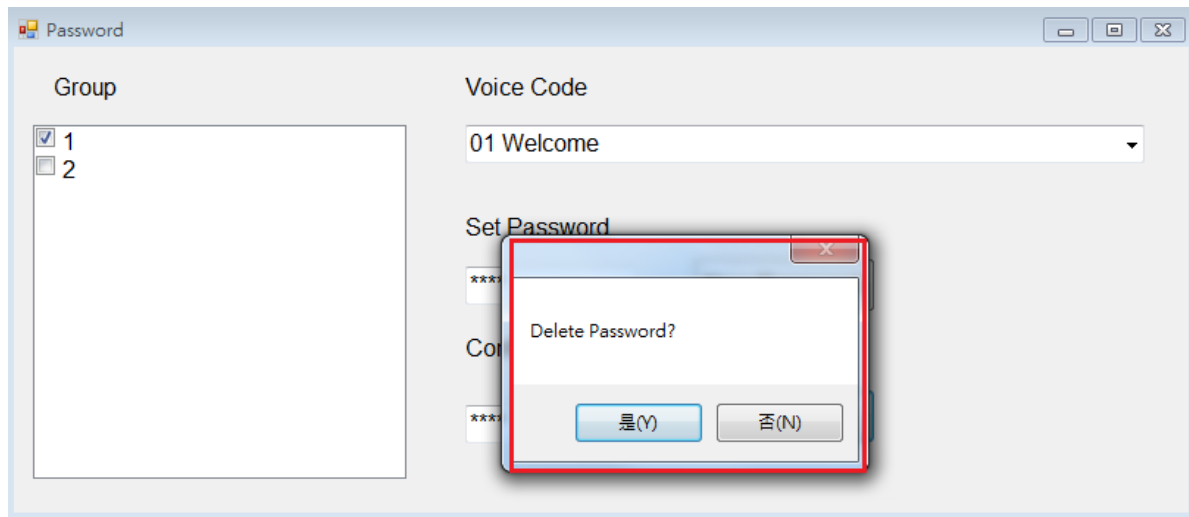


Step4. Update password success, please run ReaderSync to delete the password from readers.

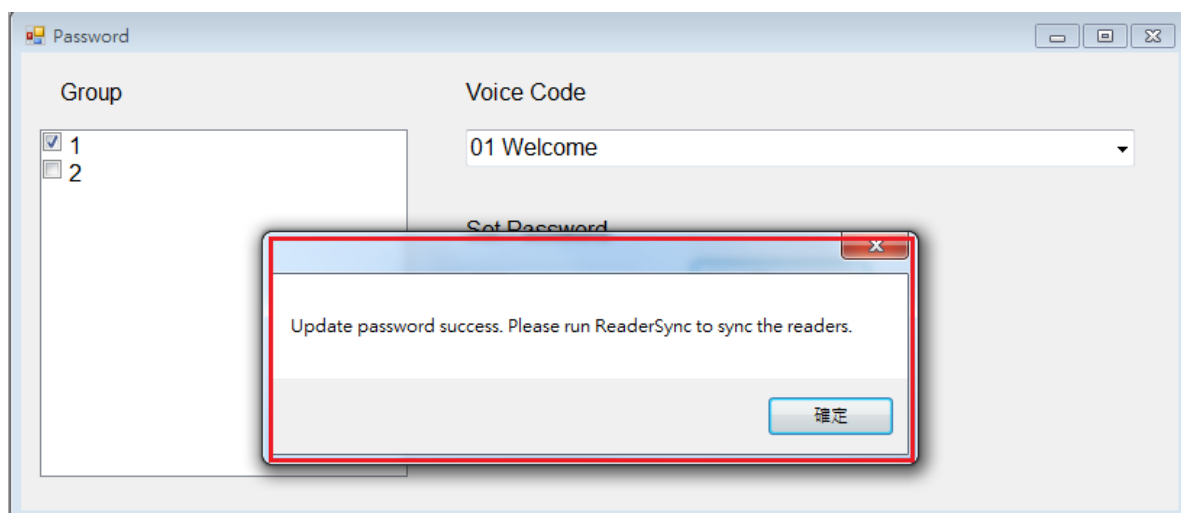

## 2.9 Voice upload

Click Voice will upload page, where you can set which voice you want to upload to readers.

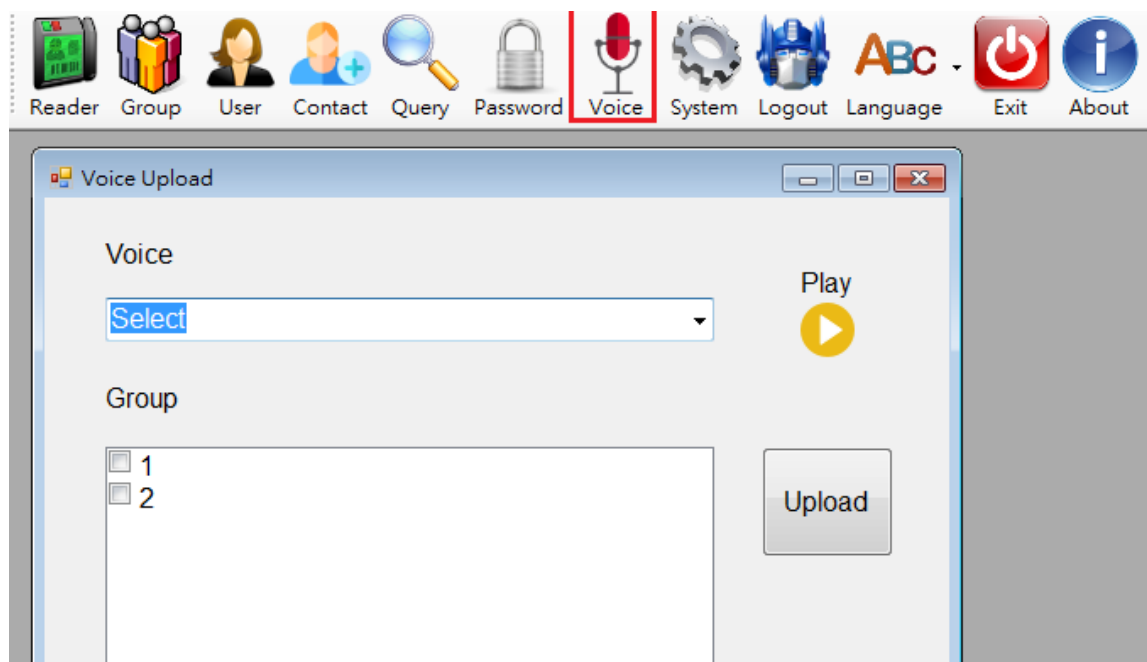


### 2.9.1 Customize the reader's voice

ACS card reader supports voice file format


Voice format	wav
Bit rate	256kps
Audio sample size	16bit
Channels	1 (mono)
Audio sampling rate	16kHz
Audio format	PCM

ACS has 39 preset voice files. To upload a custom voice file, please rename the voice file to 001.wav ~ 039.wav and place it in the **Audiofiles** folder in the ACS Manager folder to replace the original file.

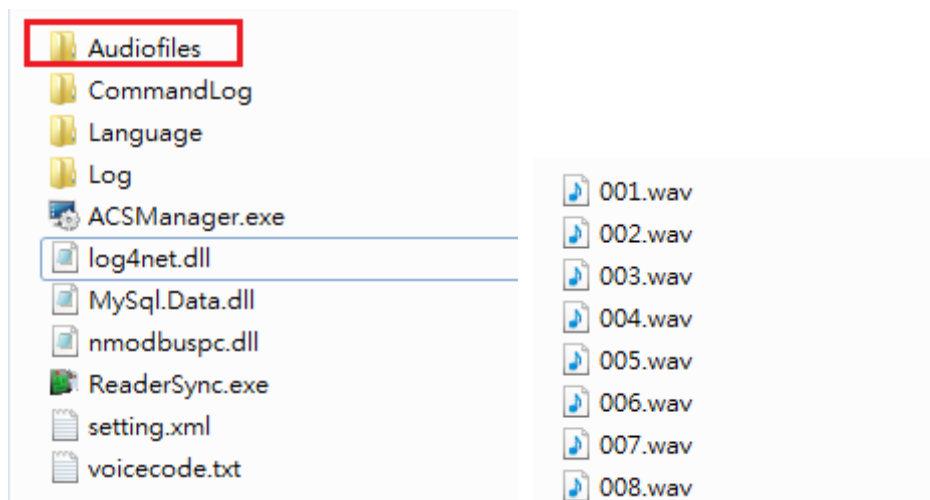


## 2.9.2 Upload Voice File


Step1. Select the voice you want to upload, the Play button can play the voice files for the user to confirm the voice files are correct.

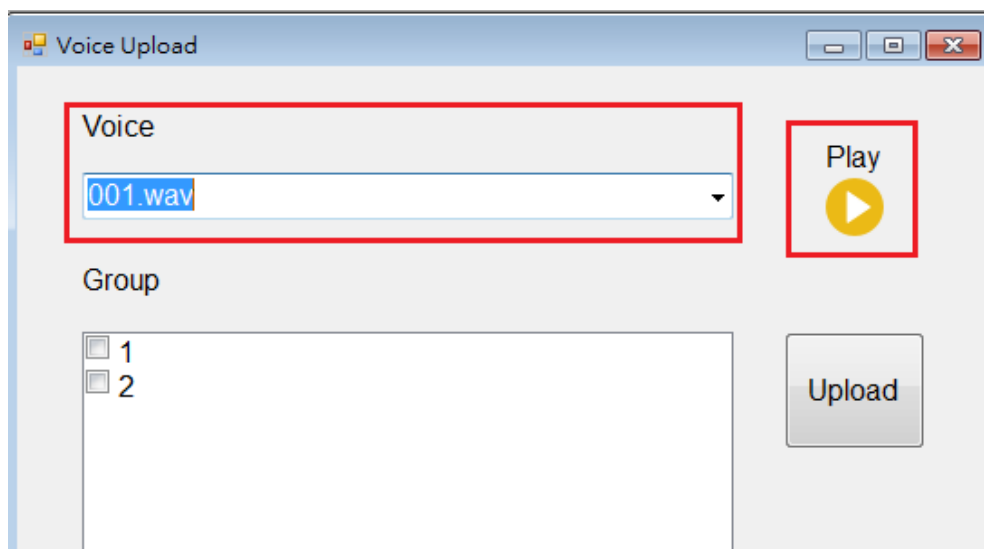

Step2. After selecting the readers to upload groups, please click Upload.

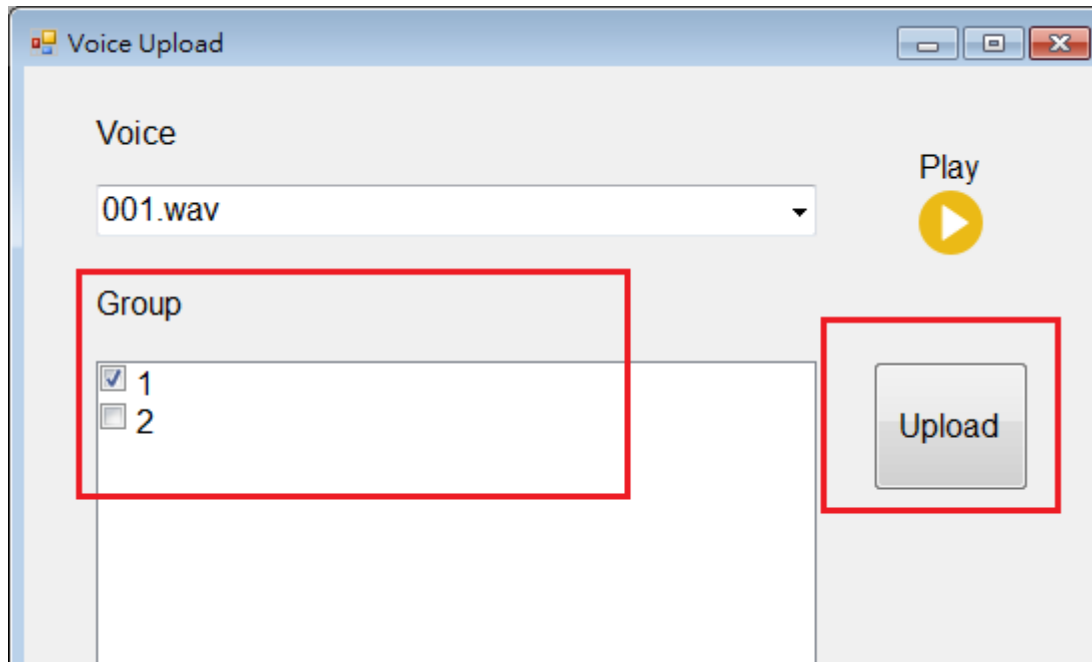

Step3. The success window will pop up, after click OK, please run ReaderSync.exe to sync the readers.

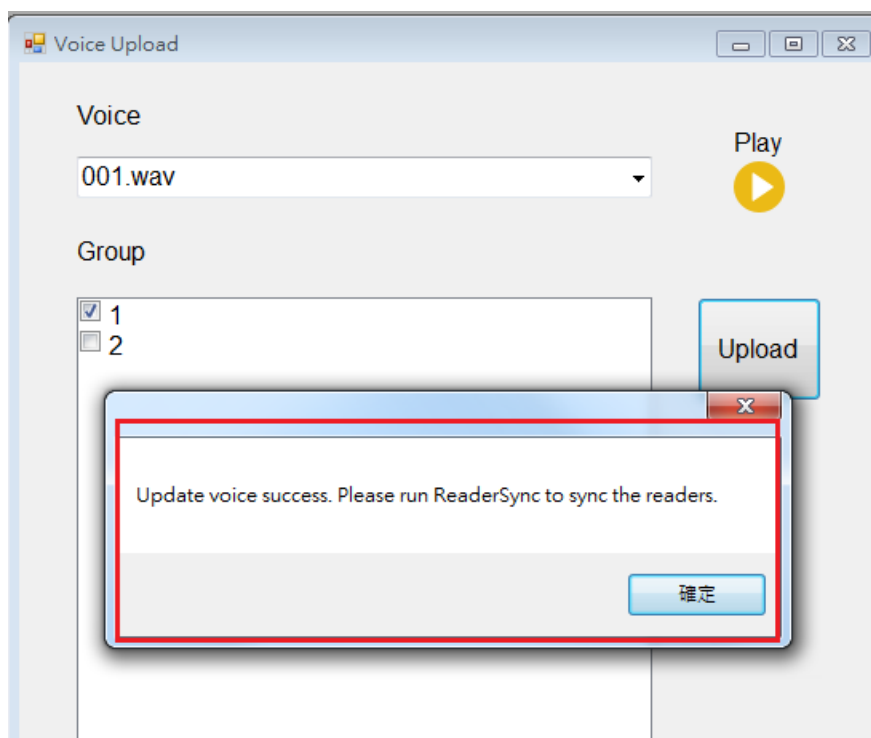

## 2.10 Language/Exit

### 2.10.1 Language

Click Language button and choose the language you want.



### 2.10.2 Exit

Click Exit button and the application will close.

