

What's in the box?

In addition to this guide, the package includes the following items:



LC-223H

Quick Start

LC-223H Getting Started/User Manual

- **LC-223H Series User Manual**

http://ftp.icpdas.com/pub/cd/8000cd/napdos/lc/lc_223H/

- **DCON Utility**

http://ftp.icpdas.com/pub/cd/8000cd/napdos/driver/dcon_utility/

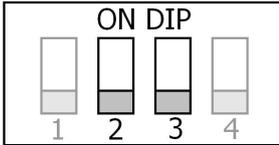
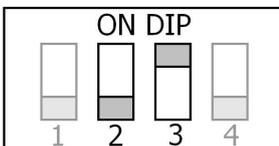
- **LC-223H Website**

http://www.icpdas.com/root/product/solutions/remote_io/rs-485/lighting_control/lc-223H.html

DIP Switch and Jumper Settings(SW2)

<p style="text-align: center;">SW2</p> 	SW2.1	ON	DCON Protocol
		OFF	Modbus RTU Protocol
	SW2.2	ON	Software Configuration
		OFF	Hardware Configuration
	SW2.3	ON	High Node Address
		OFF	Low Node Address
	SW2.4	ON	INIT Mode
		OFF	Normal Mode

Address Settings via Hardware Configuration(SW1)

<p style="text-align: center;">SW1</p> 		0 ~ F for Addresses 64 ~ 79 (Low Node Address)
		0 ~ F for Addresses 80 ~ 95 (High Node Address)

Analog Output(AO) Settings via SW3

SW3	
Vout	Iout
	



If there is any other question, please feel free to contact us.

Email: service@icpdas.com