

How to upgrade the PAC's Win-GRAF Driver ?

For updating add-on functions, I/O boards or other purposes, ICP DAS may release new PAC 's Win-GRAF driver in the future. Users can get the latest version that's available for different PAC models from the following Web .

https://www.icpdas.com/en/product/guide+Software+Development__Tools+Win-GRAF#2713

The below steps is using for RPAC. Please follow the steps to upgrade the new driver into your PAC.

Method one → Update firmware by Webpage (recommend to update via this method)

Step 1:

Using eSearch Utility to Connect the PAC

eSearch Utility Website


http://www.icpdas.com/en/product/guide+Software+Utility_Driver+eSearch_Utility

- 1) Searching the Ethernet device connected on the network
- 2) Select RPAC-2858M
- 3) Connect to the web pages (The default login name is “admin”, password is “admin”).




Step 2:


- a. Select System->General Webpage and then Click Software Update Button.

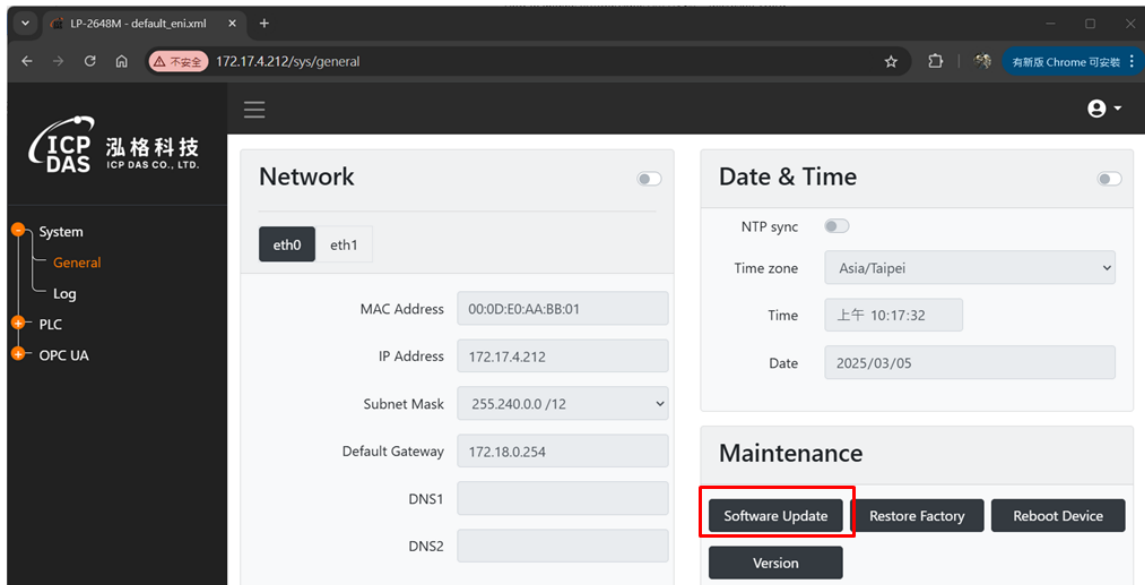

- b. Select patch file (patch_vXX.XX.zip) and then click OK.

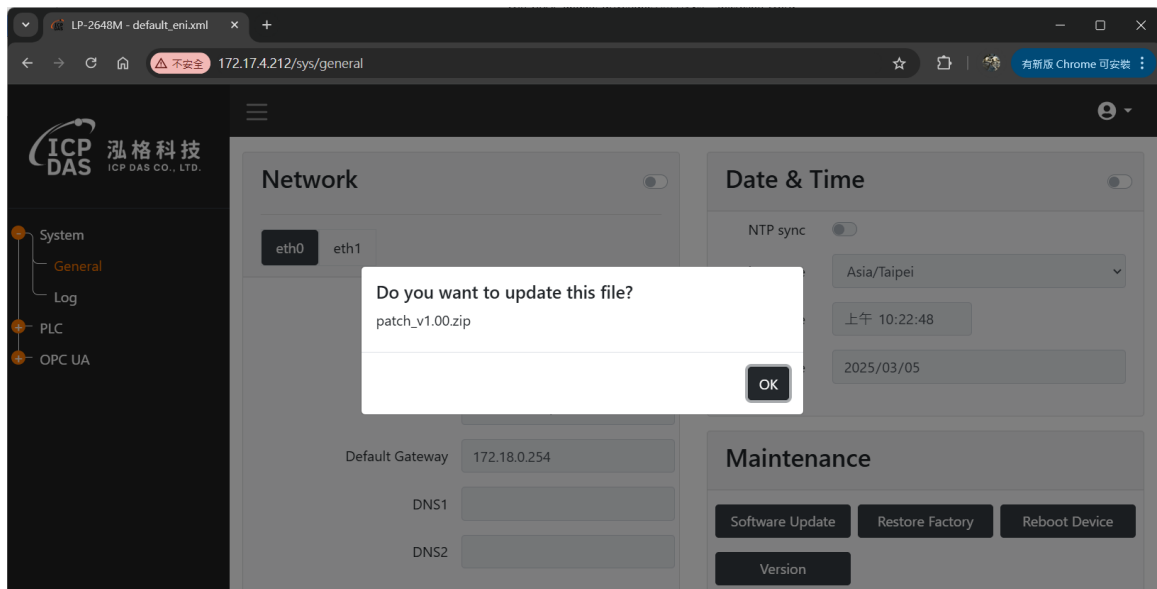


- c. Click reboot for the update to take effect

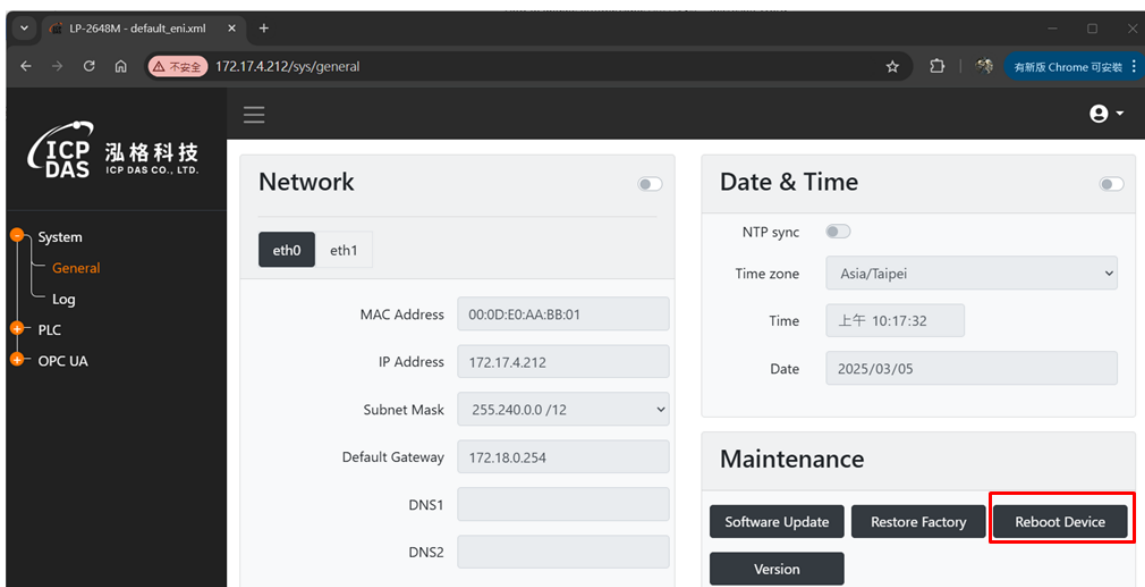

Step 3:

Click Version button to check if the software version is updated

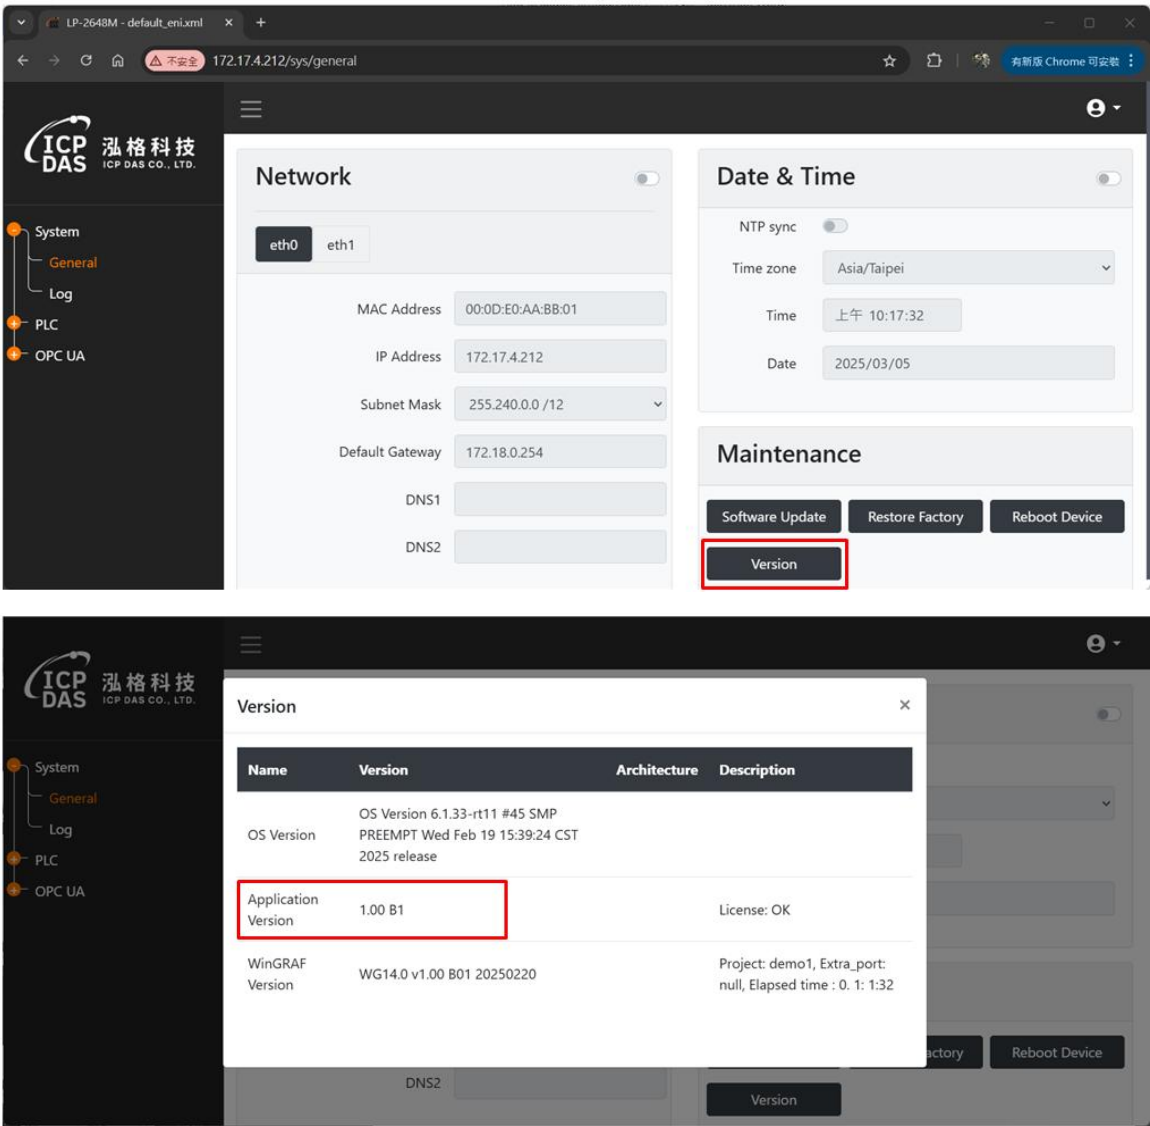

Method two → Update firmware by USB flash drive

Step 1:

- a. Prepare a flash drive



- b. Format your flash drive with fat32 format




- c. Put patch file to your flash drive

Patch file is patch_vxx.xx.zip

 patch_v0.10.zip

Step 2:

Plug your flash driver to USB port of RPAC and switch the rotary switch to position 5.

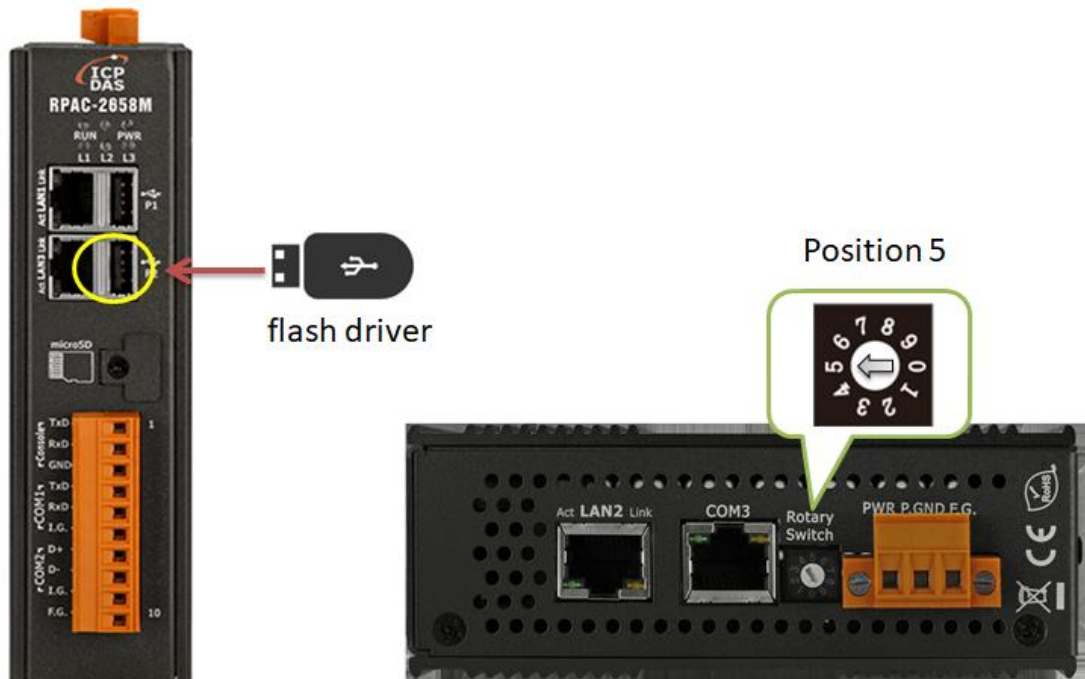

Step 3:

Turn the power on and the firmware update process will be executed automatically. When the firmware update is completed, the L1, L2, L3 LED will be on.



Step 4:

Power off and then unplug your flash drive and switch the rotary switch to position 0.

Step5:

Power on again. It will show new firmware version in the web page. It means firmware update is successful.

