

### Packing List

In addition to this guide, the package includes the following items:



WISE-5800 or  
WISE-5800-MTCP



microSD card and  
micro SD/SD adapter



RS-232 cable  
(CA-0910)



Pin Terminal \* 16



Screwdriver  
(1C016)

### Resources


How to search for drivers, manuals and spec information on ICP DAS website.

### Technical Support

[service@icpdas.com](mailto:service@icpdas.com)


[www.icpdas.com](http://www.icpdas.com)

- For Mobile Web

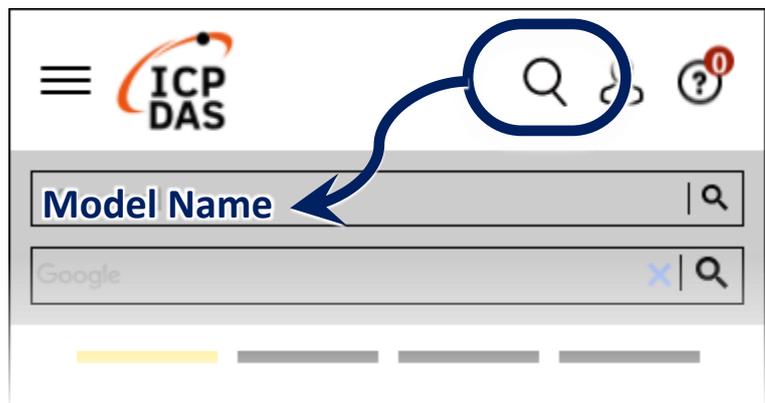

- For Desktop Web

# 1. Connect to Network, PC and Power

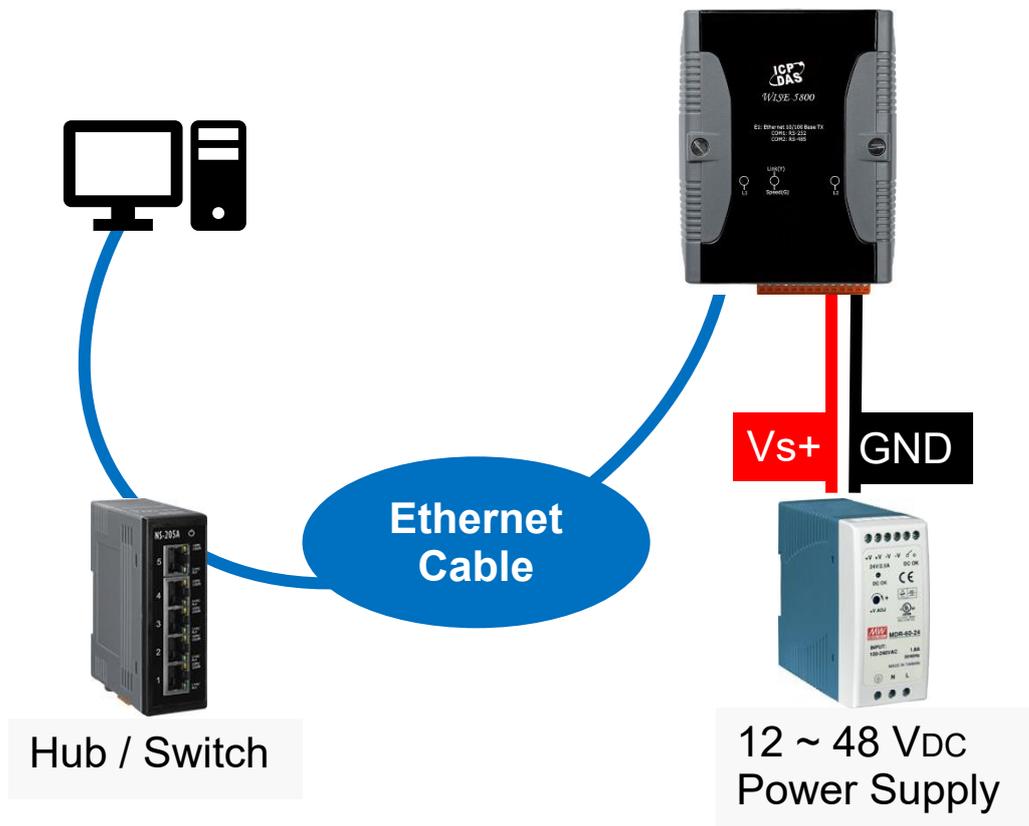

## 2. Check network settings

WISE-580x comes with the default network setting:

LAN	Default Settings
IP address	192.168.255.1
Subnet Mask	255.255.0.0
Gateway	192.168.0.1

## 3. Go to WISE-580x's web site

WISE-580x provides user-friendly Web UI pages. It enables to implement logic edition by a few clicks on the mouse to set up and deploy logic rules.

- Open a browser, and type in the URL address of the WISE-580x.



- Key in the default password “wise” to login.
- For more detail information, please refer to WISE-580x's User Manual.