

How to update Firmware of PROFINET device?



Step 1: Download the PROFINET_FW_Update_Tool software and latest firmware of PROFINET device.

PROFINET_FW_Update_Tool software=>


ftp://ftp.icpdas.com.tw/pub/cd/fieldbus_cd/profinet/utility/

Step 2: Please turn rotary switch to “F” and turn the “Power ON”.


Note: S1A, S1B, S2B LED ON and S2A LED OFF

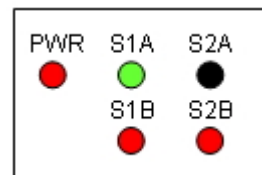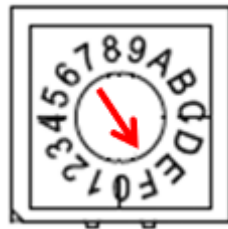


Step 3: Extract the firmware file.

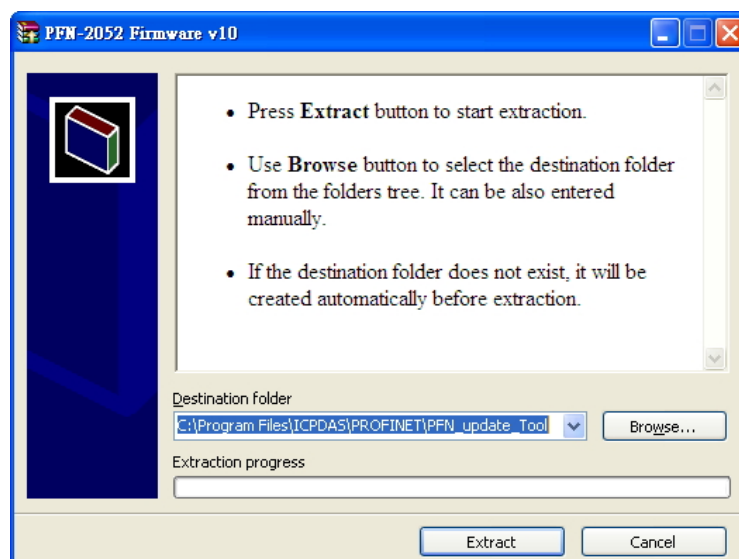


Step 4: Double click "**PFN_Update_Tool.exe**" . Select product and press "**OK**" button.

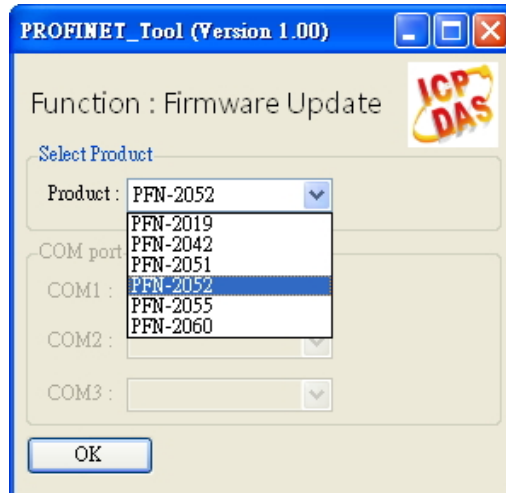


Step 5: Please input device's IP, and note that PROFIBET device's IP must have the same domain and different IP with PC.

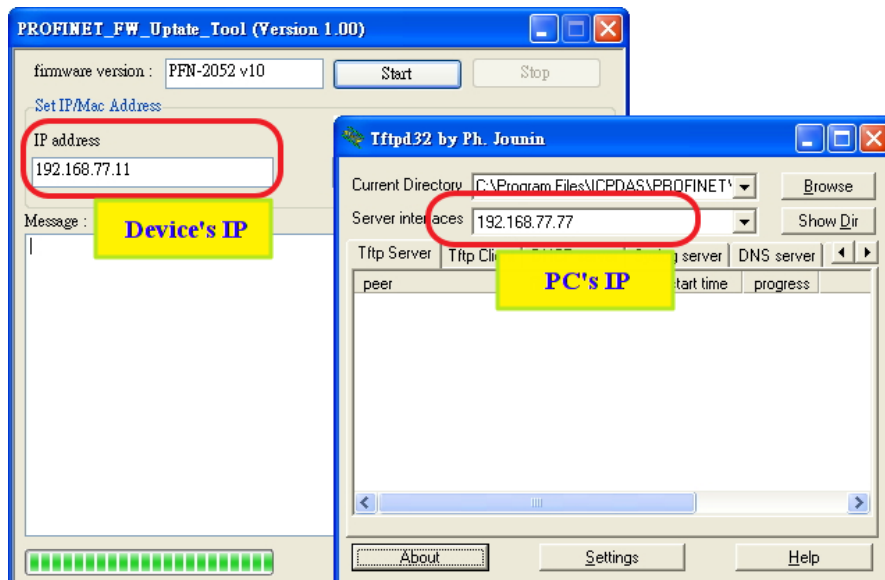

Step 6: Please input device's MAC address. You can find it at cover of device.

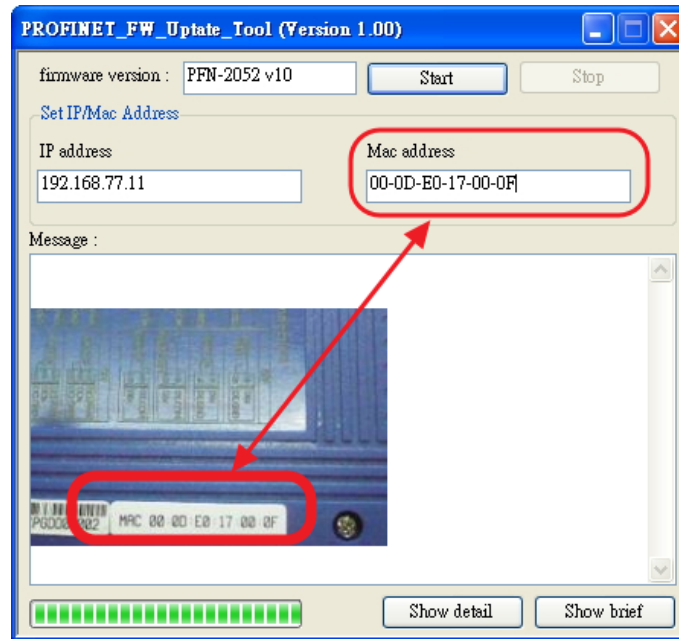

Step 7: Press **“Start”** button to update firmware.

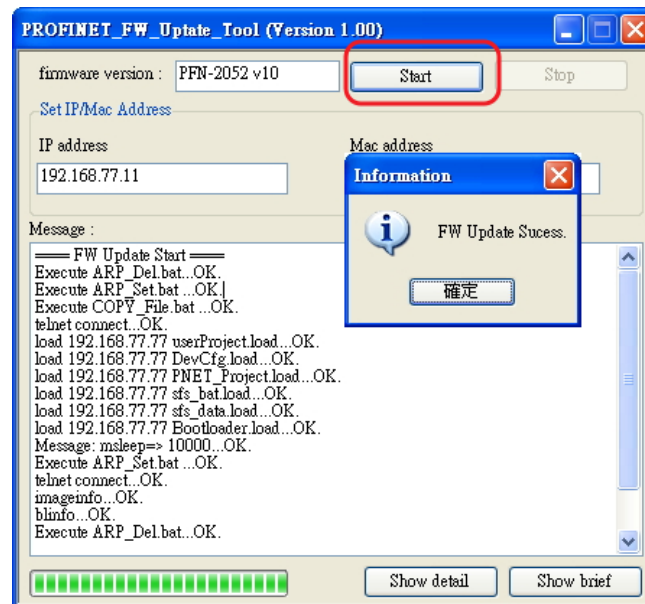

Step 8: Firmware update success, please turn rotary switch to **“0”**.