

Packing List

In addition to this guide, the package includes the following items:

CAN-2019C/S(or CAN-2019D/S) = CAN-2019C/D + DB-1820



CAN-2019C/D



DB-1820



Screw Driver

Resources


How to search for drivers, manuals and spec information on ICP DAS website.

Technical Support

service@icpdas.com

www.icpdas.com


- For Mobile Web

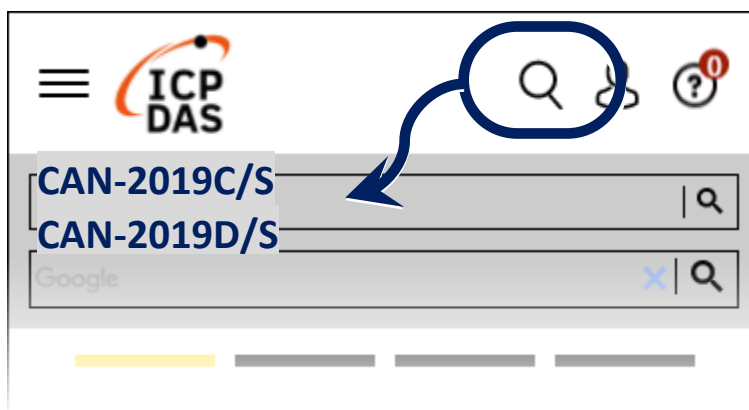

- For Desktop Web

1 Node ID, baud rate and terminal resistance

According to the user's requirements for CANopen/DeviceNet network, set the node ID and CAN baud rate of this module on the CANopen/DeviceNet network. If the module is located at the terminal of the network, according to the standard CANopen/DeviceNet network specification, this module must enable the terminator resistance.

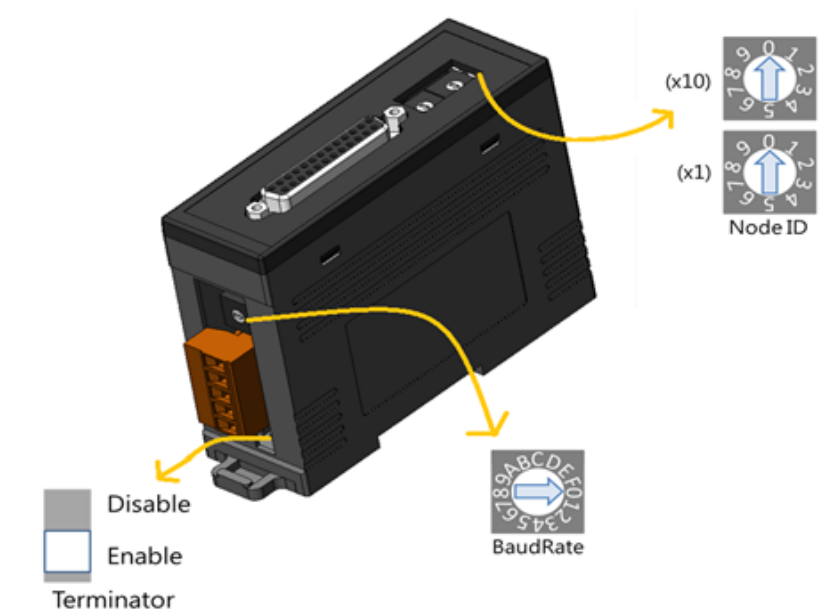


CAN-2019C/S

BaudRate Rotary Switch	BaudRate (k bps)
0	10
1	20
2	50
3	125
4	250
5	500
6	800
7	1000

CAN-2019D/S


BaudRate Rotary Switch	BaudRate (k bps)
0	125
1	250
2	500

2 I/O channel connection

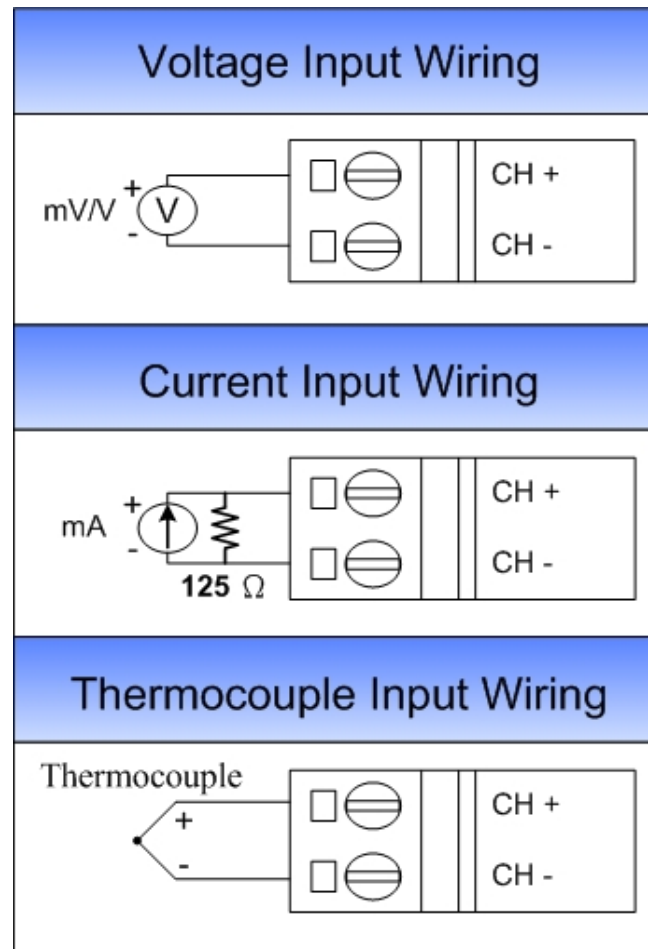


3 CAN port connection

2-wire Connection

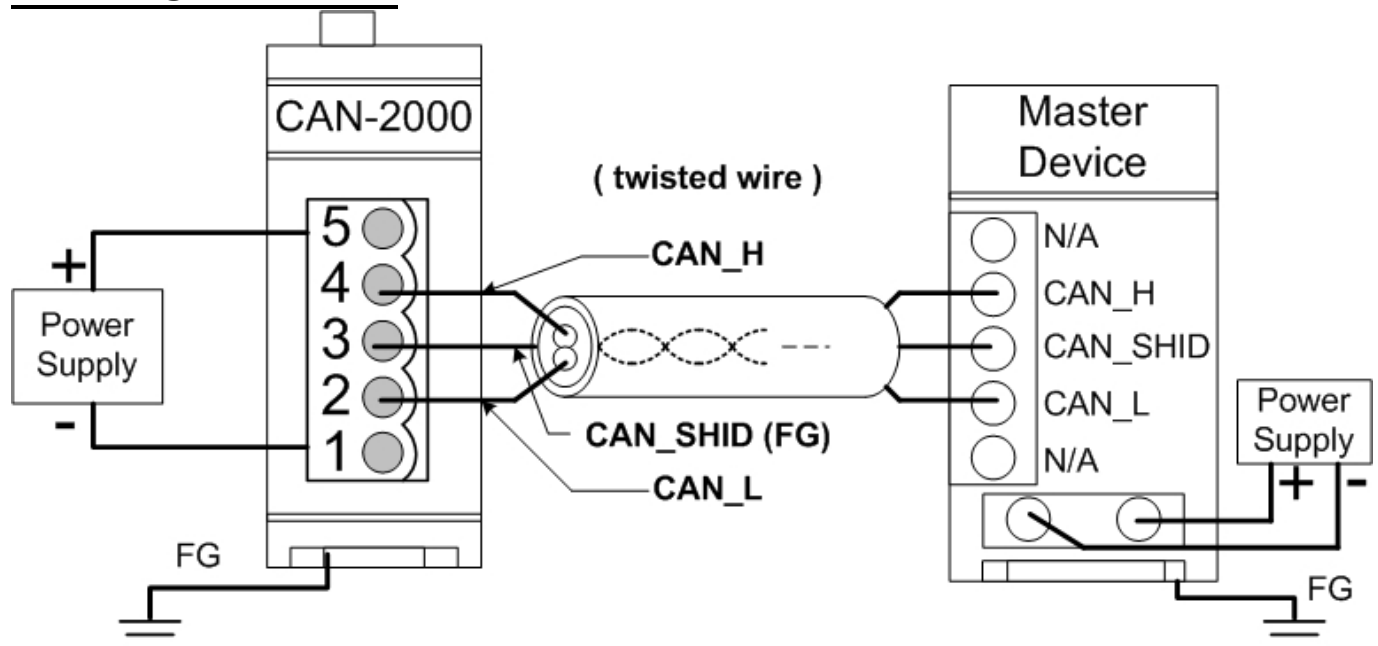

3-wire Connection

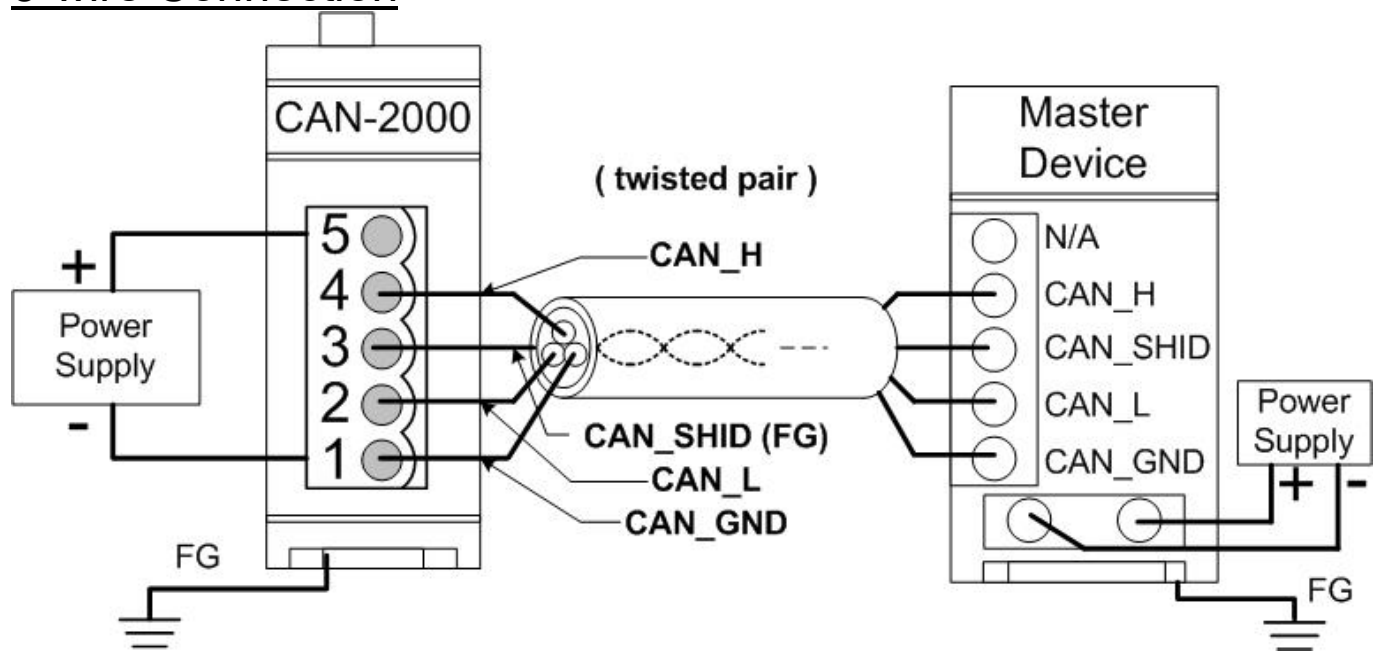

4-wire Connection

