

Packing List

In addition to this guide, the package includes the following items:



CAN-2057C/D



Screw Driver

Technical Support

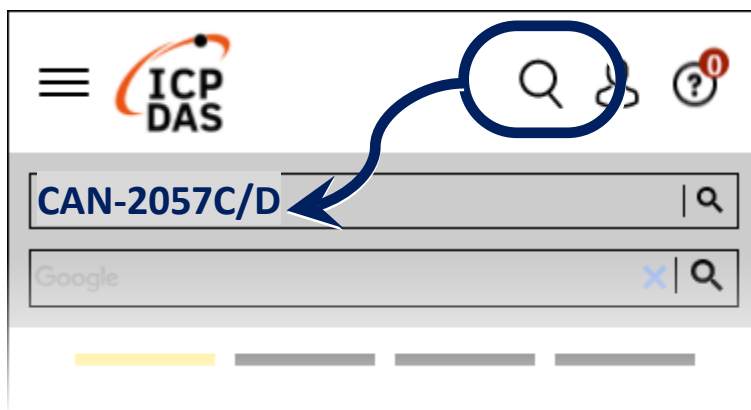
service@icpdas.com

www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.


- For Mobile Web



- For Desktop Web

1 Node ID, baud rate and terminal resistance

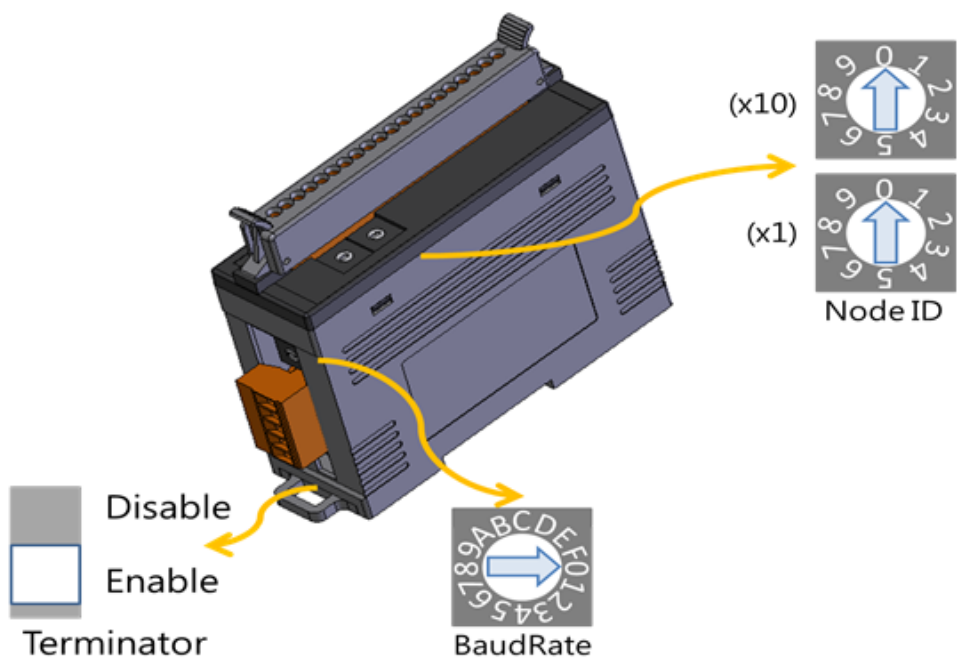According to the user's requirements for CANopen/DeviceNet network, set the node ID and CAN baud rate of this module on the CANopen/DeviceNet network. If the module is located at the terminal of the network, according to the standard CANopen/DeviceNet network specification, this module must enable the terminal resistance.







CAN-2057C





BaudRate Rotary Switch	BaudRate (k bps)
0	10
1	20
2	50
3	125
4	250
5	500
6	800
7	1000

CAN-2057D

BaudRate Rotary Switch	BaudRate (k bps)
0	125
1	250
2	500

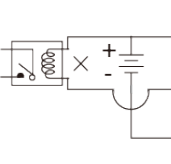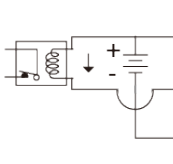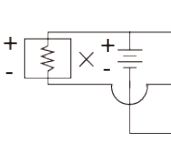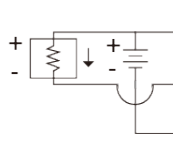
2 I/O channel connection

Module Name	CAN-2057C						
Output Type	ON State LED ON Readback as 1	OFF State LED OFF Readback as 0					
Drive Relay	Relay Off	Relay ON					
	 <table><tr><td>DO.PWR</td></tr><tr><td>DO X</td></tr><tr><td>DO.GND</td></tr></table>	DO.PWR	DO X	DO.GND	 <table><tr><td>DO.PWR</td></tr><tr><td>DO X</td></tr><tr><td>DO.GND</td></tr></table>	DO.PWR	DO X
DO.PWR							
DO X							
DO.GND							
DO.PWR							
DO X							
DO.GND							
Resistance Load	Relay Off	Relay ON					
	 <table><tr><td>DO.PWR</td></tr><tr><td>DO X</td></tr><tr><td>DO.GND</td></tr></table>	DO.PWR	DO X	DO.GND	 <table><tr><td>DO.PWR</td></tr><tr><td>DO X</td></tr><tr><td>DO.GND</td></tr></table>	DO.PWR	DO X
DO.PWR							
DO X							
DO.GND							
DO.PWR							
DO X							
DO.GND							

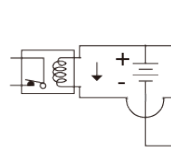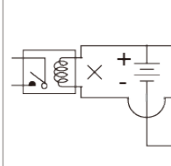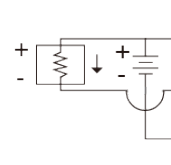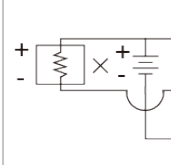
Module Name	CAN-2057D						
Output Type	ON State LED ON Readback as 1	OFF State LED OFF Readback as 0					
Drive Relay	Relay ON	Relay Off					
	 <table><tr><td>DO.PWR</td></tr><tr><td>DO X</td></tr><tr><td>DO.GND</td></tr></table>	DO.PWR	DO X	DO.GND	 <table><tr><td>DO.PWR</td></tr><tr><td>DO X</td></tr><tr><td>DO.GND</td></tr></table>	DO.PWR	DO X
DO.PWR							
DO X							
DO.GND							
DO.PWR							
DO X							
DO.GND							
Resistance Load	Relay ON	Relay Off					
	 <table><tr><td>DO.PWR</td></tr><tr><td>DO X</td></tr><tr><td>DO.GND</td></tr></table>	DO.PWR	DO X	DO.GND	 <table><tr><td>DO.PWR</td></tr><tr><td>DO X</td></tr><tr><td>DO.GND</td></tr></table>	DO.PWR	DO X
DO.PWR							
DO X							
DO.GND							
DO.PWR							
DO X							
DO.GND							

3 CAN port connection

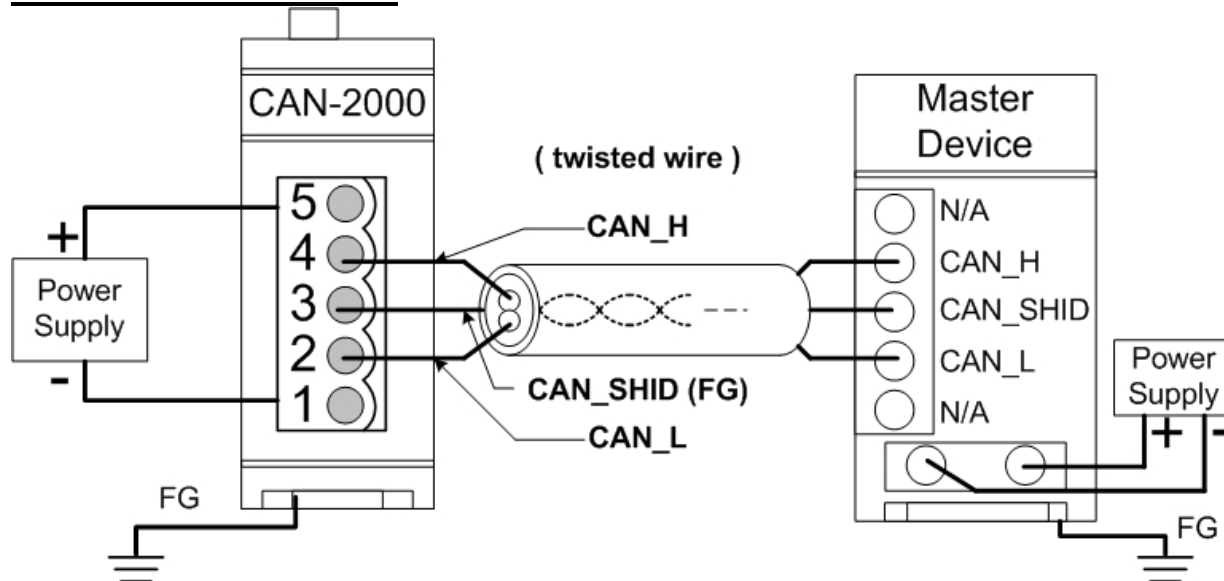2-wire Connection



3-wire Connection

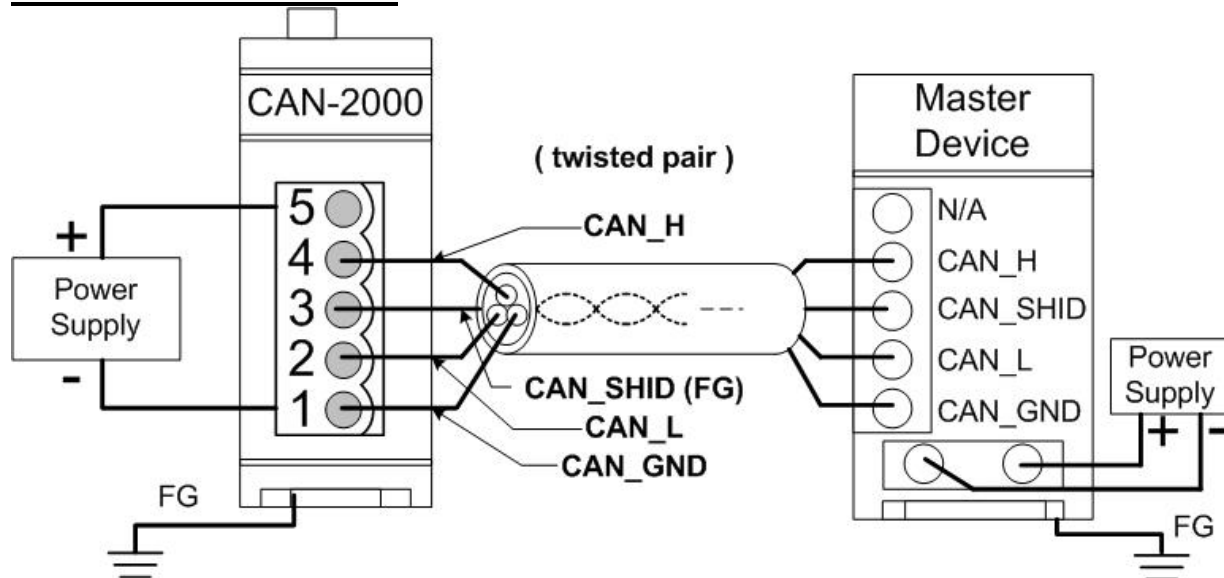

4-wire Connection

