

Packing List


In addition to this guide, the package includes the following items:



RPS-4M



Screw Driver

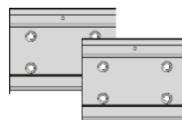

60 mm DIN-Rail
Clip x 2




M3 x 6L
Screw * 8

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

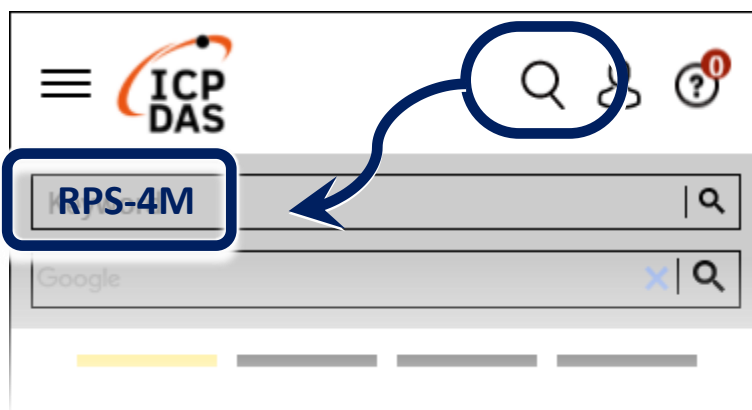


- For Desktop Web




Pin Assignments

1. DC Output

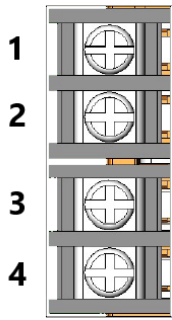


Pin	Description
1	Power output +24 V _{DC}
2	Power output +24 V _{DC}
3	Ground
4	Ground

 2. Relay Output




Pin	Description
1	Relay output: NO.
2	Relay output: COM

3. A.C. Power Input

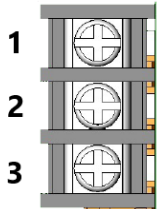

Pin	Description
1	Live Wire (L)
2	Naught wire (N)
3	Earth Wire (G)

 4. RS-485 Interface



Pin	Description
1	Data+ (D+)
2	Data- (D-)
3	Data+ (D+)
4	Data- (D-)

How to Start

Boot RPS-4M with Initial mode. The default IP address is 192.168.255.1. Use this IP address open the configuration web.

