

Packing List

In addition to this guide, the package includes the following items:



GTM-205M-5G



5G Antenna
*4
(ANT-859-01)



USB Cable
(CA-USB-AC
1-L010)



Screw Driver

Resources


Technical Support

service@icpdas.com

www.icpdas.com

How to search for drivers, manuals and spec information on ICP DAS website.


- For Mobile Web

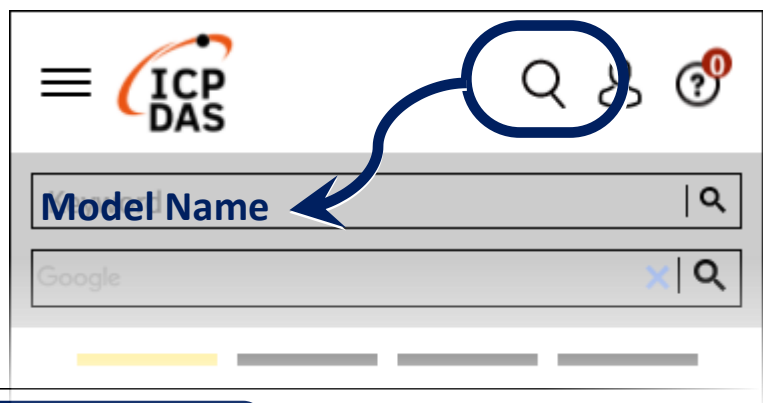


- For Desktop Web



1. View Panel

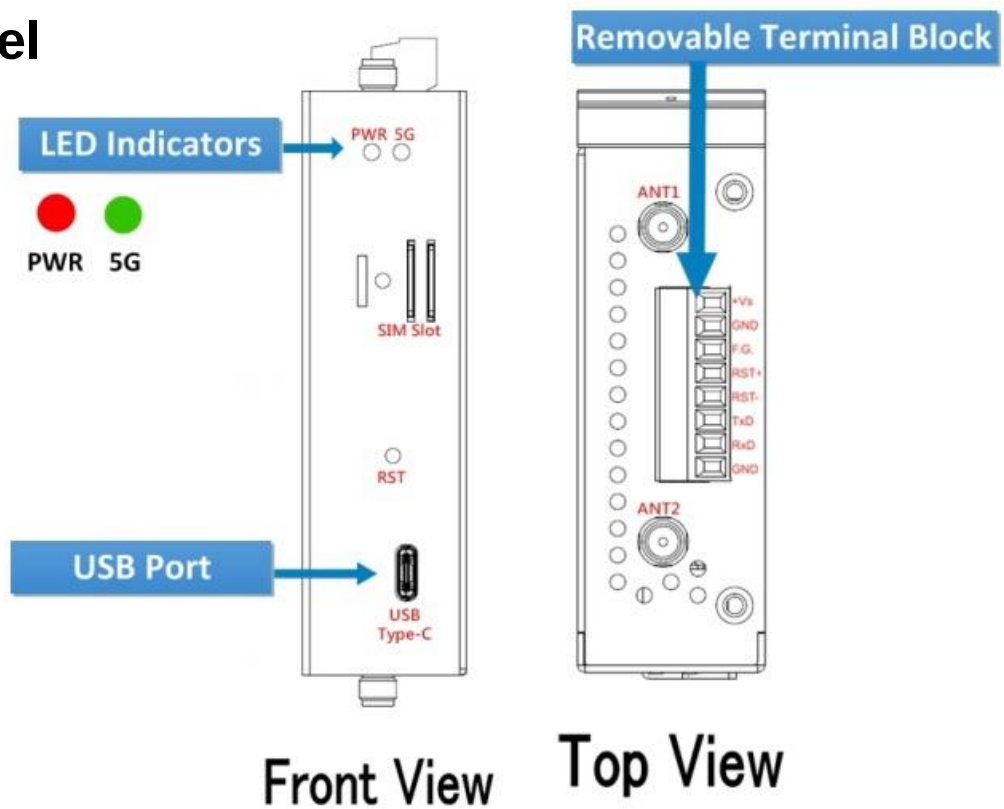


2. Pin Assignments

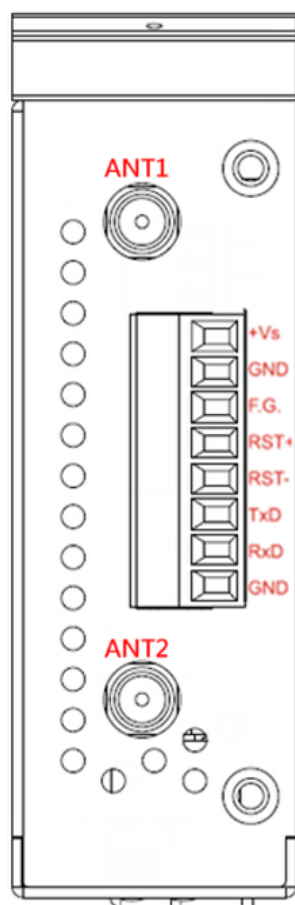

Top View


Power Input +10 ~ +30 VDC	+Vs
	GND
Frame Ground	F.G.
Reset	RST+
	RST-
RS-232	TxD
	RxD
	GND

3. Installation

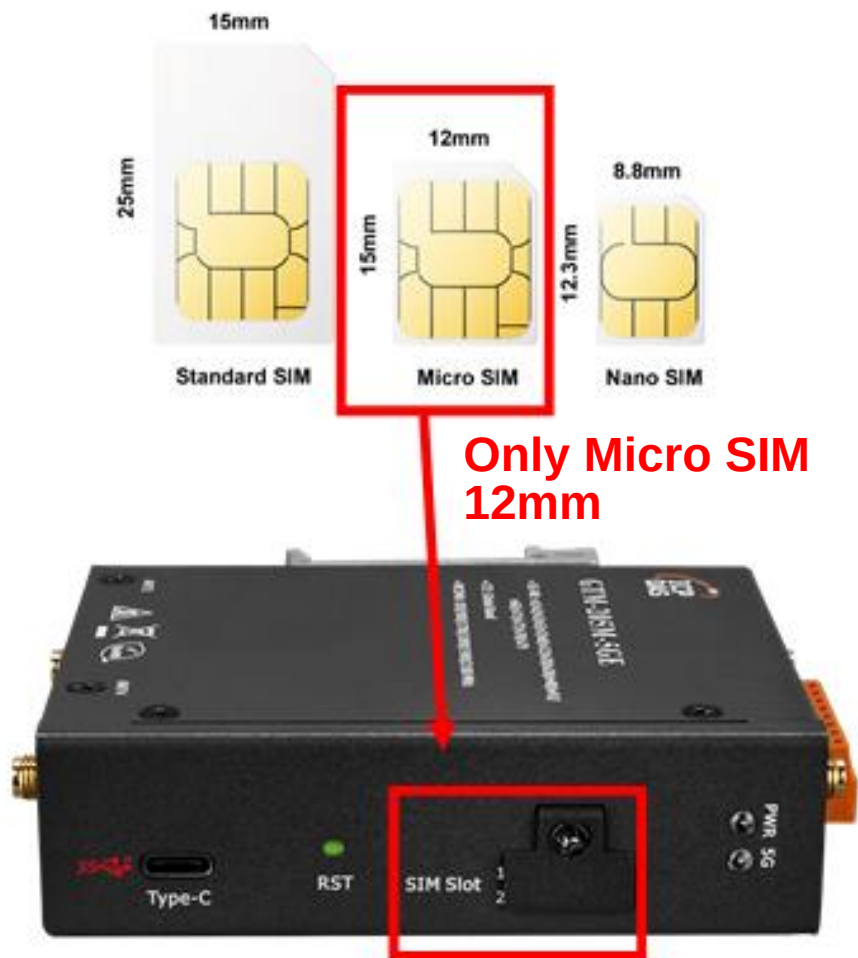


4. Quick Test

After installing the USB Driver, the device manager will generate a modem project:

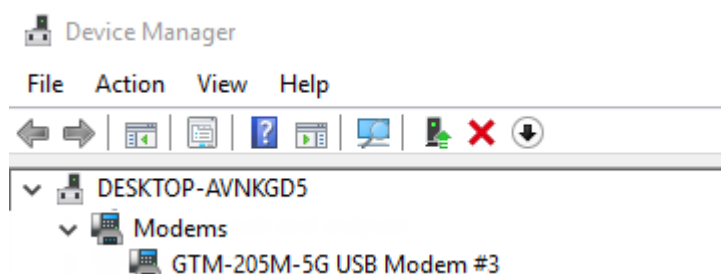

Right-click on the content, and press the query modem in the diagnostic sub-item

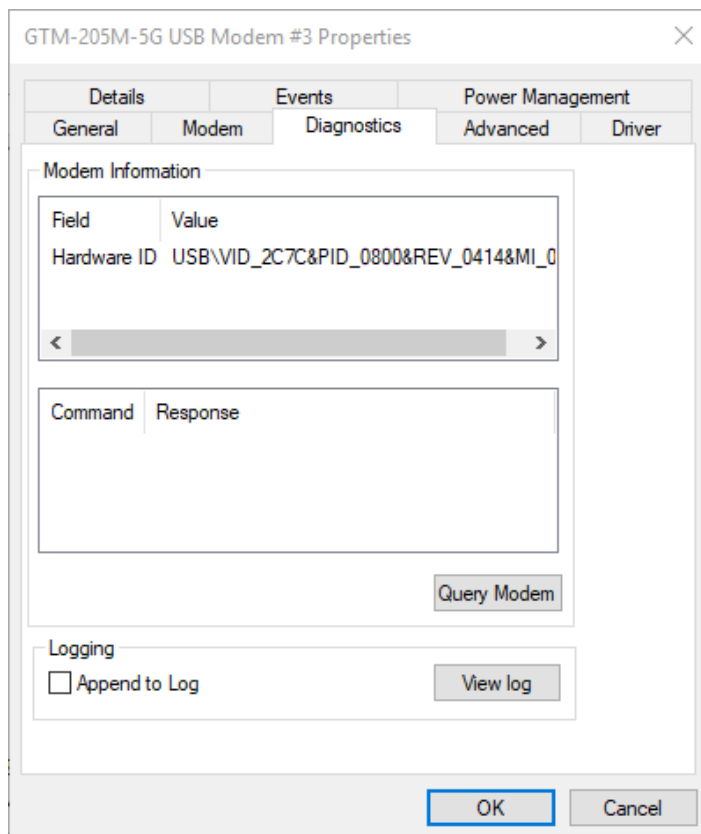

After the query is completed, the related AT Command will appear:

