

Packing List

In addition to this guide, the package includes the following items:



CAN-2022C



Screw Driver



Quick Start

Resources

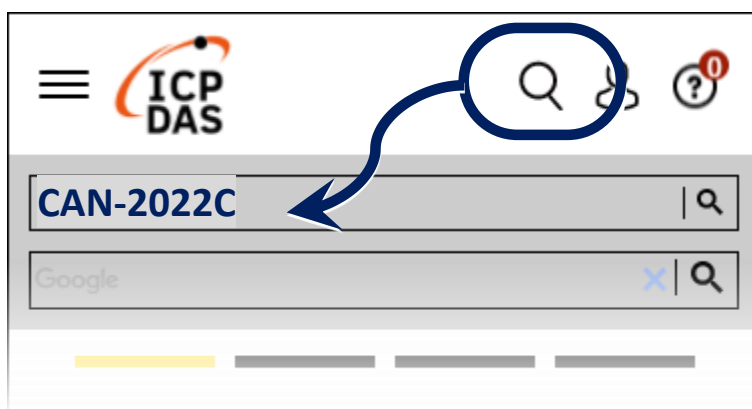
How to search for drivers, manuals and spec information on ICP DAS website.

Technical Support

service@icpdas.com

www.icpdas.com

- For Mobile Web




- For Desktop Web









1 Node ID, baud rate and terminal resistance

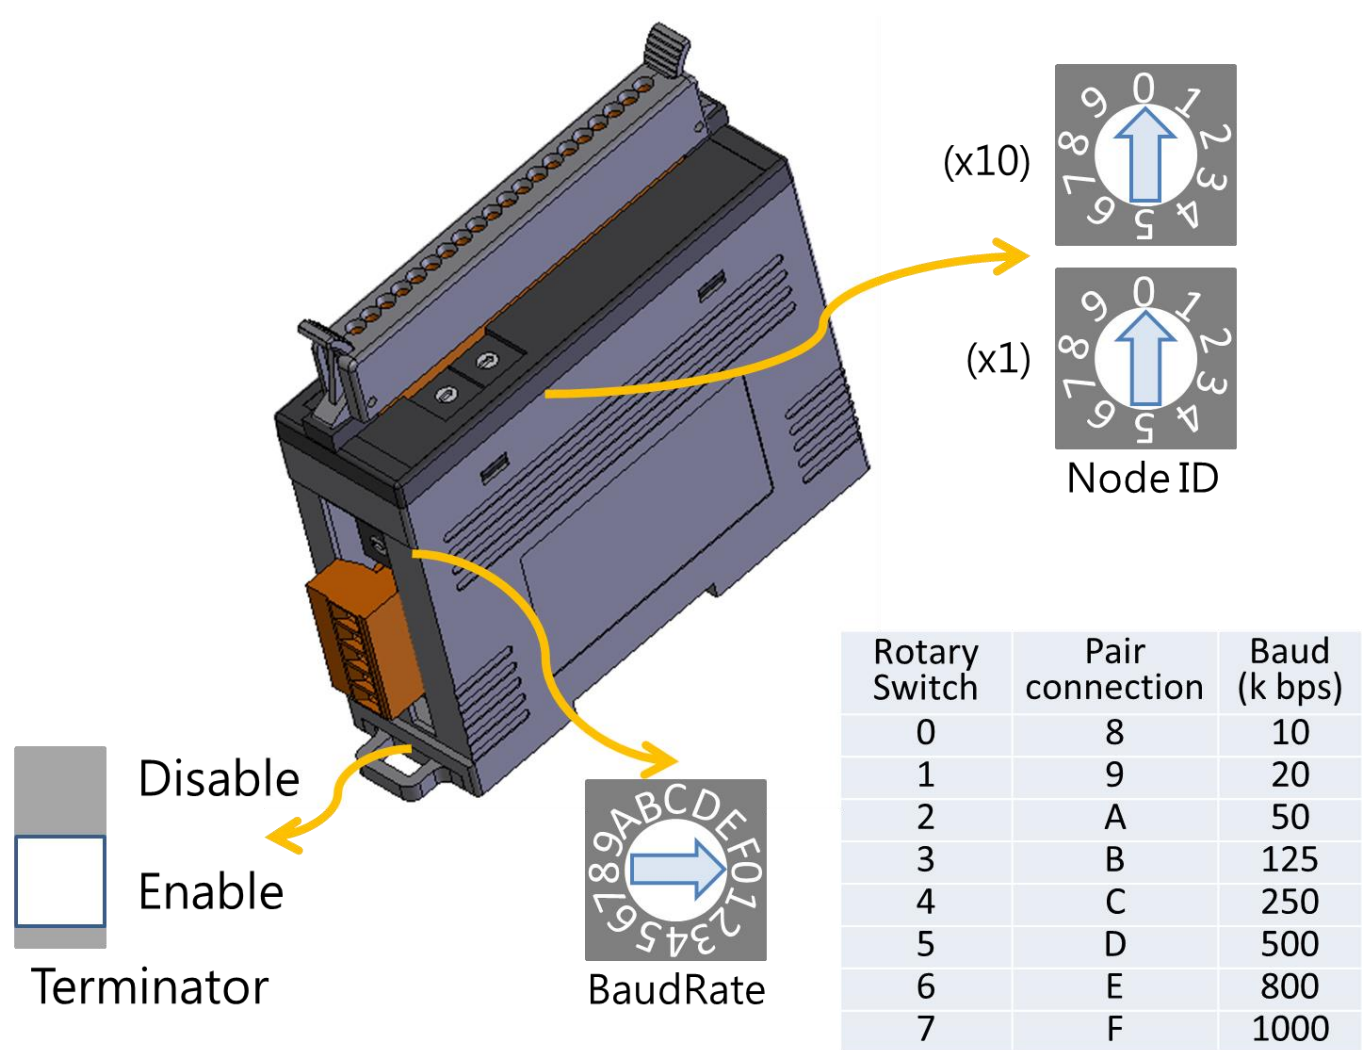According to the user's requirements for CANopen network, set the node ID and CAN baud rate of this module on the CANopen network. If the module is located at the terminal of the network, according to the standard CANopen network specification, this module must enable the terminal resistance.




2 I/O channel connection

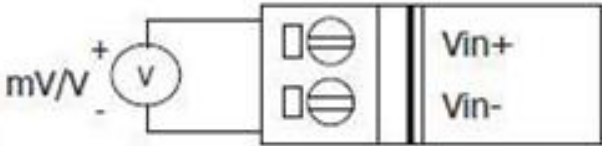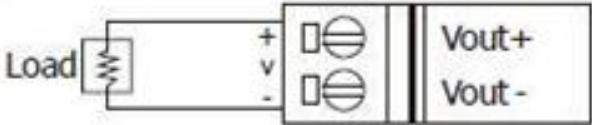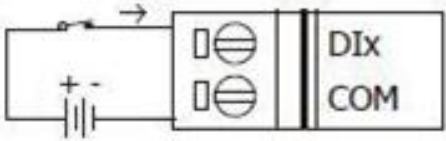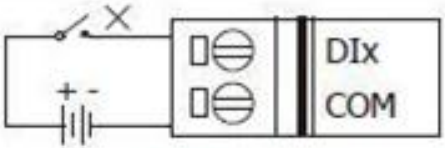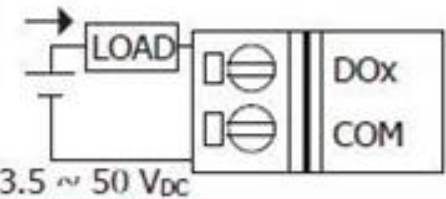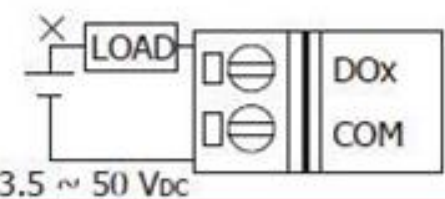
Voltage Input		
		
Voltage Output		
		
Digital Input/Counter	ON State Readback as 1	OFF State Readback as 0
Wet Contact (Sink)		
Digital Output	ON State Readback as 1	OFF State Readback as 0
Open Collector (Sink)	 3.5 ~ 50 V_{DC}	 3.5 ~ 50 V_{DC}

3 CAN port connection

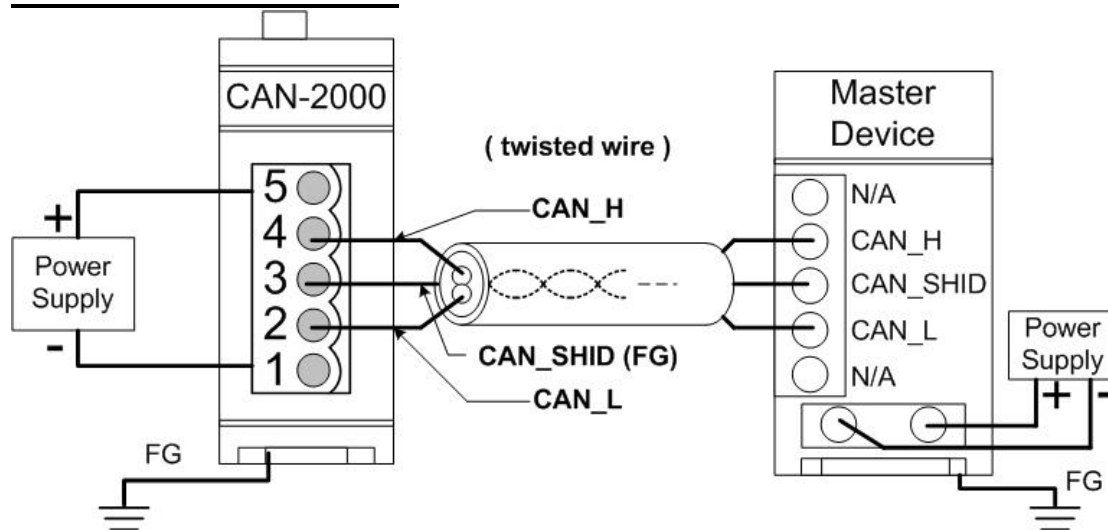2-wire Connection



3-wire Connection

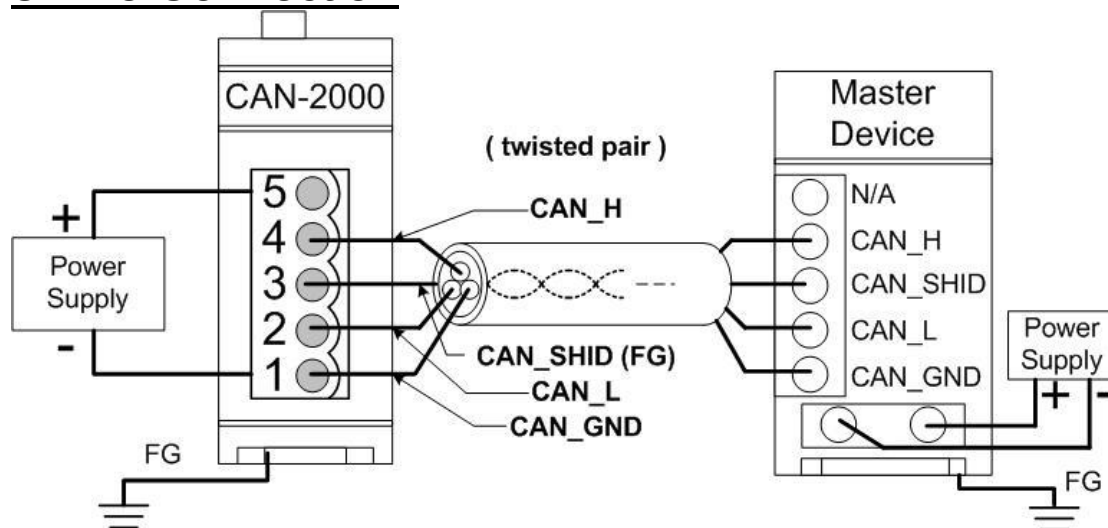

4-wire Connection

