
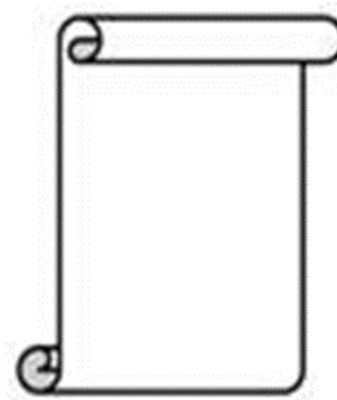


Packing List

In addition to this guide, the package includes the following items:

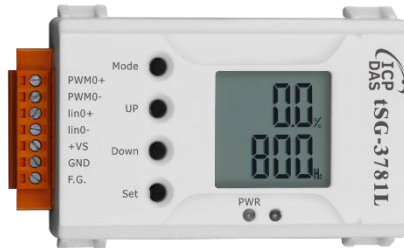

tSG-3781B or tSG-3781L

Quick Start

Resources

Technical Support


service@icpdas.com

www.icpdas.com



How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

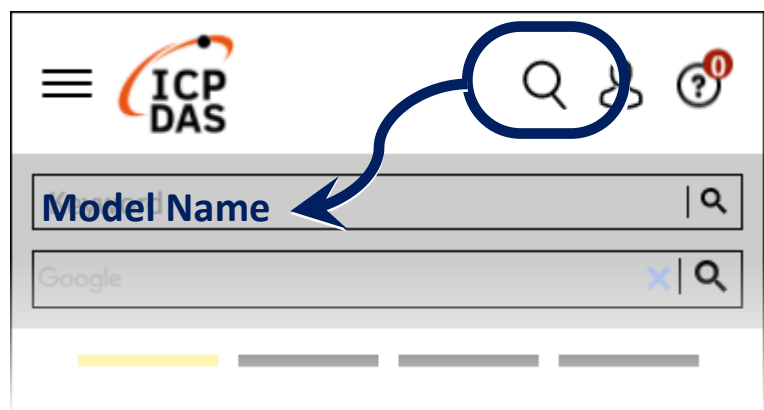

- For Desktop Web



PWM Frequency setting

Mode	Modify the frequency, the frequency value starts flashing.
Up	Increase the frequency, and long press to increase quickly.
Down	Decrease the frequency, and long press to decrease quickly.
Set	Save the modified value. the frequency value stops flashing. Press MODE during the modification to stop the modification.

