

Packing List

In addition to this guide, the package includes the following items :



BNET-2119M



Screw Driver (1C016)

Resources


How to search for drivers, manuals and spec information on ICP DAS website.

Technical Support

service@icpdas.com

www.icpdas.com


- For Mobile Web

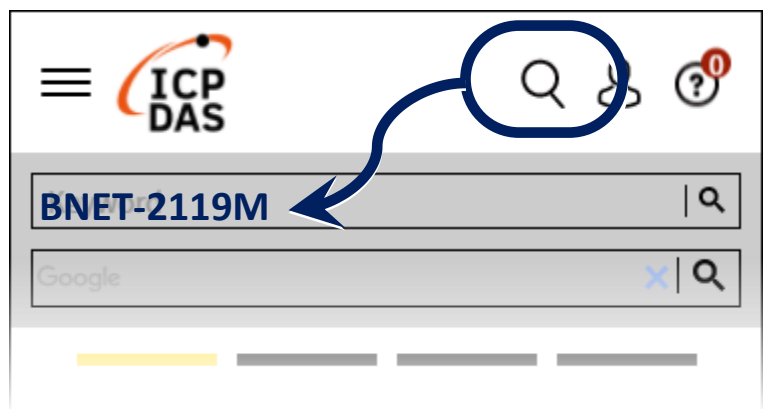

- For Desktop Web





BNET-2119M Pin Assignment

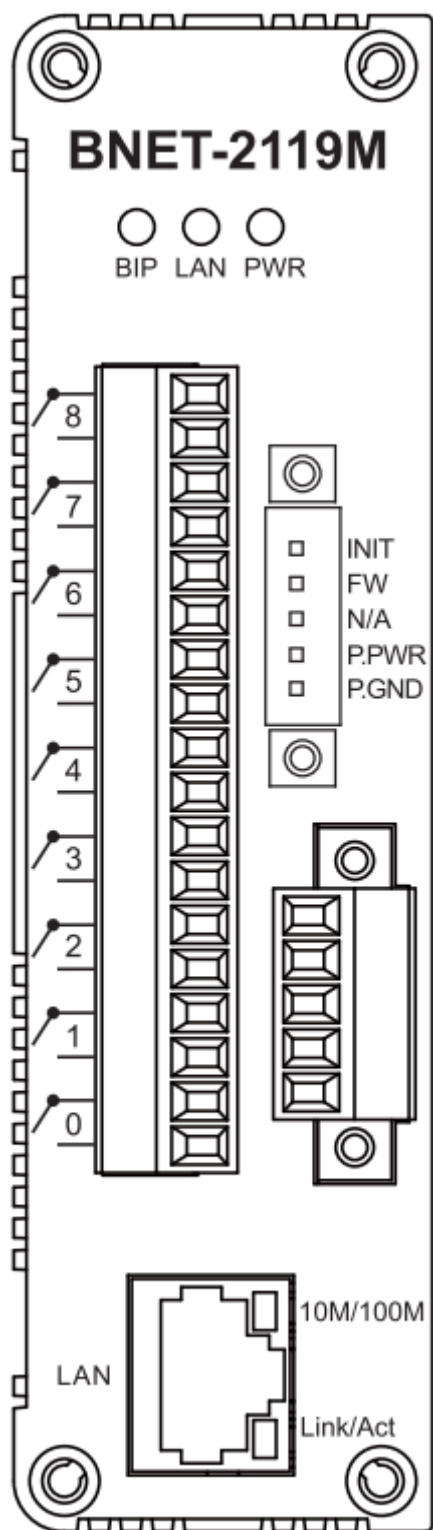

Power Input & Special functionality	
Pin	Description
INIT	For restoring default account, password, or IP address. Please refer to the chapter 3 of the manual.
FW	For updating the firmware. Please refer to the chapter 4 of the manual.
N/A	Don't care.
P.PWR	DC Power 10V ~ 30V input
P.GND	DC Power GND

Digital output pins description	
8	Relay 8 COM Relay 8 NO
7	Relay 7 COM Relay 7 NO
6	Relay 6 COM Relay 6 NO
5	Relay 5 COM Relay 5 NO
4	Relay 4 COM Relay 4 NO
3	Relay 3 COM Relay 3 NO
2	Relay 2 COM Relay 2 NO
1	Relay 1 COM Relay 1 NO
0	Relay 0 COM Relay 0 NO

BNET-2119M Wire Connection

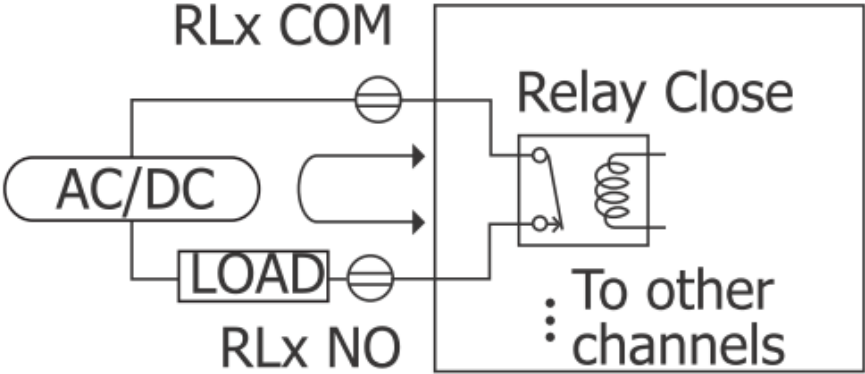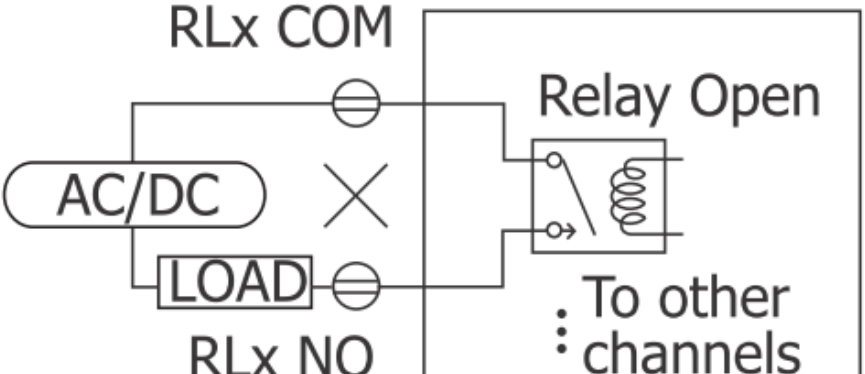Relay Output	Wire Connection
ON State	 The diagram for the ON state shows a circuit where an AC/DC power source is connected to a load. The load is connected to the RLx NO (Normally Open) terminal. The RLx COM (Common) terminal is connected to the other side of the load. The RLx NO terminal is also connected to the Relay Close contact. The Relay Close contact is shown as a closed switch. The other side of the Relay Close contact is connected to the other side of the load. The text 'To other channels' is shown below the Relay Close contact.
OFF State	 The diagram for the OFF state shows a circuit where an AC/DC power source is connected to a load. The load is connected to the RLx NO (Normally Open) terminal. The RLx COM (Common) terminal is connected to the other side of the load. The RLx NO terminal is also connected to the Relay Open contact. The Relay Open contact is shown as an open switch. The other side of the Relay Open contact is connected to the other side of the load. The text 'To other channels' is shown below the Relay Open contact.

BNET-2119M LED Indication

LED	LED Status	BNET-2119M Status
All LED	Light up each one in turn	Firmware update mode.
	Blinks once in 500ms	Initial mode
PWR	ON	Power on.
	Blinks every 500ms	Hardware failure.
LAN	ON	The Ethernet cable is connected to the switch.
	OFF	The Ethernet cable is not connected to the switch.
BIP	ON	Receiving BACnet/IP messages or is communicating with client.
	Blinks every 500ms	Idle.
	OFF	The Ethernet cable is not connected to the switch.

BNET-2119M Web Connection

BNET-2119M Factory Default and Initial Mode			
Network Information	IP	192.168.255.1	Network parameters can be changed according to your application.
	Mask	255.255.0.0	
	Gateway	192.168.0.1	

BNET-2119M Login Information

The default login information is as follows.

Account: admin

Password: admin



Account:

Password: