



PMC-2841M-4GE / PMC-2841M-4GC

Quick Start

v1.0, June 2026

Packing List

In addition to this guide, the package includes the following items:



PMC-2841M-4GE
PMC-2841M-4GC



Antenna
(ANT-421-04)



MicroSD card and
Micro SD/SD
adapter



Screw Driver
2.4mm
(1C016)



Pin Terminal
x 16

Technical Support


service@icpdas.com

www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

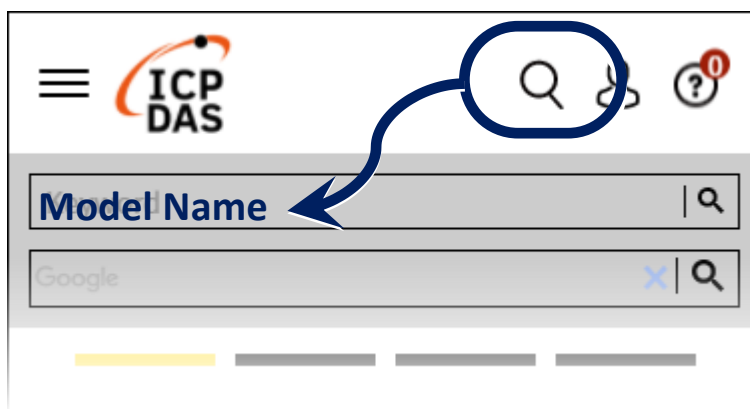


- For Desktop Web




1. Configuring the boot mode

Before starting PMC-2841M-4GE/4GC at the first time, be sure that the switch is placed in the “0” position.

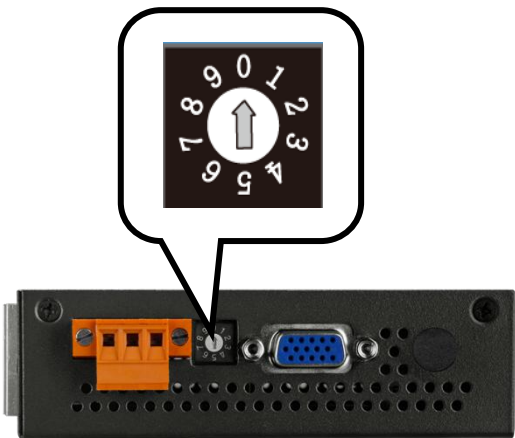

2. Checking the network setting


The PMC-2841M-4GE/4GC comes with the default IP setting:

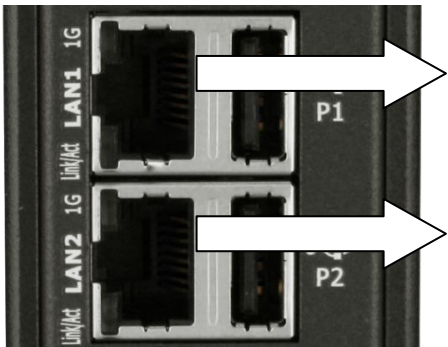

LAN1	Default
Network Setting	DHCP
LAN2	Default
IP	192.168.255.1
Mask	255.255.0.0
Gateway	192.168.0.1

3. Go to PMC-2841M-4GE/4GC's web site

- Open a browser, and type in the URL address of the PMC-2841M-4GE/4GC.

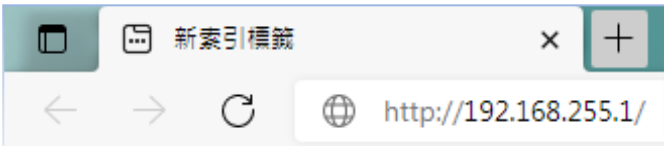

- You have to set the password before the first time to login.



Power Monitoring & Management Solution
ICP DAS Co., Ltd.

When using PMC for the first time, please set up a new password for the administrator:

New Password

✖ Length must be between 8 and 20 characters

✖ At least 1 uppercase letter (A-Z)

Retype New Password

Language:

English

Change password

- For more detail information, please refer to PMC-2841M-4GE/4GC's User Manual.