

How to update the Firmware of AR series?

Step 1: Get Firmware_Update_Tool utility


The Firmware Update utility, FW_Update_Tool_v3.xx.exe (where x denotes the utility version) can be obtained from companion CD or our FTP site:

CD:\ar\utility\fw_update_tool\

ftp://ftp.icpdas.com/pub/cd/ar/utility/fw_update_tool/

Step 2: Adjust Init. dip switch


Set Init. Dip switch to 『BOOT』

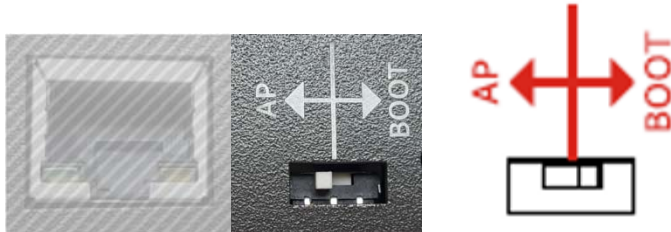

Step 3: Into Bootloader mode

Re-power up,

and confirm that DAQ_ST led and SD_ST led are fast flashing.

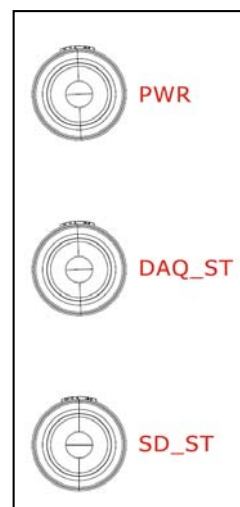

Step 4: Start Update

