



How to show diagnostic message at SIMATIC STEP 7

Please follow the step:


Step 1 : Double click "Hardware"

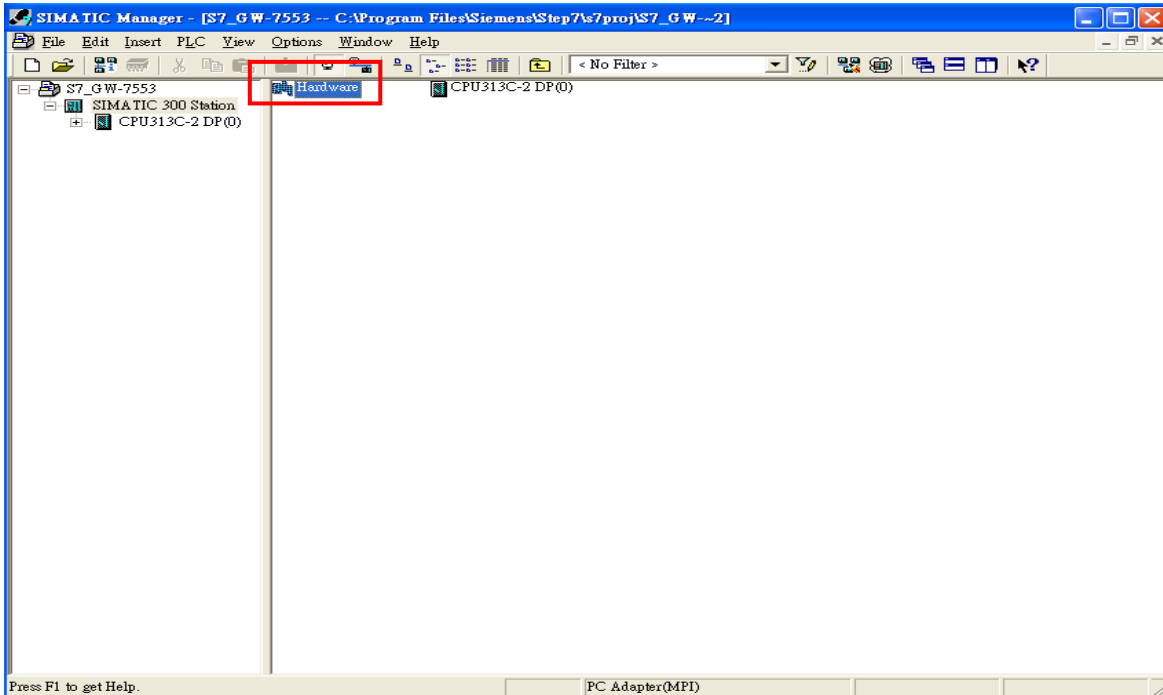

Step 2: Click GW-7553 icon

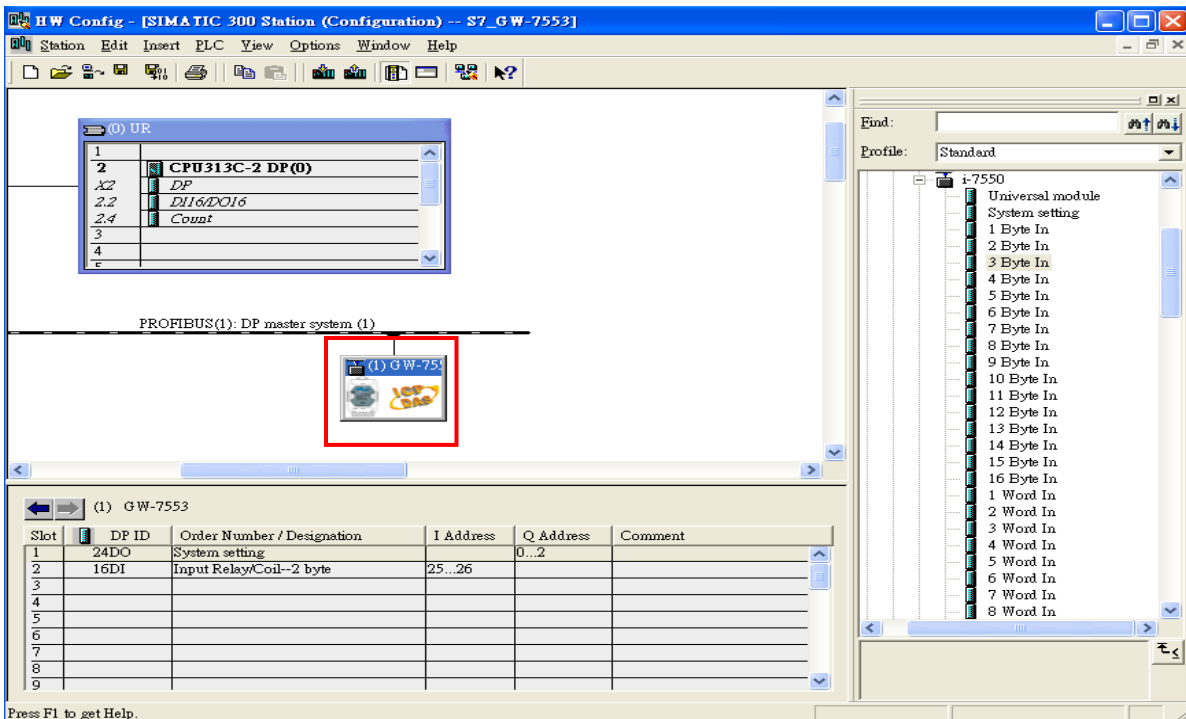

Step 3: Select PLC->Module Information

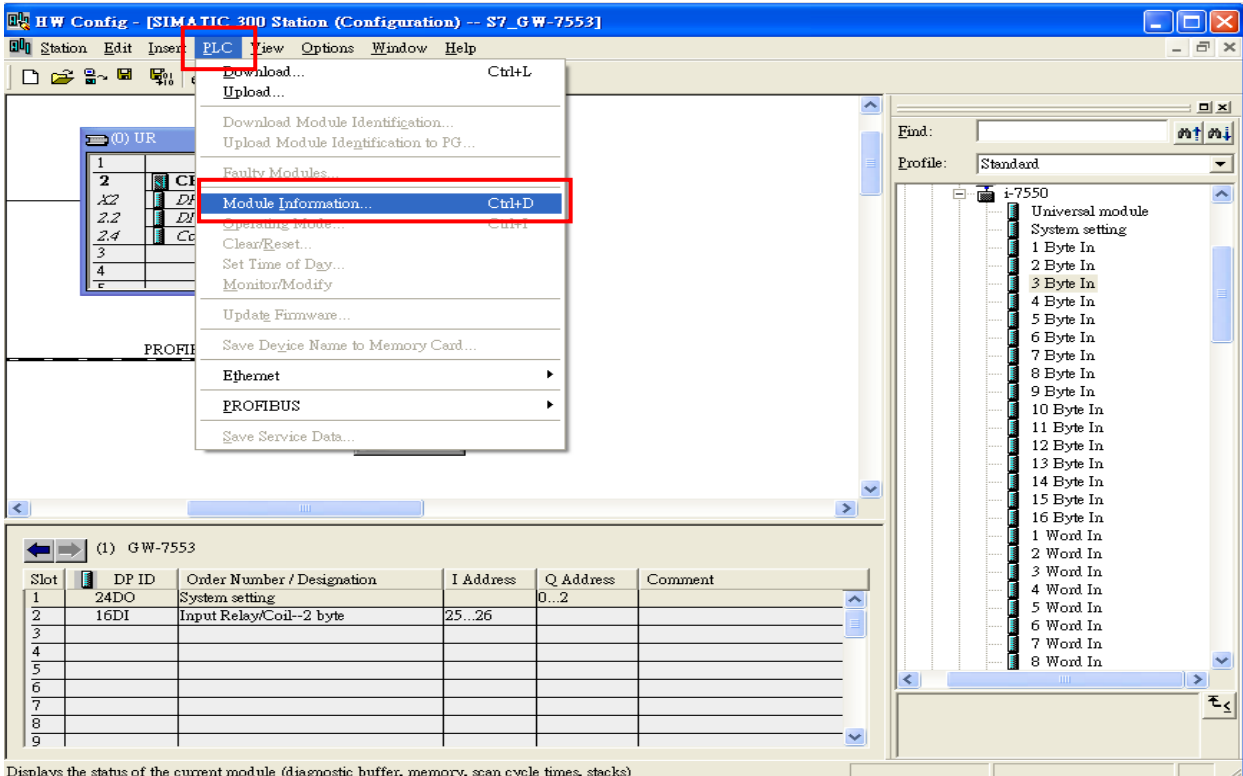

Step 4: Select "DP Slave Diagnostics" to show diagnostic message

