



# How to show diagnostic message at SIMATIC STEP 7

Please follow the step:


Step 1 : Double click "Hardware"

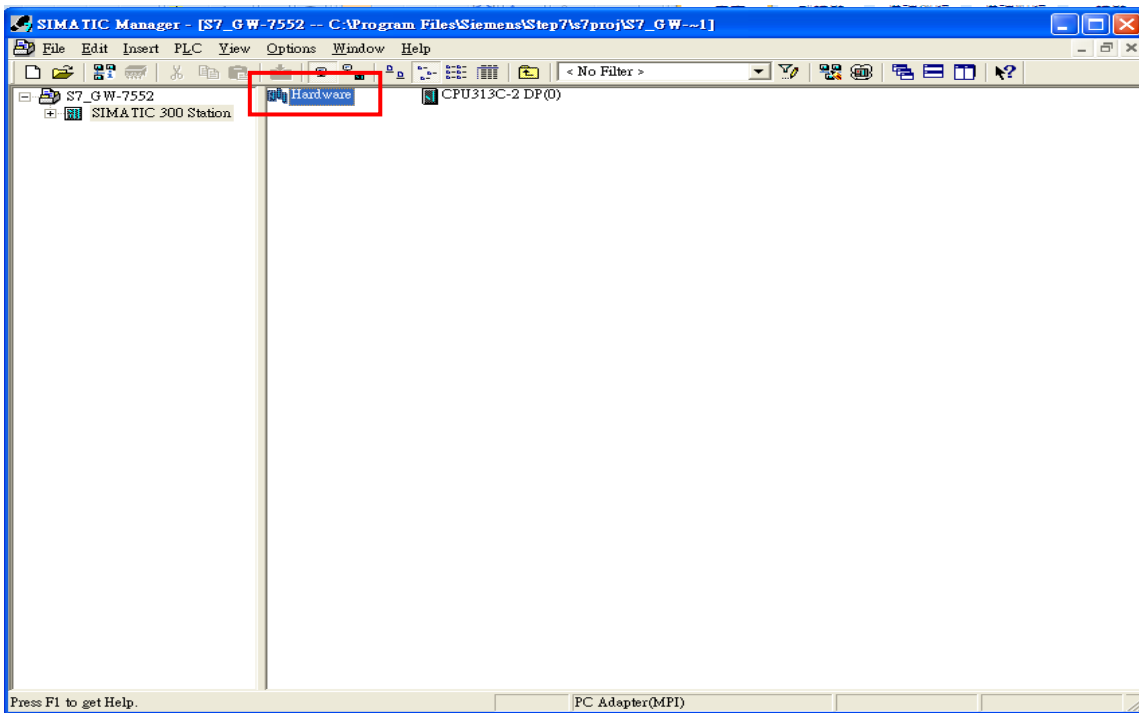

Step 2: Click GW-7552 icon

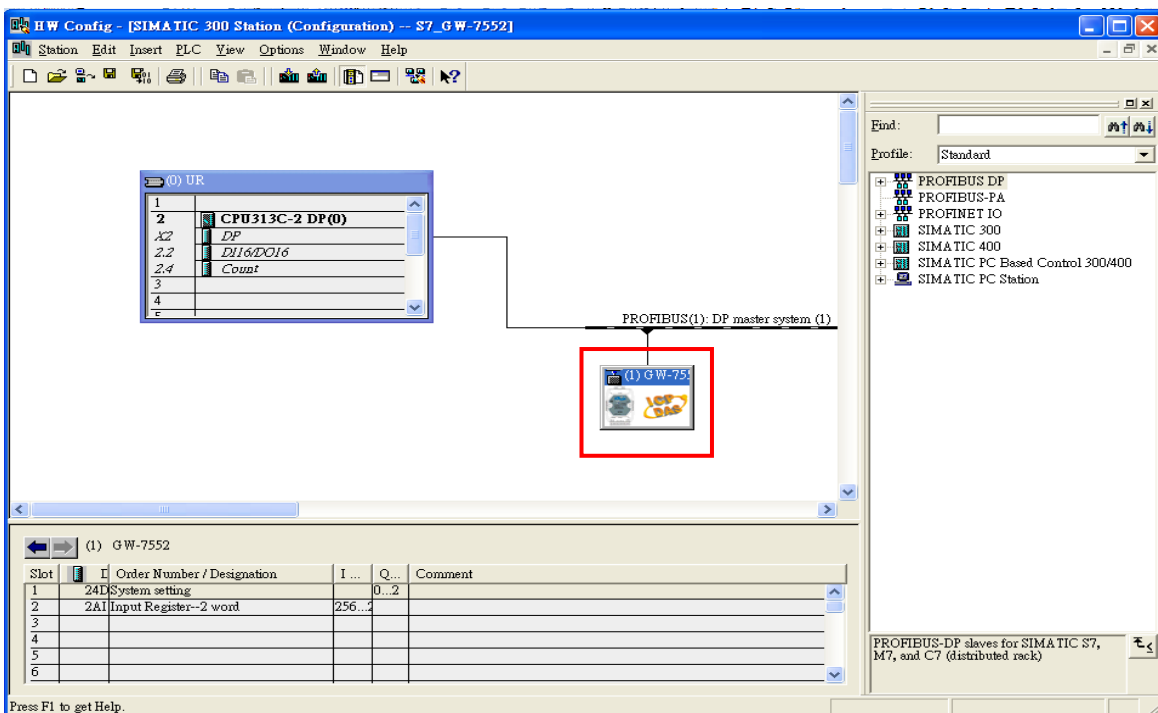

### Step 3: Select PLC->Module Information

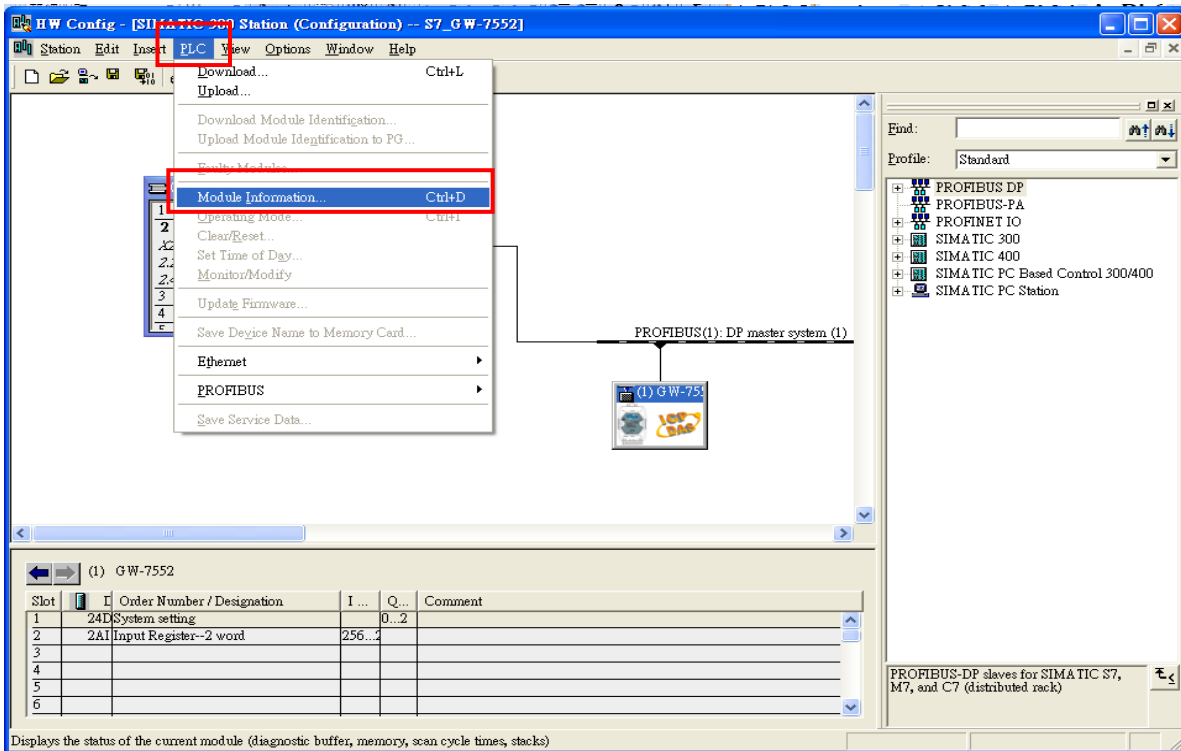

### Step 4: Select "DP Slave Diagnostics" to show diagnostic message

