

Classification	System and Application FAQ on WinCE PAC				No.	1-009-01	
Author	Tunglu-Yu	Version	1.0.0	Date	2010/2/12	Page	1/3

How to change the display type for WP-8x4x

Applies to:

Platform	OS version	WinPAC/ViewPAC utility version
WP-8x3x	N/A	N/A
WP-8x4x	All versions *1	All versions
VP-25W1	N/A	N/A
VP-23W1	N/A	N/A

*1: VGA resolution 800 * 600 is applied for all version of WP-8x4x.

VGA resolution 640 * 480 is valid on OS V1.3.0.0 and later of WP-8x4x.

N/A: Not applicable to this platform and OS.

The default display resolution for WP-8x4x is “800*600”. You can change the display resolution depending on your preferences by the following steps.


Tips & Warnings



If your monitor doesn't support the display mode that you set, the monitor may not display correctly.

Step 1: Change the display resolution.


1.1. Start the WinPAC utility on the desktop, select the display resolution and then press “Setting” button.

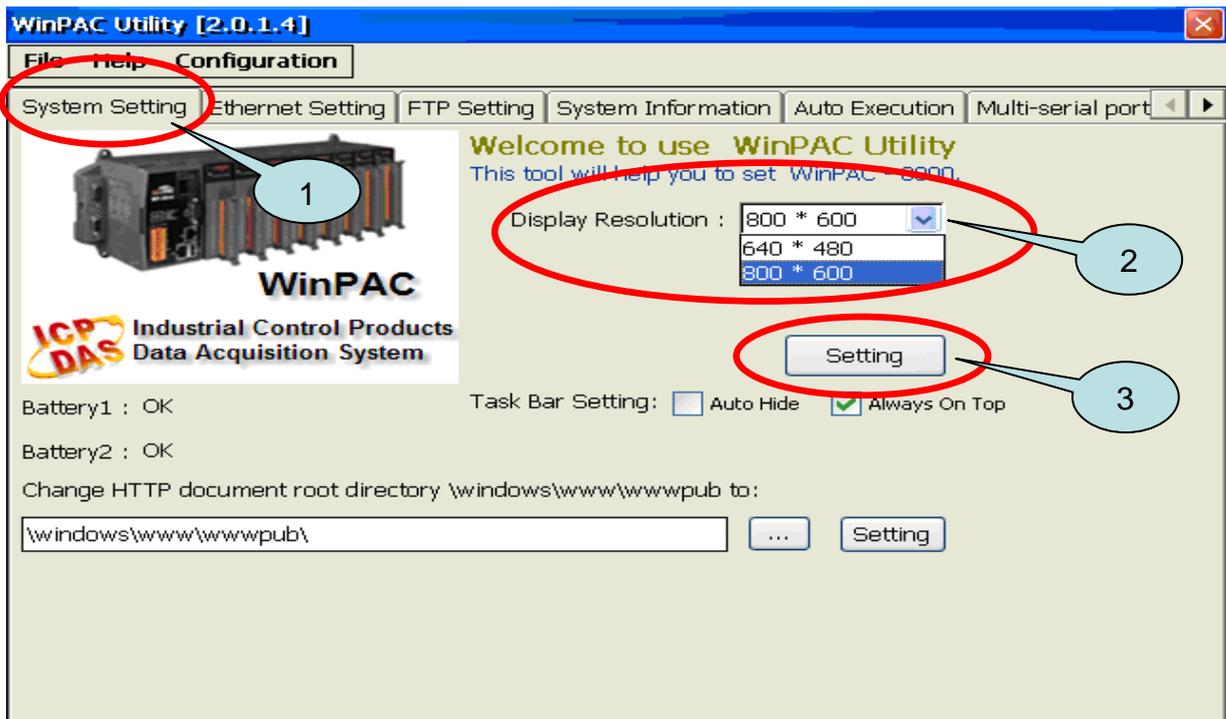

Classification	System and Application FAQ on WinCE PAC				No.	1-009-01	
Author	Tunglu-Yu	Version	1.0.0	Date	2010/2/12	Page	2/3

Step 2: Save and Reboot your WinPAC.

- 2.1. Start the WinPAC utility on the desktop and click **"File"→"Save and Reboot"**.
- 2.2. Click the **"Yes"** button and wait for the device to reboot.

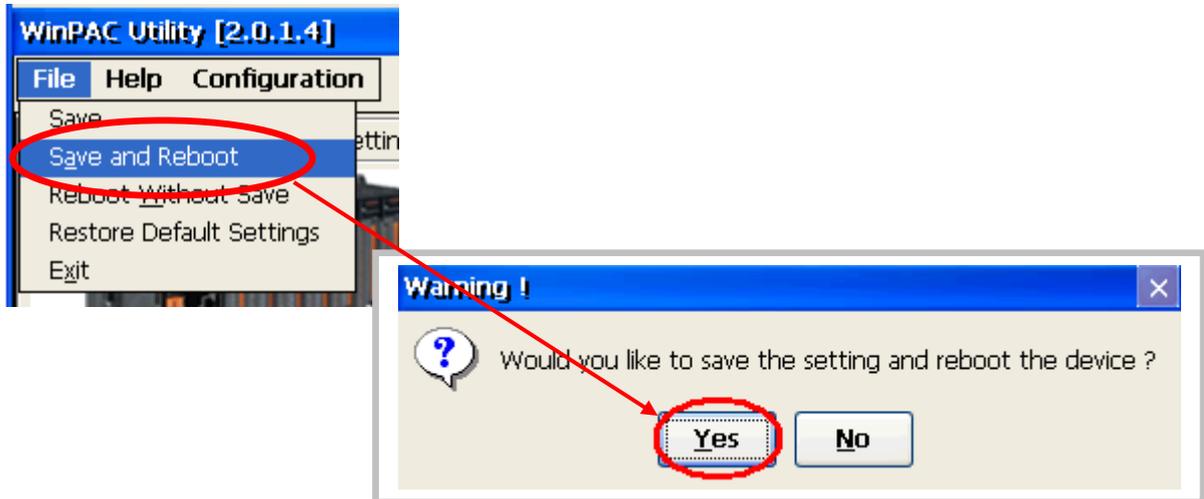

Tips & Warnings



If nothing displayed on your monitor while booting, the display settings selected on the WP-8x4x may be not be supported by your monitor.

*Please see the document **"W1-009-03: How to change the display type for WP-8x4x when display out of range"** for more details.*

Classification	System and Application FAQ on WinCE PAC				No.	1-009-01	
Author	Tunglu-Yu	Version	1.0.0	Date	2010/2/12	Page	3/3

Revision History

Revision	Date	Description
1.0.0	2010/02/12	Initial release