Classification	System and Application FAQ on WinCE PAC					No.	1-005-07
Author	Eric_Shiu	Version	1.0.1	Date	2018/4/27	Page	1/2

How to calibrate a ViewPAC touch panel

Applies to:

Platform	OS version	WinPAC/ViewPAC utility version		
ViewPAC	All versions	All versions		

N/A: Not applicable to this platform and OS.

The touch screen has function with the default calibration. It is necessary to calibrate your screen when it works not precise.

1) Run the 05 Point Calibration.exe on the desktop.						
Image: Construction						
ICP DAS Co., Ltd. Technical document						

Classification	System and Application FAQ on WinCE PAC					No.	1-005-07
Author	Eric_Shiu	Version	1.0.1	Date	2018/4/27	Page	2/2

3) Tap the touch pen in the exact center of each of the calibration markers (+)



4) Touch the panel to finish the calibration program
5) Run the View PAC Utility to save the settings and reboot the View PAC