Classification	System and Ap	No.	2-003-00				
Author	Eric_Shiu	Version	1.0.0	Date	2018/04/27	Page	1/3

How to set the startup programs on WinCE PAC

Appli	ies to:		
	Platform	OS Version	PAC Utility Version
	WinPAC	All Versions	All Versions
	ViewPAC	All Versions	All Versions
	ViewPAC	All Versions	All Versions

In PAC utility, it offers an easy-to-use interface to manage the startup programs. The programs which are set in the utility will run automatically at system startup.

Here we illustrate the steps of how to set the startup programs and clear those settings.

Part 1. Set the startup programs

Setp1. Start the PAC Utility on the desktop and then select the

"Auto Execution" tag.

	5		
PAC Utility [1.2.2.	.1]		
File Help			
General Display I	P Config Network	Device Information Auto Execution	Rotary Execution ML
		Delay Auto Execution	Delay Time(Sec)
	Program 1:	\System_Disk\Tools\Vcep\v_remot	Browse
	Program 2:		Browse

Step2. Click the "Browse" button and then select the program you want to run automatically

after PAC boot-up.

General Display IP (Config Network Device Information Auto Execution Rotary Execution 1	VIL 🔹 🕨
	Delay Auto Execution Delay Nor Program 1: Browse	≥((`~~`)
At most 10 program can be specified to execute automatical at system startup.	Proc Open : Mindows SendToCOM Proc Vindows SendToCOM Proc 3G_Noden_power_OnOff COMNetClient Proc COMNetServer_CE Proc	DK ·
	Prog Name: SendToCOM Type: exe files (*.exe) Program 9: Browse C Program10: Browse C Work Schedule Clean Apply	

Step3. Click the "OK" button.

ICP DAS Co., Ltd. Technical document

Classification	System and A	pplication	FAQ on WinCE	PAC		No.	2-003-00	
Author	Eric_Shiu	Version	1.0.0	Date	2018/04/27	Page	2/3	
Open E Vindow Vindow Vindow Vindow Vindow COMNet COMNet Step4. Clic		✓ Send	TOCOM hDog_new (*.exe)					
General Displ	ay IP Config Networ Program 1: Program 2: Program 3: Program 3: Program 4: Program 5: matically Program 5: Program 6: artup. Program 7: Program 8: Program 9: Program 10:	k Device Inform	hedule	Rotary Exect Del Browse Browse	ution M. ✓ ▶ lay Time(Sec) 0 0 0 0 0 0 0 0 0 0 0 0 0			
Step5. Reboot t Cl Save Cave and Reboo Reboot Restore Utility De Exit	he PAC, the s ick " File " → " efault Settings	Reboot > Y	ning ! Are you sure	to reboot	this device ?			
Part 2. Clea	ar the star	tup pro	ograms se	ettings	5			
	ICP DAS Co., Ltd. Technical document							

Classification	System and Ap	No.	2-003-00				
Author	Eric_Shiu	Version	1.0.0	Date	2018/04/27	Page	3/3

Step1. Start the WinPAC/ViewPAC Utility click the "Auto Execution" tag.

PAC Utility [1.2.2.	.1]		_	. 🗆 ×
File Help		\sim		
General Display I	P Config Network	Device Information Auto Execution	Rotary Execution	ML◀►
		Delay Auto Execution	Delay Tin	ne(Sec)
	Program 1:	\System_Disk\Tools\Vcep\v_remot	Browse	0
	Program 2:		Browse	0

Step2. Click the "Clean" button .

General	Display 🗌	IP Config	Network	Device Inform	mation A	uto Execution	Rota	ry Execution	Mi≝I
				🗌 Delay Au	uto Execut	tion		Delay Tir	me(Sec)
			ogram 1:	\System_Di	isk\SendTa	oCOM.exe	C	Browse	0
		Pro	ogram 2:					Browse	0
- F		Pro	ogram 3:					Browse	0
		Pro	ogram 4:					Browse	0
At mos	At most 10 programs	ams Pro	gram 5:					Browse	0
execute	e automati	ically Pro	ogram 6:					Browse	0
at syste	em startup). Pro	ogram 7:					Browse	0
			ogram 8:					Browse	0
			ogram 9:					Browse	0
			ogram10:					Browse	0
				Work Sc	hedule	Clean	\supset	Apply	

Step3. Click the "Apply" button to save setting.

General Display IP	Config Network	Device Information	Auto Execution	Rotary Execution	ոլ Mվ
		🔲 Delay Auto Exec	ution	Delay 1	Time(S
	Program 1:			Browse	0
	Program 2:			Browse	0
	Program 3:			Browse	0
less of the second s	Program 4:			Browse	0
At most 10 program	ns Program 5:			Browse	0
execute automatica	ally Program 6:			Browse	0
at system startup.	Program 7:			Browse	0
	Program 8:			Browse	0
	Program 9:			Browse	0
	Program10:			Browse	0
		Work Schedule	Clean	Apply	>

0