(Classification	System and Ap	System and Application FAQ on XPAC					2-015-00
ŀ	Author	Tunglu-Yu	Version	1.0.0	Date	2018/03/27	Page	1/2

How to use AutoRun in plugging USB Disk

Applies to:

	Platform	OS Version	PAC Utility Version			
	WinPAC	All Versions	All Versions			
	ViewPAC	All Versions	All Versions			
-						

You have to complete two parts, add file "AutorunCE.inf" in flash device, and enable this function at PAC_Utility

📕 AutorunCE.inf

1 [autorun]

3

2 OPEN=XXX.exe

🗋 🚰 🗔 🔙 🧉 (° 🖌 🖬 🛍

Part 1: Add file "AutorunCE.inf" in flash device

Copy this block to your AutorunCE.inf

[autorun] OPEN=xxx.exe

This simple AutorunCE.inf file specifies XXX.exe as the application to run when AutoRun is activated.

[autorun]

The autorun section contains the default AutoRun commands.

OPEN=XXX.exe

Specifies the path, file name to the application that AutoRun launches when a user plugging a flash device. It is the CreateProcess function that is called by AutoRun.

EX1: USB:\INotepad.exe	РА	AC Utility [1.2.2.1]					
\rightarrow OPEN=INotepad.exe	F	File Help					
EX2: USB:\NEW Folder\INd	otepad.exe	General 🚺 isplay IP Config Network Device Information Auto Execution Rotary Execution Mu					
\rightarrow OPEN=NEW Folder\INo	tepad.exe	Welcome to use PAC Utility This tool will help you easy to use PAC CE series.					
		PAC Utility Task Bar setting:					
	_	Always On Top					
		HIVE Registry: Auto Save To Flash (Default) Maunal Save To Flash					
		Backplane Battery Battery1 : OK OK Enable Autorun in plugging Micro SD					
		Configure the synchronization with a time server Configure					
ICP DAS Co., Ltd. Technical document							

Classification	System and Application FAQ on XPAC					No.	2-015-00
Author	Tunglu-Yu	Version	1.0.0	Date	2018/03/27	Page	2/2

Part2: Enable this function at PAC_Utility

Open PAC_Utility, and then select tab "General".Click checkbox "Enable Autorun in plugging USB Disk" and reboot.



ICP DAS Co., Ltd. Technical document