

Classification	System and Application FAQ on WinCE PAC				No.	2-030-00	
Author	Eric-Shiu	Version	1.0.0	Date	2018/8/03	Page	1/2

How to use the automatic sequential delay start function


Applies to:

Platform	OS version	WinPAC/ViewPAC utility version
WP-9xxx	All versions	All versions
WP-8x2x	All versions	All versions
WP-5231	All versions	All versions

N/A: Not applicable to this platform and OS.


Please follow the steps below to set :

Step 1: Open PAC_Utility → Choose AutoExecution Page

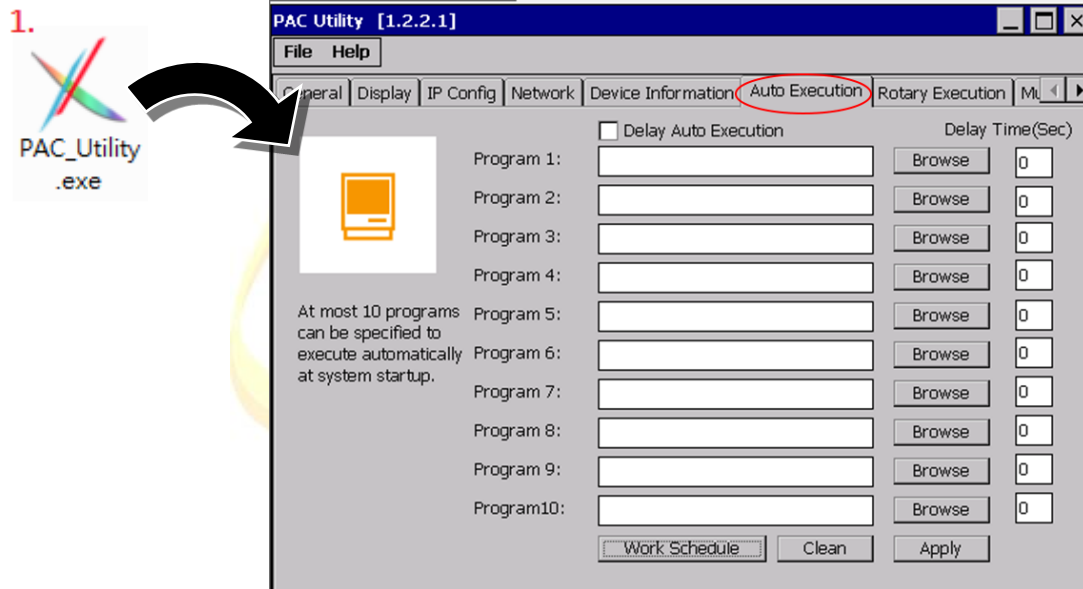

Classification	System and Application FAQ on WinCE PAC				No.	2-030-00	
Author	Eric-Shiu	Version	1.0.0	Date	2018/8/03	Page	2/2

Step 2: Setting

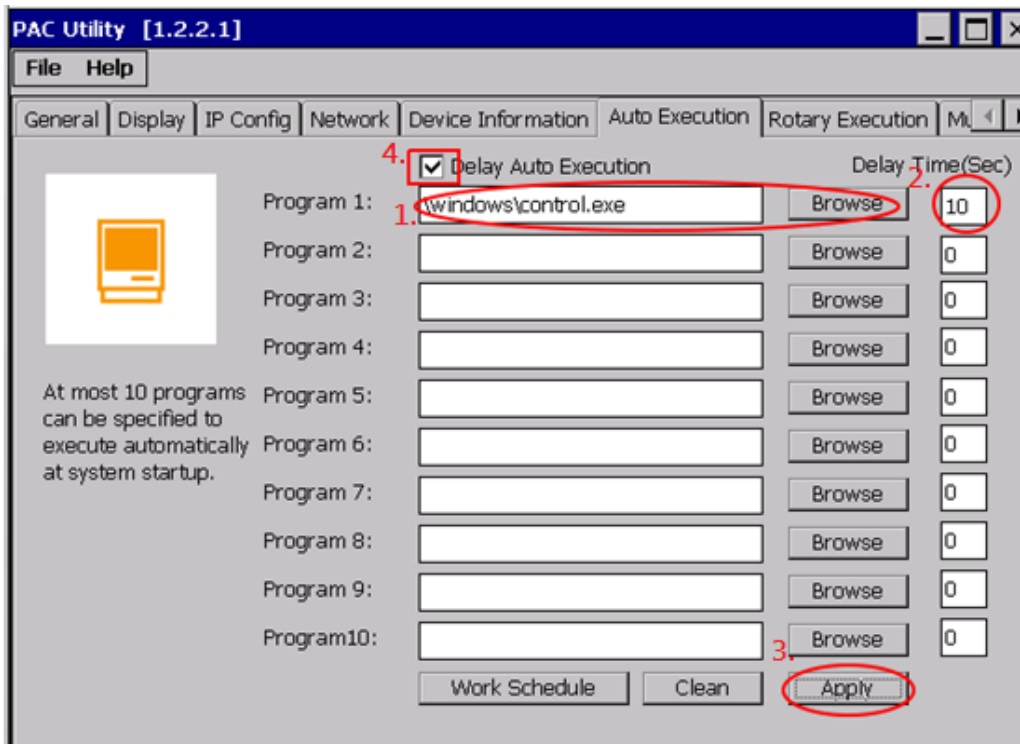

- 2.1. Click "Browse" to select the program to be executed automatically after booting.
- 2.2. The setting should be delayed after a few seconds (each program is started only a few seconds after the previous program is turned on. If the first program is set to 10 Seconds and the second program are set to 15 seconds, the second program will be in Executed 15 seconds after the first program is executed)
- 2.3. Click "Apply" to save settings.
- 2.4. If there is a set delay start, the field will be ticked when stored. If there is no set time, the field will be automatically canceled when it is saved.