

分類/Classification	🗆 tDS	□ tGW	D PETL/tET/tPET	T 🛛 DS/PDS/PP	DS 🗹 Tou	ichPAD
	□ I/O Card		UVXC Card	□ VxComm	🗆 Oth	ier
作者/Author			日期/Date		編號/NO.	FAQ007

## 問題: 如何使用 TPD-283、TPD-283-BK 的強制更新 (Force Update) 模式?

答: TPD-283, TPD-283-BK 有以下三種模式,可在裝置背面找到。

項次	模式	說明
0	Run & Update	執行&更新
1	Force Update	強制更新
2	Run Only	僅供執行

請在使用手冊參考細節及這三種模式。

一般情況下, TPD-283 通常使用「模式 0」, "Run & Update" 來更新程式

如果「模式 0」發生錯誤, 則使用「模式 1」"Force Update", 以下為 Force Update 的步驟

1. 將旋轉開關轉至 1 進入強制更新模式 (需重新開機)。

2. 打開 HMIWorks, 點選項目 "執行" -> 設置裝置 -> 搜尋 TouchPAD, HMIWorks 將會搜尋 TPD 的 Mac address, 如無法尋找, 請按下重新整理按鍵或重新啟動 TPD。

Search for TouchPAD				
Refresh 🗆 Disa	ble UDP Filt	er	_	
IP Address	Port	MAC Address	escription	
0.0.0.0	6	00:00:80.82:02:58	CPDAS	
F				
No.				2
<u>QK</u> <u>C</u> ancel				



3. 客戶可在 TouchPAD 的背面找到正確的 MAC address。

4. 經由 force a load 模式設定 IP 至 TouchPAD。

Setup Ethernet Device		
Search for TouchPAD		
Host Information (PC) Host IP Address:	10.1.0.15	
Runtime Information (To	ouchPAD)	
Device Nickname:	ICPDAS	
IP Address Assignment	nent Method	
C Static IP	OHCP	C Runtime Setting
Device IP Address	0.0.0	(eg: 10.1.2.3)
Mask	255.265.0.0	
Gateway	192.168.255.254	
Download Information (	TouchPAD)	
	☐ Same as runtime Static IP	
IP address:	10.1.2.3	(eg: 10.1.2.3)
MAC address:	00:0D:E0:B2:01:12	(eg: 00:0D:E0:11:22:33)
	<u>Q</u> K <u>Cancel</u>	