

Classification	General Setting FAQ on EZ Data Logger				No.	1-010-01	
Author	Amber	Version	1.0.0	Date	2012/06/04	Page	1/1

## How to active Modbus driver?

Applies to:	
<i>Platform</i>	<i>OS version</i>
<i>PC</i>	<i>Windows 98/NT/2000/XP/Vista</i>

At least one ICP DAS Modbus device needs to be connected when you install Modbus drivers, then the Modbus drivers can access other Modbus devices like PLC.

The following ICPDAS device can be connected to active all the Modbus driver.

M7000 serial modules

I-7188EX-MTCP

ET-6000,

ISaGRAF controllers (I-8417/8817/8437/8837, I-7188EG, I-7188XG, Wincon-8x37)