

Packing List

In addition to this guide, the package includes the following items:



DL-1000-WF



Filter x2



CA-05BFFM-LL7A01 * 2




IP67 RJ45 Plug

Resources

How to search for drivers, manuals and spec information on ICP DAS website.


- For Mobile Web

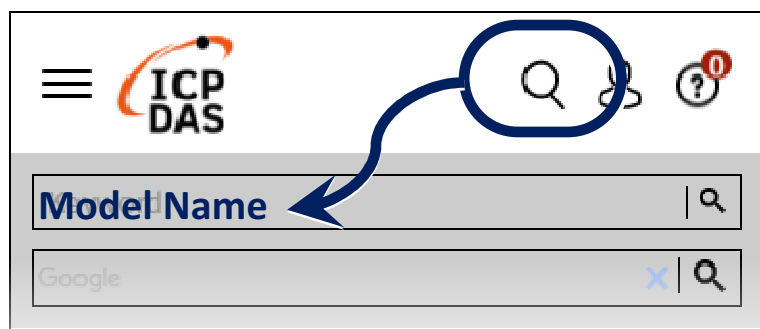

- For Desktop Web



Connector for Power/ RS-485/ Alarm Relay Output

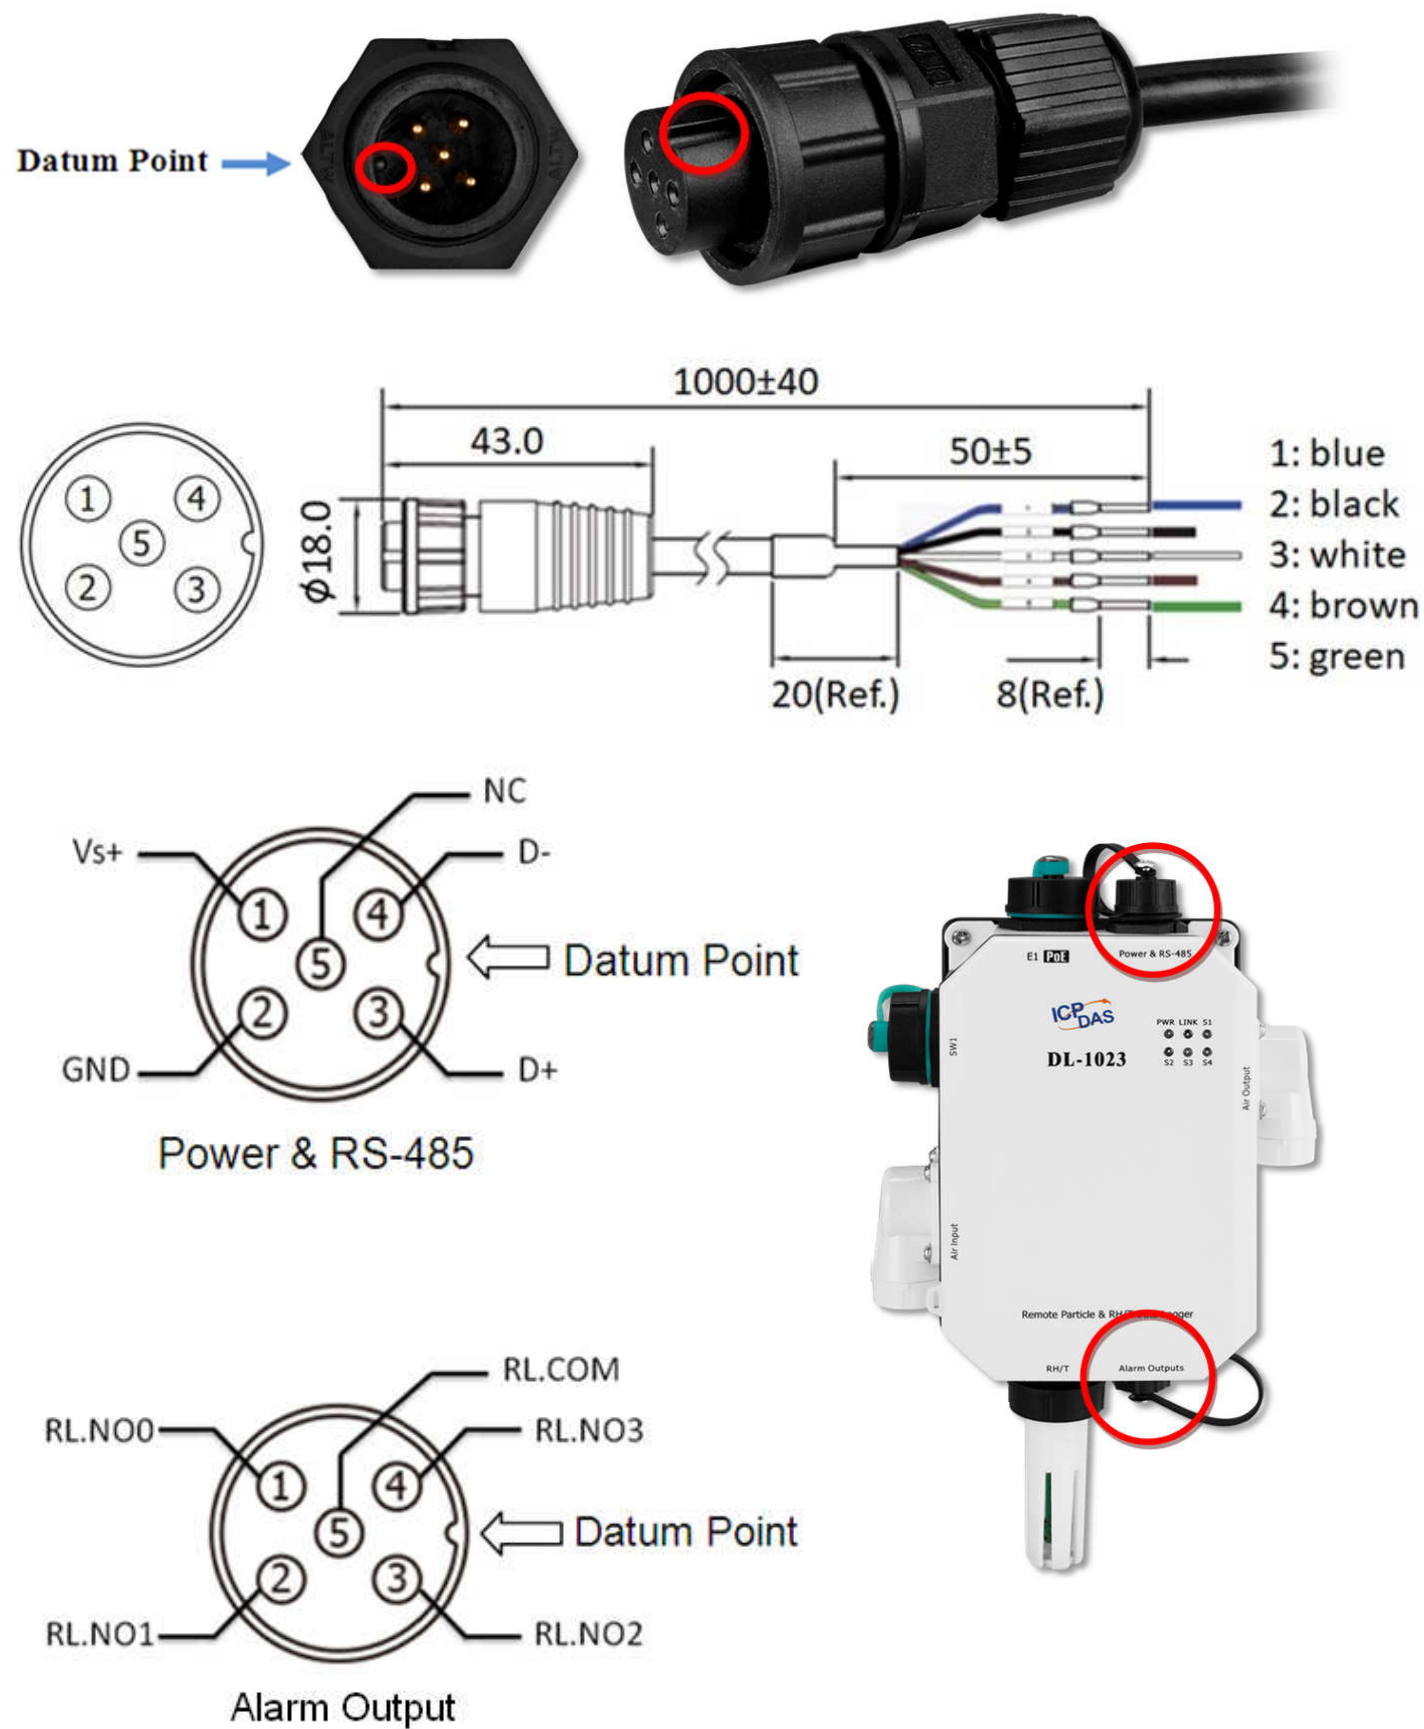

Powering-on the DL-1000-WF logger

The factory default settings for Wi-Fi communication of the DL-1000-WF are as follows.

- Mode: **AP**
- Wireless Security: WPA/WPA2, "000000000"
- DHCP Server (AP Mode): DHCP Server on, start IP: 192.168.255.2
- Wi-Fi Channel (AP Mode): 11
- IP Address: 192.168.255.1
- Gateway Address: 192.168.255.254
- Subnet Mask: 255.255.0.0
- SSID: DL-1000-WF
- Modbus TCP Port: 502

The Wi-Fi IIOT Utility is provided to configure and test the DL-1000-WF module through the Wi-Fi interface. Please refer to chapter 5 of the user manual for details.

You can also use a browser to configure and test the DL-1000-WF module through the Ethernet interface. Please refer to chapter 3 of the user manual for details.