

Packing List

In addition to this guide, the package includes the following items:



ZT-255x Device



ANT-124-05



CA-0915 (ZT-2550)



CA-0910N (ZT-2551)

Resources


Technical Support

service@icpdas.com

www.icpdas.com


How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

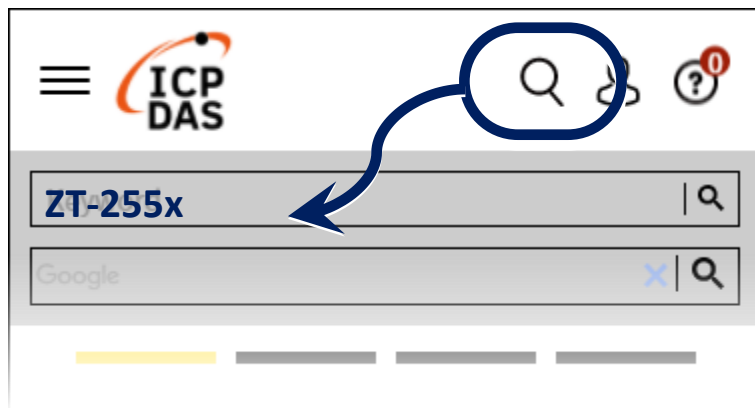

- For Desktop Web

1 *Power Connection*

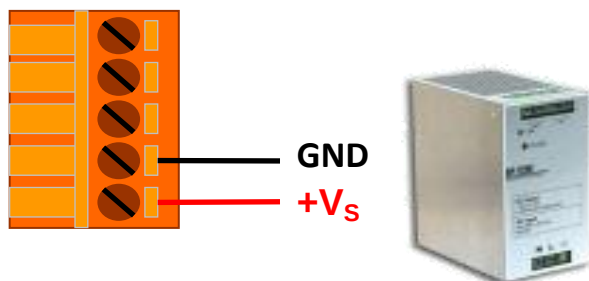

Power Supply: +10 ~ +30 V_{DC}

2 *LED Indicator Status*

LED Indicator	Status	Introduction
ZigBee Net (Green LED)	ZigBee Coordinator (Host)	
	Steady Lit	ZigBee network is Establish
	Blink to Steady Lit	Rejoin ZigBee Network or It has Occupied
	ZigBee Router (Slave)	
	Steady Lit	The Signal is Strong
	Blinking (500 ms)	The Signal is Available
	Blinking (1s)	The Signal is Weak
	Blinking (2s)	The Signal is Unstable or There is no Available
ZigBee RxD (Yellow LED)	The status of ZigBee communication	
	Blinking	Receiving ZigBee Data
	Steady Unlit	No ZigBee Data Received
ZigBee PWR (Red LED)	The status of module board	
	Steady Lit	Power ON
	Blinking (200ms)	Module Initialization Failure
	Blinking (500ms)	Configuration Mode
	Blinking (1s)	Watchdog Enabled
	Steady Unlit	Power OFF