


## Packing List

In addition to this guide, the package includes the following items:

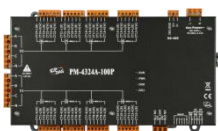

PM-4324A \* 1

Screw Driver \* 1

Cable ties \* 24

## Resources


How to search for drivers, manuals and spec information on ICP DAS website.

## Technical Support

[service@icpdas.com](mailto:service@icpdas.com)

[www.icpdas.com](http://www.icpdas.com)

- For Mobile Web

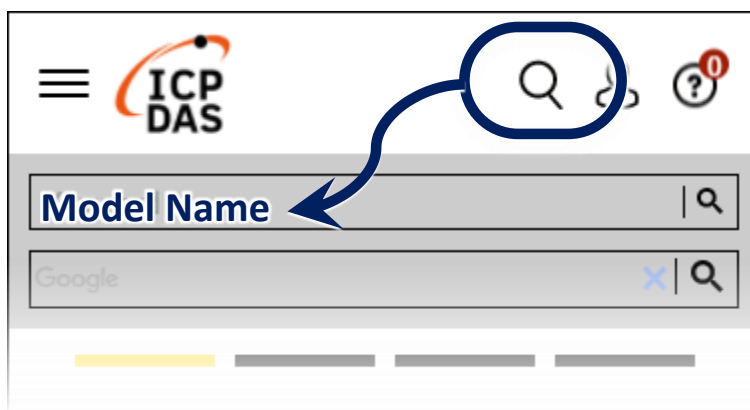

- For Desktop Web



## 1.1.Caution & Warning



The meter contains hazardous voltages, and should never be disassembled. Failing to follow this practice will result in serious injury or death. Any work on or near energized meters, meter sockets, or other metering equipment could induce a danger of electrical shock. It is strongly recommended that all work should be performed only by qualified industrial electricians and metering specialist. ICP DAS assumes no responsibility if your electrical installer does not follow the appropriate national and local electrical codes.

ICP DAS assumes no liability for any damage resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, not for any infringements of patents or other rights of third parties resulting from its use.

## 1.2.Product Warranty & Customer Support

ICP DAS warrants all products free from defects in material and workmanship for a period of one year from the date of shipping. During the warranty period, we will, at our position, either repair or replace any product that proves to be defective. To report any defect, please contact : +886-3- 597-3366 or [service@icpdas.com](mailto:service@icpdas.com).

**Documentation & Utility:**

<http://ftp.icpdas.com/pub/cd/powermeter/pm-4324a/>

### 1.2.1.Limitation of Warranty

This warranty does not apply to defects resulting from unauthorized modification, misuse, or use for reason other than electrical power monitoring. The supplied meter is not a user-serviceable product.

## 2. Installation

Please use the soft dry clothes to clean the instrument.

Please do not use any chemical or detergent or volatile solvents to clean the instrument, in order to avoid any possibility of the cover damage.

- Products come with external split type clip-on CT's. Disconnect the CT's or use other CT's is highly prohibited.
- Please read this operation manual carefully before using.
- Please re-confirm the measure position.
- Reconfirm the RST (ABC) phase sequence of the power system.
- Meter auxiliary power for PM-4324A series is AC +100V ~+240V.

### 2.1.Voltage Input

1. PM-4324A series: Input Voltage up to 500V.  
For any higher Input Voltage large than 500V, please add the PT (power transformer), and Change PT RATIO setup for reference voltage V1 or V2.
2. Confirm the RST (ABC) phase sequence.

### 2.2.Current Input

1. The external CT's are fragile, please handle with care.
2. The current input of PM-4324A series is in mV range. The other CT's, for example, from panel will damage the instrument due to its large current (around 5A)
3. When more than one smart meter (PM-4324A series) are installed, please do not disconnect the CT with its original meter and mix use with each other. Since each set of smart meter (PM-4324A series) and its attached split type clip-on CT are calibrated set by set. The mix use may cause wrong measurements.
4. To install CT's correctly, please ensure the CT lines sequences is right before clip the CT's onto the power cable of the monitoring equipment. (Detail will be found in next section)



5. **When measuring the current, the secondary circuit of a CT should never be opened when a load is passing through its primary. Make sure you always open the CT clip to detach the CT before removing the terminal lines. Otherwise, it will cause severe injury.**
6. Please handle with extra care, especially when the operation space of CT's is limited.
7. The current direction must follow K-L marked on CT's.
8. Please select the right size CT's for different size of monitoring

equipment cables:

power cable diameter <  $\Phi 10$  use 60A CT ,  $\Phi 10 \sim \Phi 16$  use 100A CT ,  
 $\Phi 16 \sim \Phi 24$  use 200A CT ,  $\Phi 24 \sim \Phi 36$  use 300A CT or 400A CT .

9. The maximum current value cannot exceed the CT rating.

10. The CT1~CT12 using reference voltage V1 as voltage input, CT13~CT24 using reference voltage V2 as voltage input.

## 2.3.Connection


### ● PM-4324A Series

Please firstly check the current input terminal, and then in white black, white black, white black wire sequences (CT1-K, CT1-L, CT2-K, CT2-L, CT3-K, CT3-L). Then connect the CT's, and close the CT clip. Make sure the arrow direction sign on CT's follows current flow direction ( K $\rightarrow$ L )

**Note: it must be in the same direction.**

Connect the voltage input terminal N C B A. for PM-4324A, in the three phase order as follows on N C B A.

## 2.4.CT's installation steps

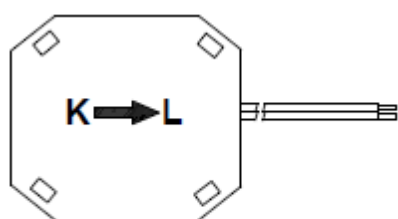

Bottom view



- At the bottom of the CT, there is a "K $\rightarrow$ L" mark.

- Open the CT clip.



- Make sure the power current direction follow the "K $\rightarrow$ L" mark on the CT and then close the CT clip.




- Installation steps finished.


**PM-4324AP series can be directly input from the secondary side of 333mV CT.**

### Example:

## Single Main Circuit 3P4W

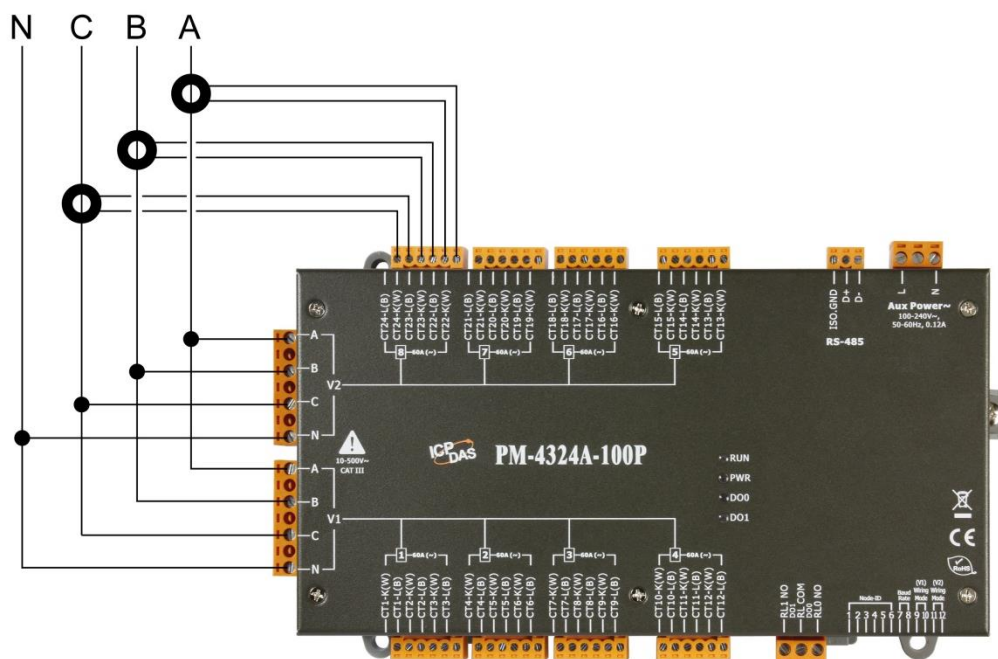


## Dual Main Circuit 3P4W + 1P2W

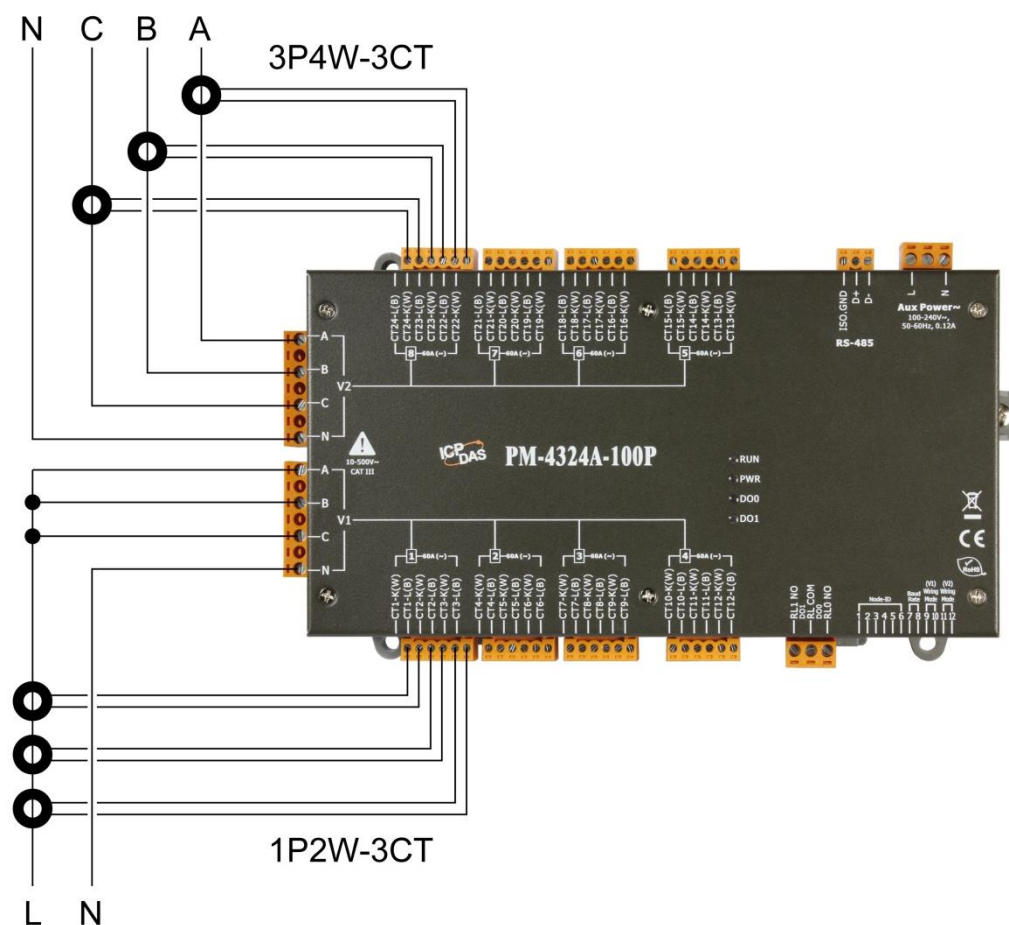


## 2.6.Wiring


- 1P2W-1CT (PM-4324A):  
CT1 ~ CT12 for reference voltage V1; CT13 ~ CT24 for reference voltage V2.

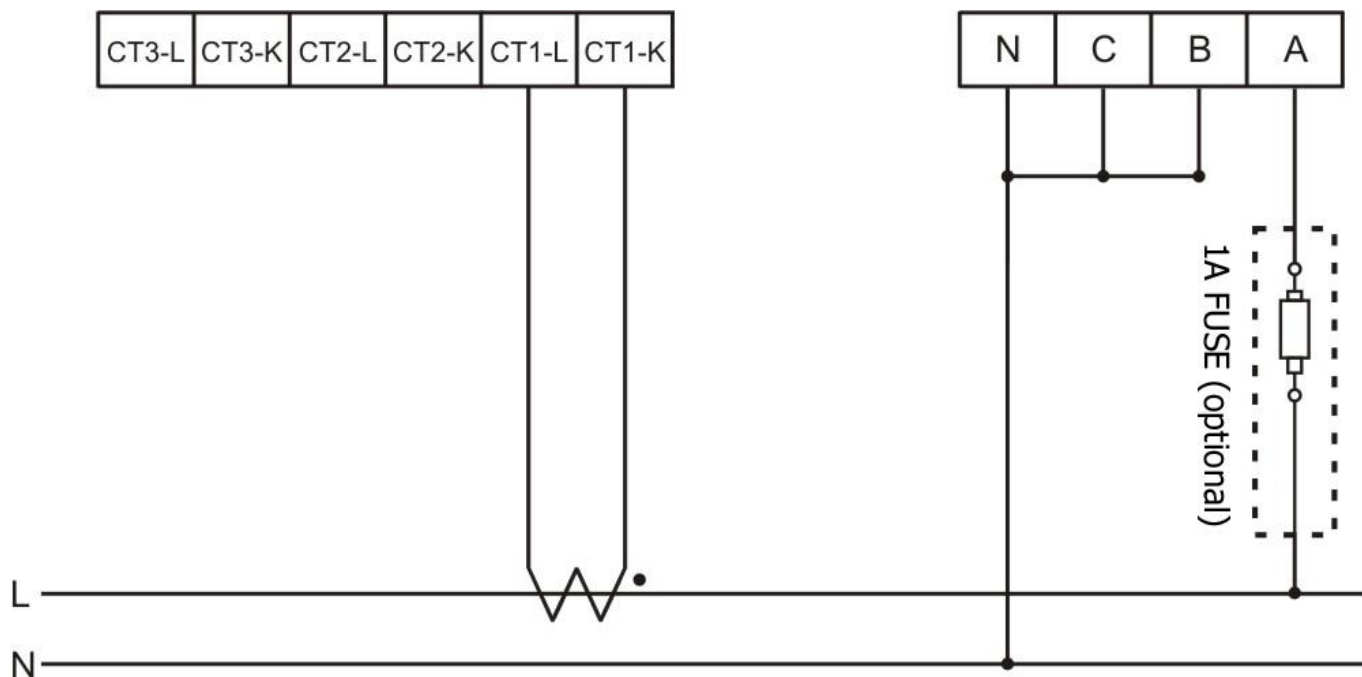


- 1P2W-3CT (PM-4324A):  
CT1 ~ CT12 for reference voltage V1; CT13 ~ CT24 for reference voltage V2.

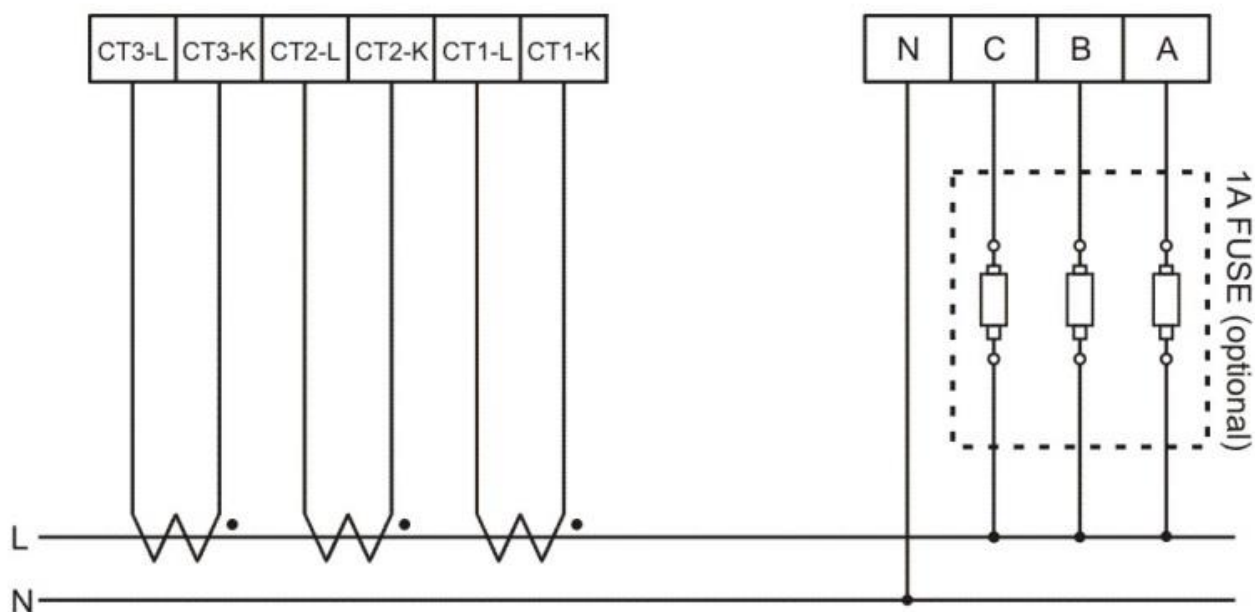


**CT1 ~ CT12 for reference voltage V1; CT13 ~ CT24 for reference voltage V2.**

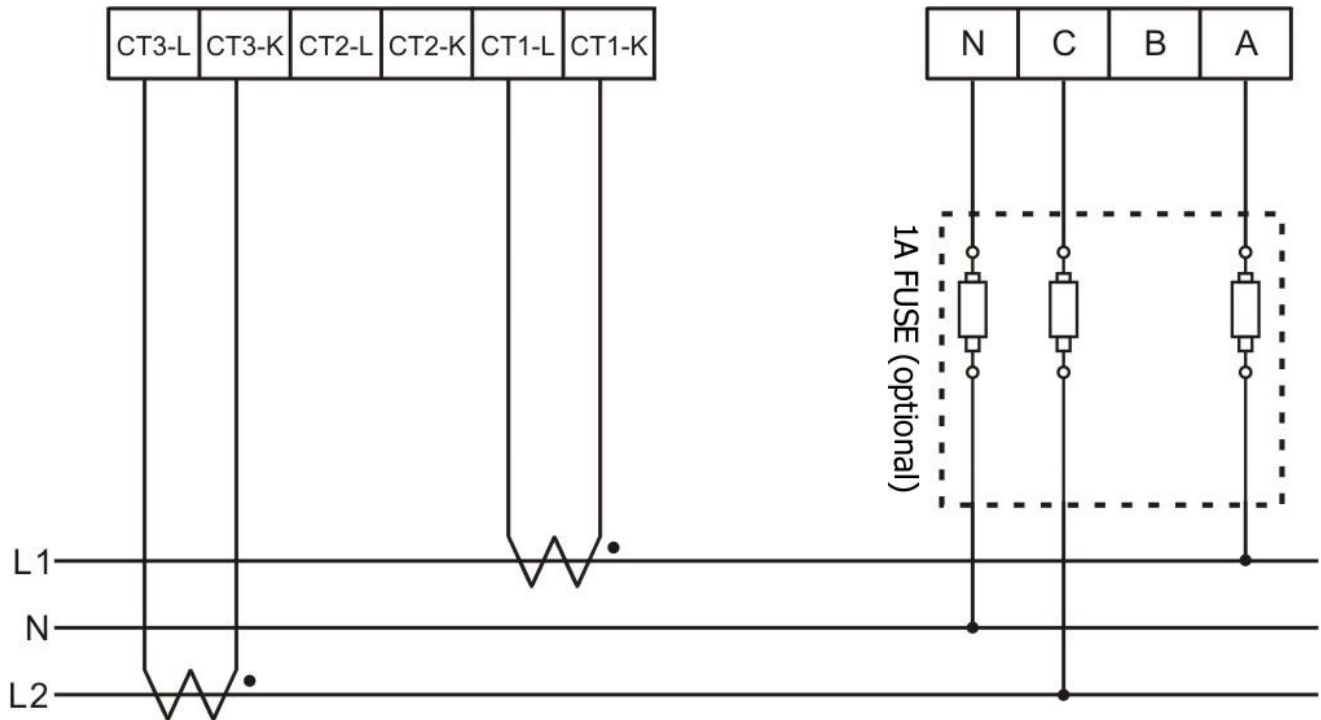


**CT1 ~ CT12 for reference voltage V1; CT13 ~ CT24 for reference voltage V2.**

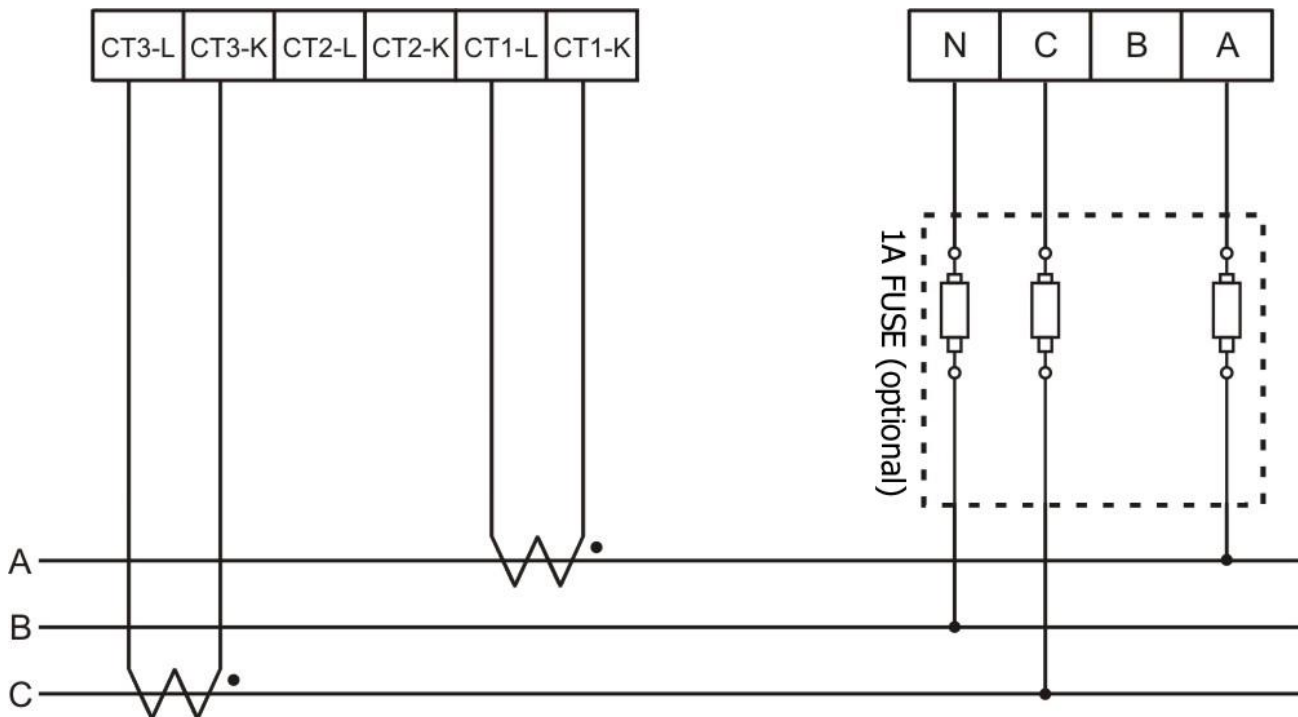

- 3P3W-3CT (PM-4324A):  
**CT1 ~ CT12 for reference voltage V1; CT13 ~ CT24 for reference voltage V2.**

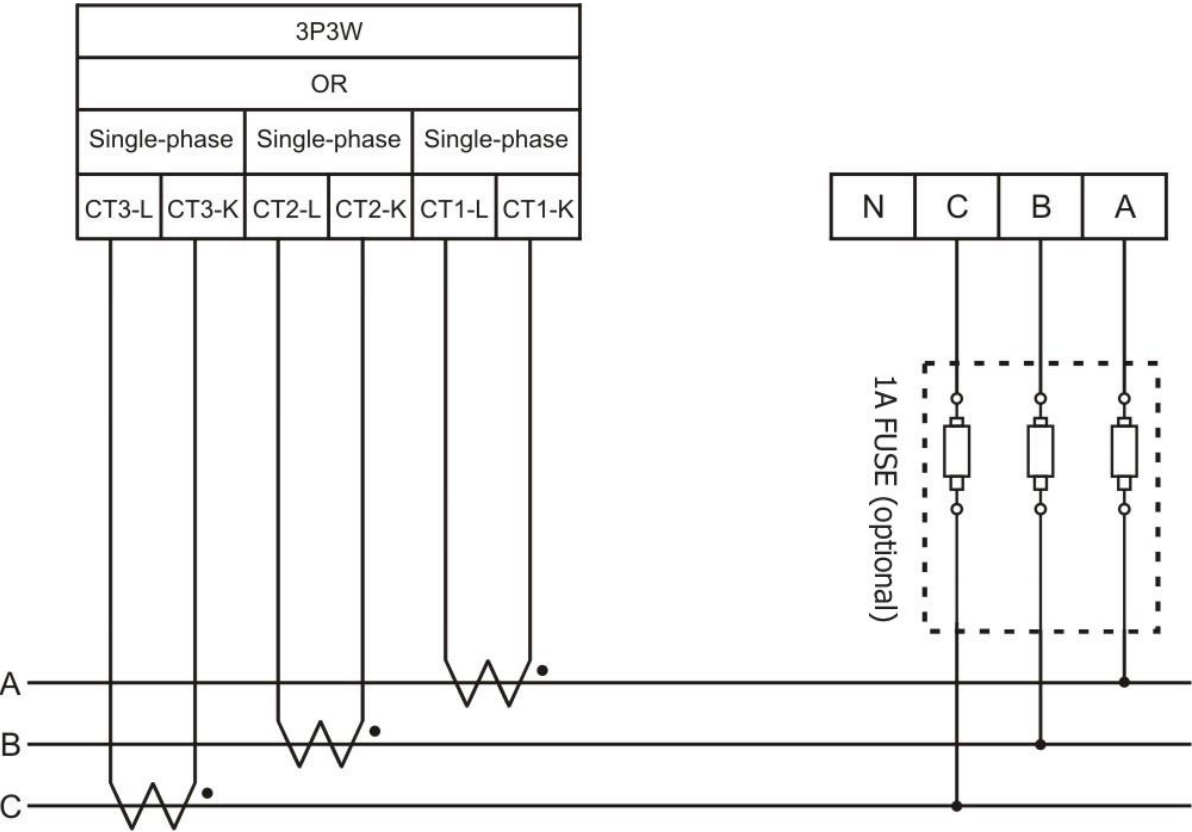

- 3P4W-3CT (PM-4324A):  
**CT1 ~ CT12 for reference voltage V1; CT13 ~ CT24 for reference voltage V2.**

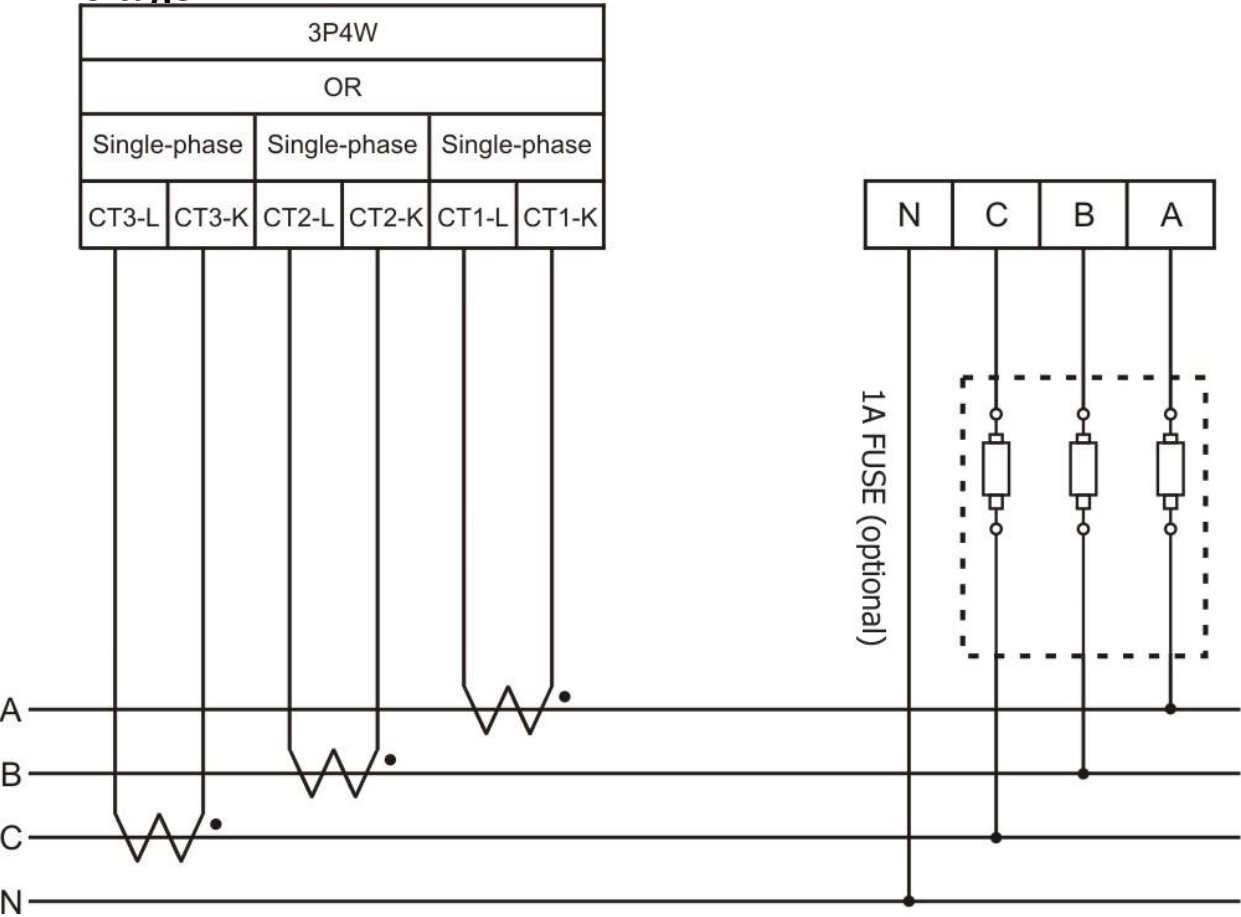



# Communication

## 2.7.RS-485 & CAN setting

- Default setting for RS-485: **19200, n, 8, 1**, for CAN: **125K bps**
- DIP switch (SW1-SW6) is used for Modbus address(or CANopen Node ID) setting, default is 1, i.e. all OFF

**For example:** Modbus address(or CANopen Node ID) is 10 · find the table of DIP switch 1-6 is **ON, OFF, OFF, ON, OFF, OFF**

- SW1 — SW6 setting

Setting Modbus-RTU address/ CANopen Node ID for communication (1-64)

Modbus Address	SW 1	SW 2	SW 3	SW 4	SW 5	SW 6
1	OFF	OFF	OFF	OFF	OFF	OFF
2	<b>ON</b>	OFF	OFF	OFF	OFF	OFF
3	OFF	<b>ON</b>	OFF	OFF	OFF	OFF
4	<b>ON</b>	<b>ON</b>	OFF	OFF	OFF	OFF
5	OFF	OFF	<b>ON</b>	OFF	OFF	OFF
6	<b>ON</b>	OFF	<b>ON</b>	OFF	OFF	OFF

- SW7 — SW8 setting: For Baud Rate Setting

RS-485	CAN	SW 7	SW8
<b>9600 bps</b>	<b>125k (Default) bps</b>	OFF	OFF
<b>19200 (Default) bps</b>	<b>250k bps</b>	<b>ON</b>	OFF
<b>38400 bps</b>	<b>500k bps</b>	OFF	<b>ON</b>
<b>115200 bps</b>	<b>1M bps</b>	<b>ON</b>	<b>ON</b>

PM-4324A: Select the different wiring mode

(Please select the Software setting, if 1P2W-1CT, 1P2W-3CT or 1P3W-2CT is used)

Reference voltage	V1		V2	
Wiring	SW 9	SW 10	SW 11	SW 12
Software setting	OFF	OFF	OFF	OFF
3P3W-2CT	<b>ON</b>	OFF	<b>ON</b>	OFF
3P3W-3CT	OFF	<b>ON</b>	OFF	<b>ON</b>
3P4W-3CT	<b>ON</b>	<b>ON</b>	<b>ON</b>	<b>ON</b>

## 2.8.Add the Bias Resistor on RS-485 Network for stable signal

The RS-485 master is required to provide the bias for PM-4324A series.

Otherwise, the tM-SG4 or SG-785 should be added to provide the bias. All ICP DAS controllers and converters provide the bias.

## 2.9.Ethernet setting

- Ethernet default settings:

IP Address	192.168.255.1
Subnet mask	255.255.0.0
Gateway	192.168.0.1
Port	502