

Classification	DCON Utility Pro FAQ					No.	DCON_007
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	1/13

How to use DCON_Utility Pro to configure modules on Linux PAC platform?

The main execution platform of DCON Utility Pro is Windows series platform, please refer to the following list <https://www.icpdas.com/tw/download/index.php?root=&model=&kw=DCON%20Utility>


Filename	Description
DCON Utility Pro PC version	For Windows XP/7/8/10 PC and WES PAC
DCON Utility Pro WinCE5.0 version	For WinCE 5.0 PAC
DCON Utility Pro WinCE 7.0 version	For WinCE 7.0 PAC
DCON Utility Pro WinCE6.0 version	For WinCE 6.0 PAC

This section will consisting of four parts, which are described below:

Linux PAC platform support method

From V4.0.0.2, DCON Utility Pro provides the DCON_Gateway program to be executed on the Linux platform, and then the PC can configure the module through the specified COM Port via the Ethernet connection. The operation method is as follows.

1. Start the DCON_Gateway program on the Linux PAC host first. This part can be executed by connecting to the console port of LinPAC through the RS-232 of the PC or connecting to the telnet port through the Ethernet.

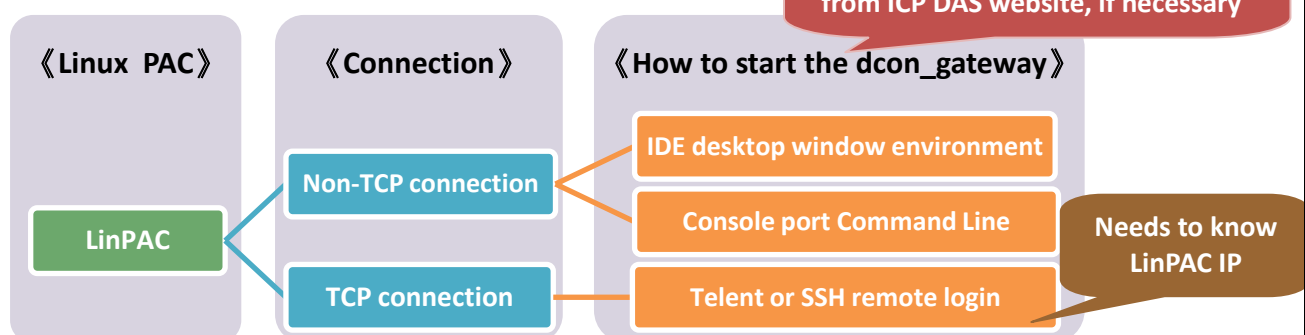


Classification	DCON Utility Pro FAQ					No.	DCON_007
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	2/13

There are two ways to start the DCON_Gateway program. The following is an example of LP-5231:

A) Connect the Console port of LinPAC to the RS-232 of the PC, and execute the program directly on the LinPAC host

Method 1: After logging in through the terminal software (for example: HyperTerminal), then enter: **dcon_gateway_lp5k**

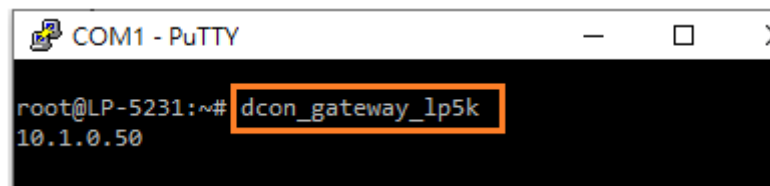


```

COM1 - PuTTY
root@LP-5231:~# dcon_gateway_lp5k
10.1.0.50

```

Method 2: Connect the screen, keyboard and mouse, after logging in, through the text window on the desktop, enter: **dcon_gateway_lp5k**

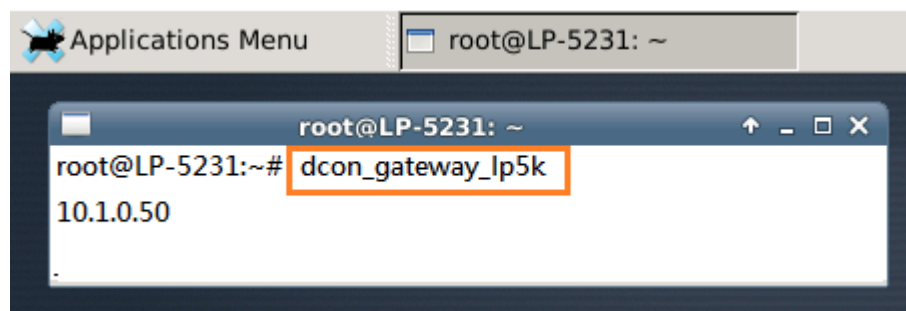

```


Applications Menu root@LP-5231: ~
root@LP-5231:~# dcon_gateway_lp5k
10.1.0.50

```

B) Connect to the Internet route, connect to LinPAC remotely, and execute the program

Step 1: Query LP-8421 IP

Method 1: Connect the console port of LinPAC to the PC (after logging in through the terminal program, enter: **ifconfig**)

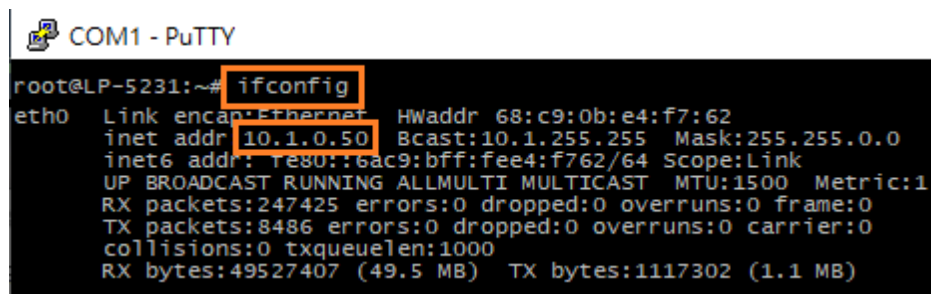


```

COM1 - PuTTY
root@LP-5231:~# ifconfig
eth0  Link encap:Ethernet  HWaddr 68:c9:0b:e4:f7:62
      inet addr: 10.1.0.50  Bcast:10.1.255.255  Mask:255.255.0.0
      inet6 addr: fe80::6ac9:bff:fee4:f762/64  Scope:Link
      UP BROADCAST RUNNING ALLMULTI MULTICAST  MTU:1500  Metric:1
      RX packets:247425 errors:0 dropped:0 overruns:0 frame:0
      TX packets:8486 errors:0 dropped:0 overruns:0 carrier:0
      collisions:0 txqueuelen:1000
      RX bytes:49527407 (49.5 MB)  TX bytes:1117302 (1.1 MB)

```

Classification	DCON Utility Pro FAQ					No.	DCON_007
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	3/13

Method 2: Run the program directly on the LinPAC host (Terminal Emulator, input: **ifconfig**)

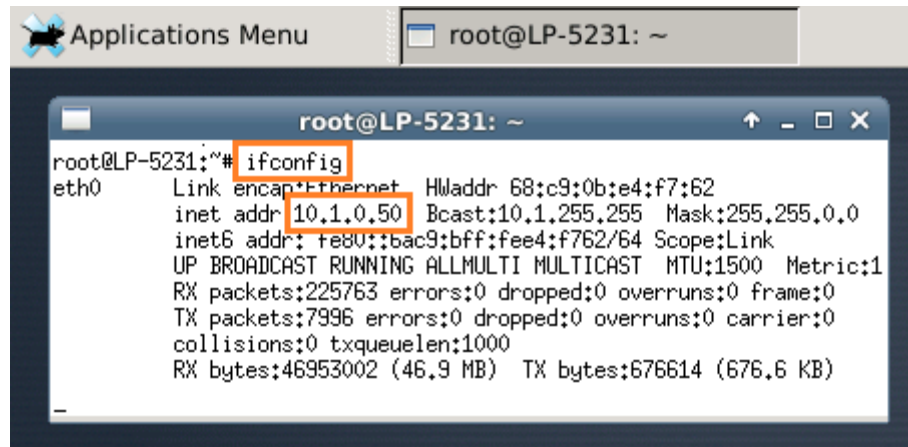


```

root@LP-5231:~# ifconfig
eth0      Link encap:Ethernet  HWaddr 68:c9:0b:e4:f7:62
          inet addr: 10.1.0.50  Bcast:10.1.255.255  Mask:255.255.0.0
          inet6 addr: fe80::bac9:bff:fee4:f762/64 Scope:Link
          UP BROADCAST RUNNING ALLMULTI MULTICAST MTU:1500 Metric:1
          RX packets:225763 errors:0 dropped:0 overruns:0 frame:0
          TX packets:7996 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:46953002 (46.9 MB)  TX bytes:676614 (676.6 KB)

```

Step 2: Use Telnet or SSH tool to log in to LinPAC remotely, enter the command:

dcon_gateway_lp5k

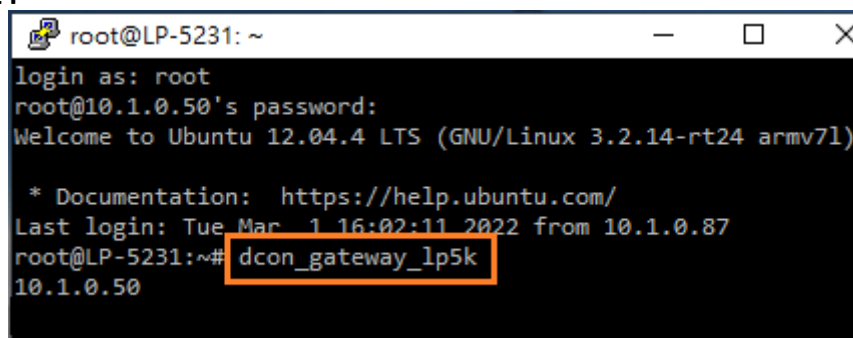

```


root@LP-5231:~#
login as: root
root@10.1.0.50's password:
Welcome to Ubuntu 12.04.4 LTS (GNU/Linux 3.2.14-rt24 armv7l)

* Documentation:  https://help.ubuntu.com/
Last login: Tue Mar 1 16:02:11 2022 from 10.1.0.87
root@LP-5231:~# dcon_gateway_lp5k
10.1.0.50


```

Classification	DCON Utility Pro FAQ				No.	DCON_007	
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	4/13

2. Run the version after DCON_Utility_Pro V4.2.0.0 on the PC side, select the “Connection Options” option, the new connection option has a TCP interface in addition to the COM Port interface of the PC system itself.

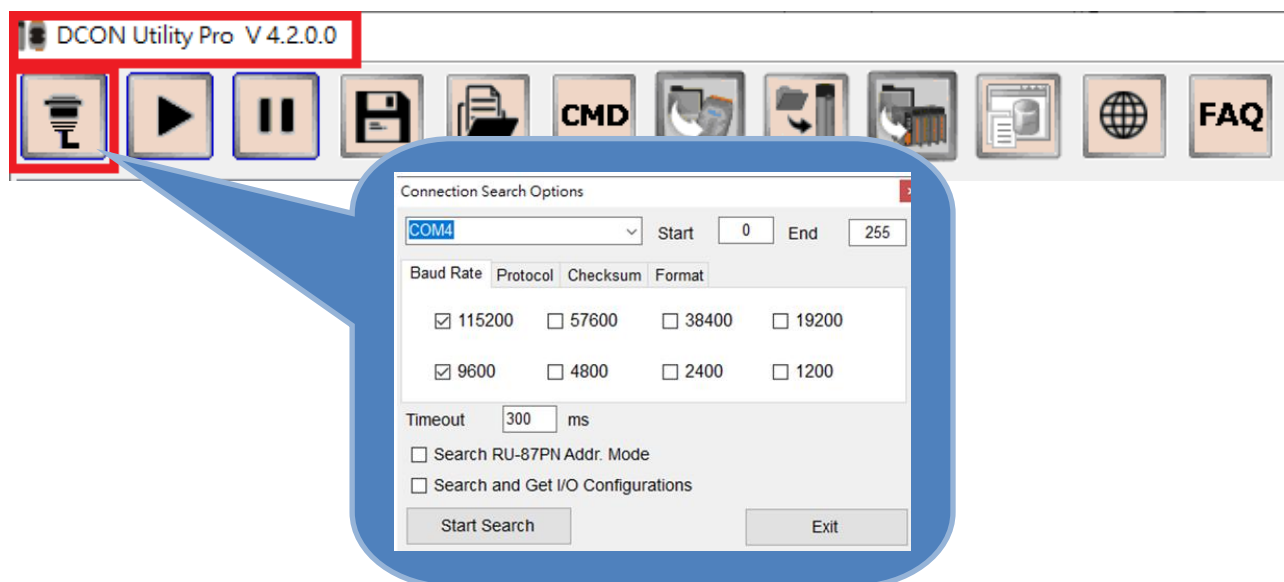


After selecting the TCP connection, the original connection parameter option will have an additional PAC Model tab

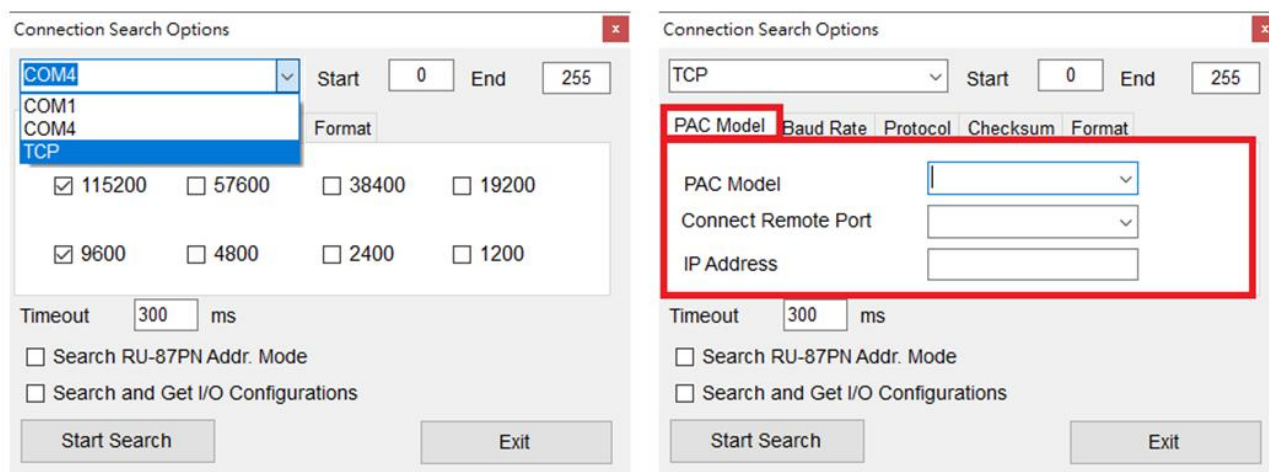

Classification	DCON Utility Pro FAQ					No.	DCON_007
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	5/13

Search backplane I-87K module

Select the connected Linux host model and the corresponding COM Port, and enter the IP address of the host. Now we demonstrate the connection to search for the I-87K modules on LP-8421 backplane.

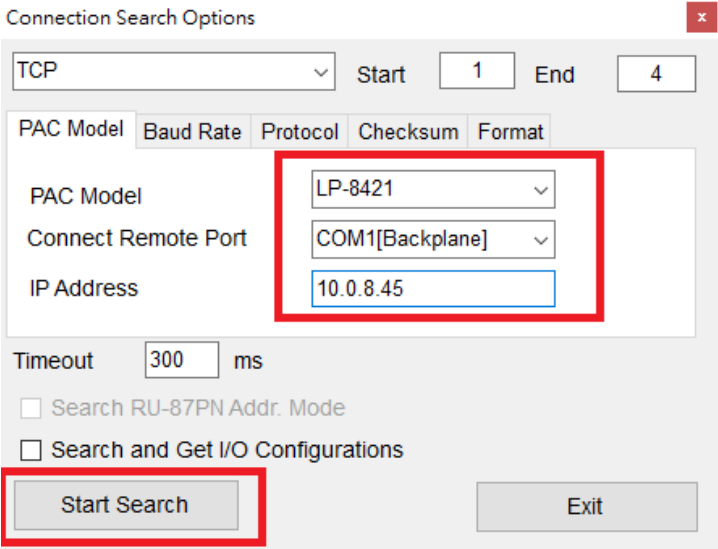

Connection Search Options

TCP Start 1 End 4

PAC Model Baud Rate Protocol Checksum Format

PAC Model LP-8421

Connect Remote Port COM1[Backplane]

IP Address 10.0.8.45


Timeout 300 ms

☐ Search RU-87PN Addr. Mode

☐ Search and Get I/O Configurations

Start Search Exit

Remarks 1. The backplane COM1 Port only supports the setting of I-87K/I-97K series DCON modules. Other I-8K/I-9K modules are directly controlled by API (SDK), not set by communication commands.

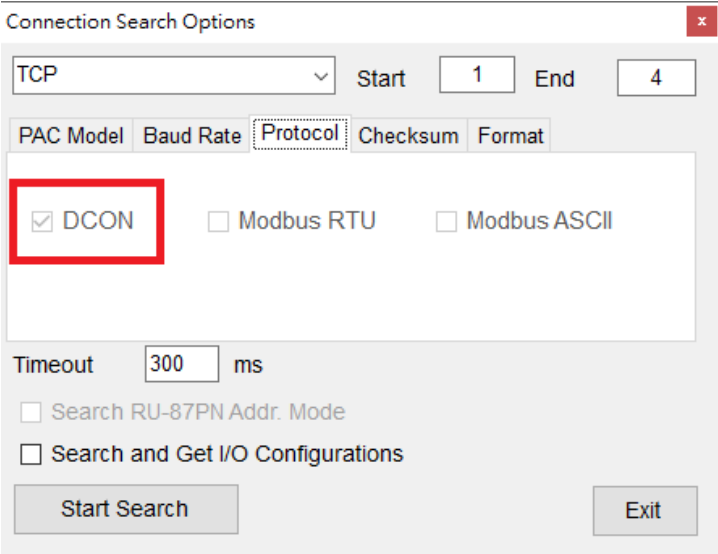

Connection Search Options

TCP Start 1 End 4

PAC Model Baud Rate Protocol Checksum Format

☒ DCON ☐ Modbus RTU ☐ Modbus ASCII

Timeout 300 ms

☐ Search RU-87PN Addr. Mode

☐ Search and Get I/O Configurations


Start Search Exit

Classification	DCON Utility Pro FAQ					No.	DCON_007
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	6/13

Remark 2. Based on the protocol operation of DCON_Gateway, the communication station number (Address) of the I-87K module on the backplane represents the slot position where the module is located. In fact, the communication parameters of the I-87K module on the backplane are operated by the program on the Linux host.

The address number is 0, Baud rate 115200, Checksum disable, N,8,1 format, Open_Slot(slot) function must be used when controlling I-87K module; ChangeToSlot(slot); then the next control command and finally Close_Slot(slot);

The search results and related setting screens are as follows.

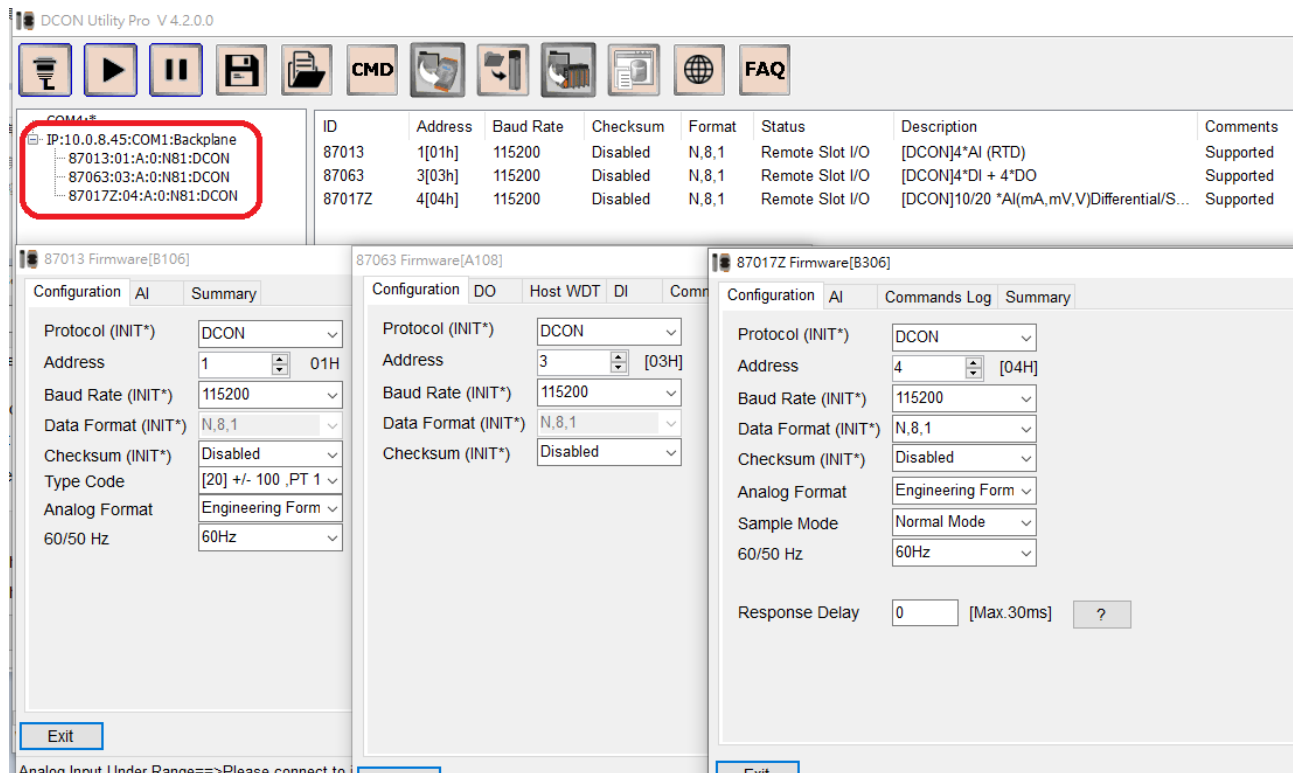

Classification	DCON Utility Pro FAQ				No.	DCON_007	
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	7/13

Search Remote COM Port I/O modules

Then demonstrate searching for LP-8421 Remote COM2:ttyS0(RS-485 Port) which can support DCON/Modbus RTU/Modbus ASCII and other communication protocols.

Connection Search Options

TCP Start 0 End 255

PAC Model Baud Rate Protocol Checksum Format

PAC Model LP-8421

Connect Remote Port COM2:ttyS0

IP Address 10.0.8.45

Timeout 300 ms

☐ Search RU-87PN Addr. Mode

☐ Search and Get I/O Configurations

Start Search Shutdown DCON_Gateway Exit

Connection Search Options

TCP Start 0 End 255

PAC Model Baud Rate Protocol Checksum Format

☒ DCON ☒ Modbus RTU ☐ Modbus ASCII

Timeout 300 ms

☐ Search RU-87PN Addr. Mode

☐ Search and Get I/O Configurations

Start Search Shutdown DCON_Gateway Exit

Remark 3. Some definitions of COM Port on the Linux PAC host platform use names such as ttyS. For details, please refer to Appendix A.

The search results are as follows.

DCON Utility Pro V 4.2.0.0 Searching 10.0.8.45(10002)

COM4

- IP:10.0.8.45:COM1:Backplane
 - 87013:01:A:0:N81:DCON
 - 87063:03:A:0:N81:DCON
 - 870177:04:A:0:N81:DCON
- IP:10.0.8.45:COM2
 - tAD4P2C2:00:6:0:N81:DCON

ID	Address	Baud Rate	Checksum	Format	Status	Description	Comments
tAD4P2C2	0[00h]	9600	Disabled	N,8,1	Remote I/O	[DCON]2*DI + 2*DO + 4*AI	Supported

tAD4P2C2 Firmware[A105]

Configuration AI/DO Alarm DI Host WDT Commands Log Summary

Protocol (INIT*) DCON

Address 0 [00H]

Baud Rate (INIT*) 9600

Data Format (INIT*) N,8,1

Checksum (INIT*) Disabled

Analog Format Engineering Form

Sample Mode Fast Mode

Response Delay 10 [Max.30ms] ?

Set Module Configurations

Exit

Wait for loading tAD4P2C2

8 :: CH1_ALARM_MODE[Latch]; ==> (NoError)

Classification	DCON Utility Pro FAQ					No.	DCON_007
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	8/13

Remark 4. Other COM2, COM3, COM4, COM5, COM36 can be connected to the remote I/O module of RS-485 interface and the I/O sensor module of RS-485 interface.

- Remote I/O module: <https://www.icpdas.com/en/product/p02.php?root=537>

RS-485 I/O Modules



- I/O Sensor modules: <https://www.icpdas.com/en/product/p02.php?root=298&kind=367>

IO/Sensor



If the specified COM Port itself is an RS-485 Port, it can directly connect to the RS-485 series modules. If it is RS-232 Port, you can connect RS-485 series modules through I-7520 RS-232 to RS-485 (you need to pay attention to the corresponding diagram of the Pin pin of RS-232 Port to check whether jumper processing is required)

Classification	DCON Utility Pro FAQ					No.	DCON_007
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	9/13

Search XV Board

Finally demonstrate the search and setting of LP-5231 with XV Board

Connection Search Options

TCP

Start1End1

PAC ModelBaud RateProtocolChecksumFormat

PAC ModelLP-5231

Connect Remote PortCOM1[XVBoard]

IP Address10.0.8.61

Timeout300ms

☐ Search RU-87PN Addr. Mode

☐ Search and Get I/O Configurations

Start SearchExit

XV Board only supports Modbus RTU protocol

Connection Search Options

TCP

Start1End1

PAC ModelBaud RateProtocolChecksumFormat

☐ DCON☒ Modbus RTU☐ Modbus ASCII

Timeout300ms


☐ Search RU-87PN Addr. Mode

☐ Search and Get I/O Configurations

Start SearchExit

Classification	DCON Utility Pro FAQ					No.	DCON_007
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	10/13

The search results are as follows.

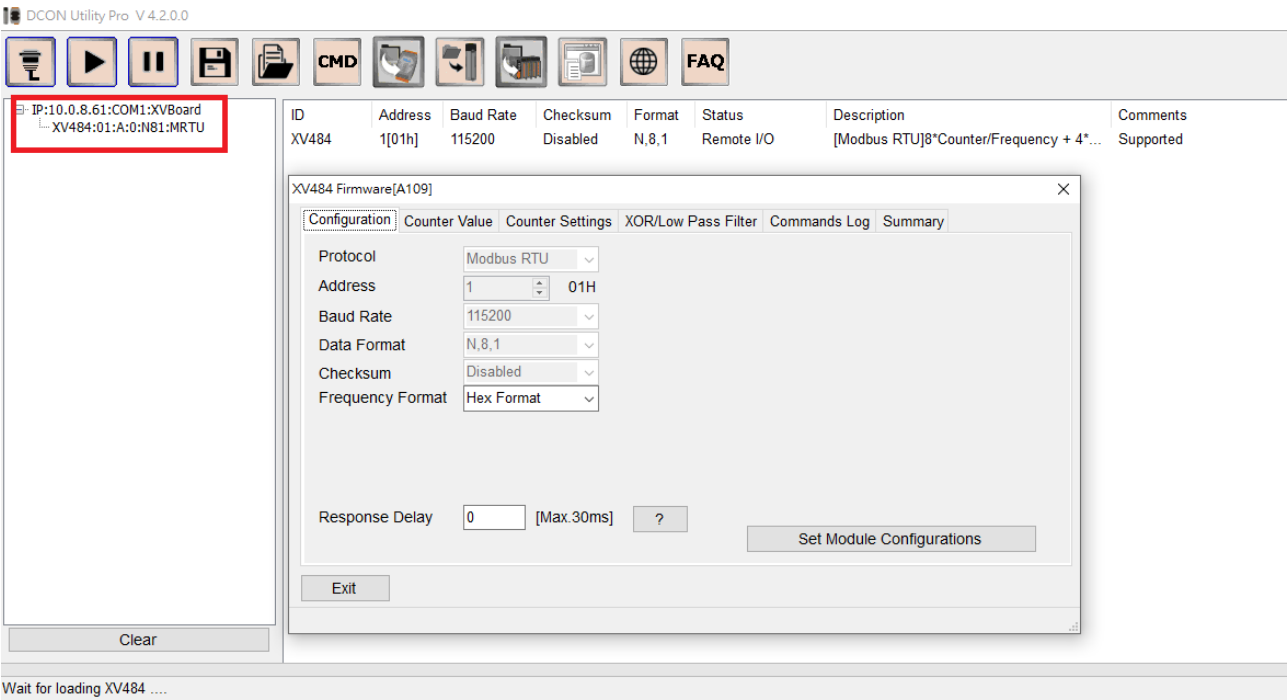



Remark 5. The LP-5231 COM1 Port only supports XV Board Modbus RTU I/O modules. Please refer to the link below for the module list.

https://www.icpdas.com/en/product/guide+Remote_I_O_Module_and_Unit+PAC_I_O_Modules+XV-board

Classification	DCON Utility Pro FAQ				No.	DCON_007	
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	11/13

End the DCON_Gateway program


1. After the Linux PAC host executes DCON_Gateway, the program itself starts to count down. If there is no communication within 60 seconds after execution, the program will end automatically.
2. When the Linux PAC host executes DCON_Gateway, the PC side uses DCON Utility Pro to connect , search and module setting and other related procedures.

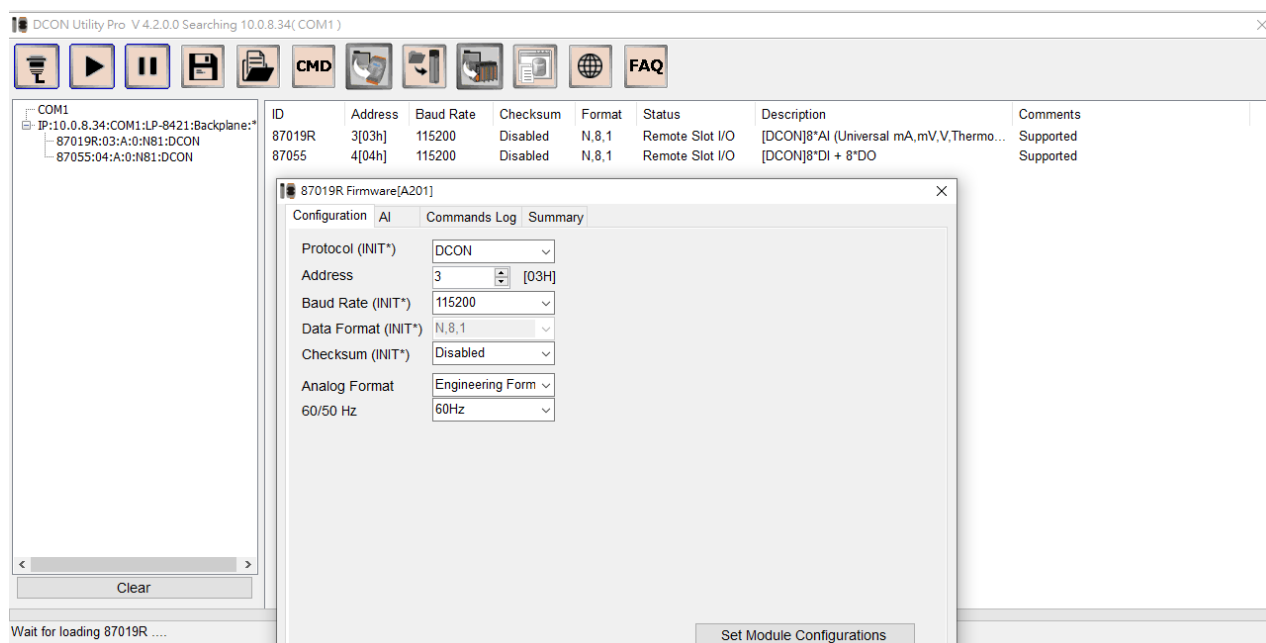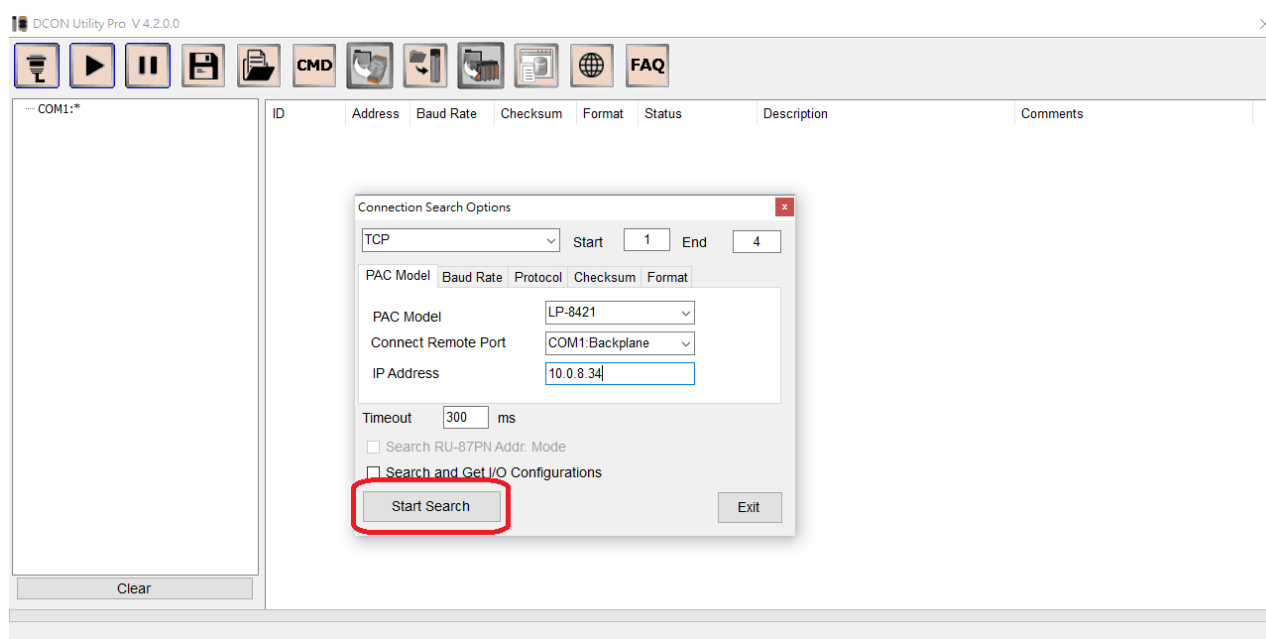

Classification	DCON Utility Pro FAQ					No.	DCON_007
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	12/13

3. After DCON Utility Pro completes the module setting, you can execute "Shutdown DCON_Gateway" through the connection setting option screen to end the DCON_Gateway program activated on the Linux PAC.

4. If the "Shutdown DCON_Gateway" program is not executed, the DCON_Gateway program which activated on the Linux PAC will end automatically after 120 seconds.

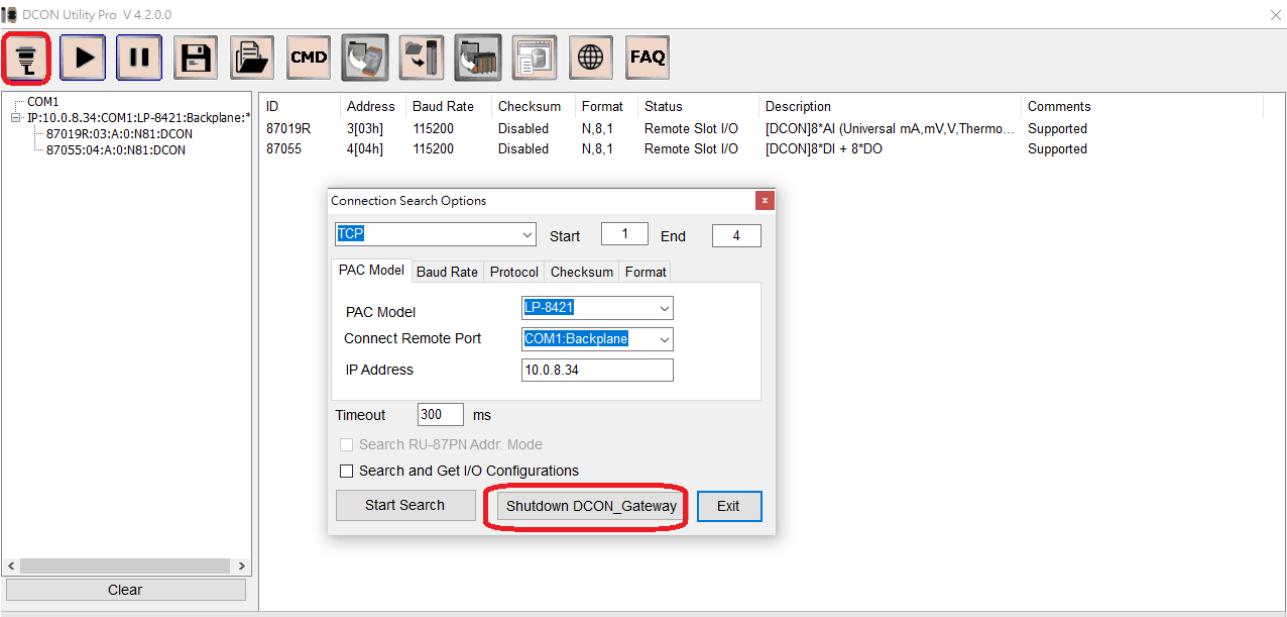

Classification	DCON Utility Pro FAQ					No.	DCON_007
Author	Martin/Anna	Version	1.0.1	Date	2024/07/01	Page	13/13

Appendix A: Linux host models supported by DCON Utility Pro and the default connection COM

Port name of each model

Linux PAC model	DCON_Gateway File name	COM Port Supported	Comments
LP-8121	dcon_gateway_lp8k	COM1, COM2 (ttyS0), COM3 (ttyS1)	COM1 backplane Port
LP-8421		COM1,ttyS0(COM2),ttyS1(COM3), COM36(ttyS34)	COM1 backplane Port
LP-8821		COM1,ttyS0(COM2),ttyS1(COM3), COM36(ttyS34)	COM1 backplane Port
LP-9221		COM1,ttyS0(COM2),ttyS1(COM3), COM36(ttyS34)	COM1 backplane Port
LP-9421		COM1,ttyS0(COM2),ttyS1(COM3), COM36(ttyS34)	COM1 backplane Port
LP-9821		COM1,ttyS0(COM2),ttyS1(COM3), COM36(ttyS34)	COM1 backplane Port
LX-8031	dcon_gateway_lx8k	COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
LX-8131		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
LX-8331		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
LX-8731		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
LX-9171	dcon_gateway_lx9k	COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
LX-9371		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
LX-9771		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
LX-9181		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
LX-9381		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
LX-9781		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
ALX-9191		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
ALX-9391		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
ALX-9791		COM1(ttySA0),COM2(ttyS0),COM3(ttyS1),COM36(ttyS34)	ttySA0 backplane Port
LP-5231	dcon_gateway_lp5k	COM1, COM2(ttyO2), COM4(ttyO4), COM5(ttyO5)	COM1connect to XV Board
LP-2241		COM1, COM2(ttyO2), COM4(ttyO4), COM5(ttyO5)	COM1connect to XV Board
LP-2841	dcon_gateway_lp2k	COM1, COM2(ttyO2), COM4(ttyO4), COM5(ttyO5)	COM1connect to XV Board