



PM-3133P/PM-3133iP Quick Start

v1.1, October 2025

Packing List

In addition to this guide, the package includes the following items:



PM-3133P /
PM-3133iP



Screw Driver * 1

Technical Support


service@icpdas.com

www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

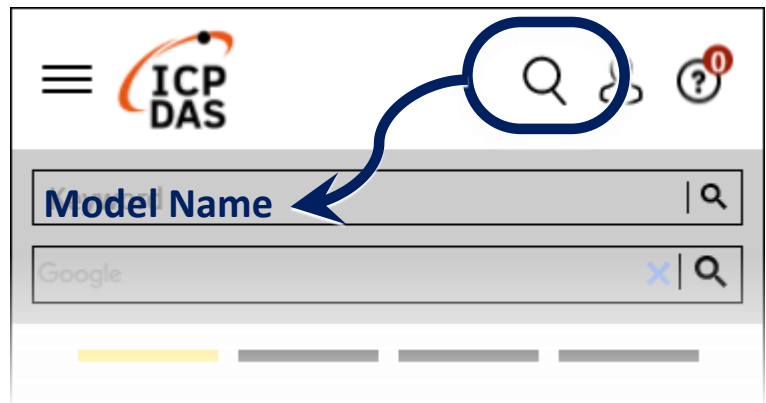

- For Desktop Web



1.1. Caution & Warning



The meter contains hazardous voltages, and should never be disassembled. Failing to follow this practice will result in serious injury or death. Any work on or near energized meters, meter sockets, or other metering equipment could induce a danger of electrical shock. It is strongly recommended that all work should be performed only by qualified industrial electricians and metering specialist. ICP DAS assumes no responsibility if your electrical installer does not follow the appropriate national and local electrical codes.

ICP DAS assumes no liability for any damage resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, not for any infringements of patents or other rights of third parties resulting from its use.

1.2. Limitation of Warranty

This warranty does not apply to defects resulting from unauthorized modification, misuse, or use for reason other than electrical power monitoring. The supplied meter is not a user-serviceable product.

2. Installation

Please use the soft dry clothes to clean the instrument.

Please do not use any chemical or detergent or volatile solvents to clean the instrument, in order to avoid any possibility of the cover damage.

- Please read this operation manual carefully before using.
- Please re-confirm the measure position.
- Reconfirm the RST (ABC) phase sequence of the power system.
- Meter auxiliary power for PM-3133P/PM-3133iP series is DC +12V ~+48V.

2.1. Connection

Please ensure that the arrow direction marking on the CT aligns with the current flow direction (K→L).

Note: it must be in the same direction.

Connect the voltage input terminal N C B A. for PM-3133P/PM-3133iP, in the three phase order as follows on N C B A.

2.2.Voltage Input

1. PM-3133P series: Input Voltage up to 500V.
PM-3133iP series: Input Voltage up to 600V.
For any higher Input Voltage large than 500V/600V, please add the PT (power transformer), and Change PT RATIO setup for reference voltage.
2. Confirm the RST (ABC) phase sequence.

2.3.Current Input

1. The external CT's are fragile, please handle with care.
2. The current input of PM-3133P/PM-3133iP series is in mV range. The other CT's, for example, from panel will damage the instrument due to its large current (around 5A)
3. CT Selection Considerations:

Adding current transformer (333mV Output CTs) has the effect of reducing the measured current by the CT ratio (let's say 40:1 for 200A CT as example). So a current of 200A becomes 5A. Since the meter sees 5A, many of the measurements it reports will be low by a factor of 40 unless they are scaled up by 40.


Current transformer	CT Ratio	Current transformer	CT Ratio
50A CT	10:1	400A CT	80:1
60A CT	12:1	800A CT	160:1
100A CT	20:1	1000A CT	200:1
200A CT	40:1	1200A CT	240:1

Note:


- A. Please use low phase angle error CTs: essential for accurate power and energy measurements. (Example: phase error $<2^\circ$)
- B. Primary CT accuracy will influence the measurement.
- C. PM-3133P/PM-3133iP only for external 333mV Output CTs (**Rogowski coils are not supported**).
Safe: burden resistor built-in, 333 mVac voltage output at rated full scale current, no shorting blocks needed.
- D. This meter requires external CT(s) to operate:
1P2W-1CT requires 1 CT per meter.
3P3W-2CT/1P3W-2CT requires 2 CTs per meter.
3P4W-3CT/3P3W-3CT requires 3 CTs per meter.

2.4.Wiring


- 1P2W-1CT
(Single-phase, Single-circuit) (Configuration required via software)

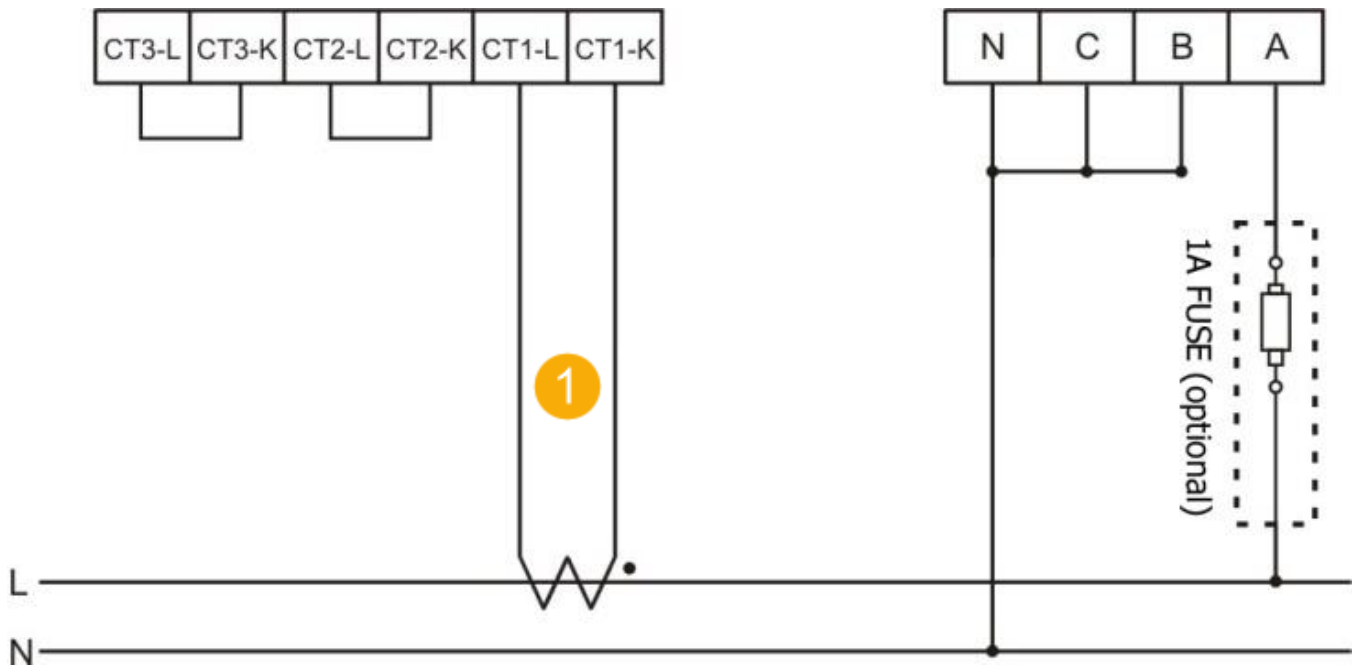


- 1P2W-3CT
(Single-phase, 3-circuit) (Configuration required via software. Select "1P2W-1CT" as the wiring configuration.)

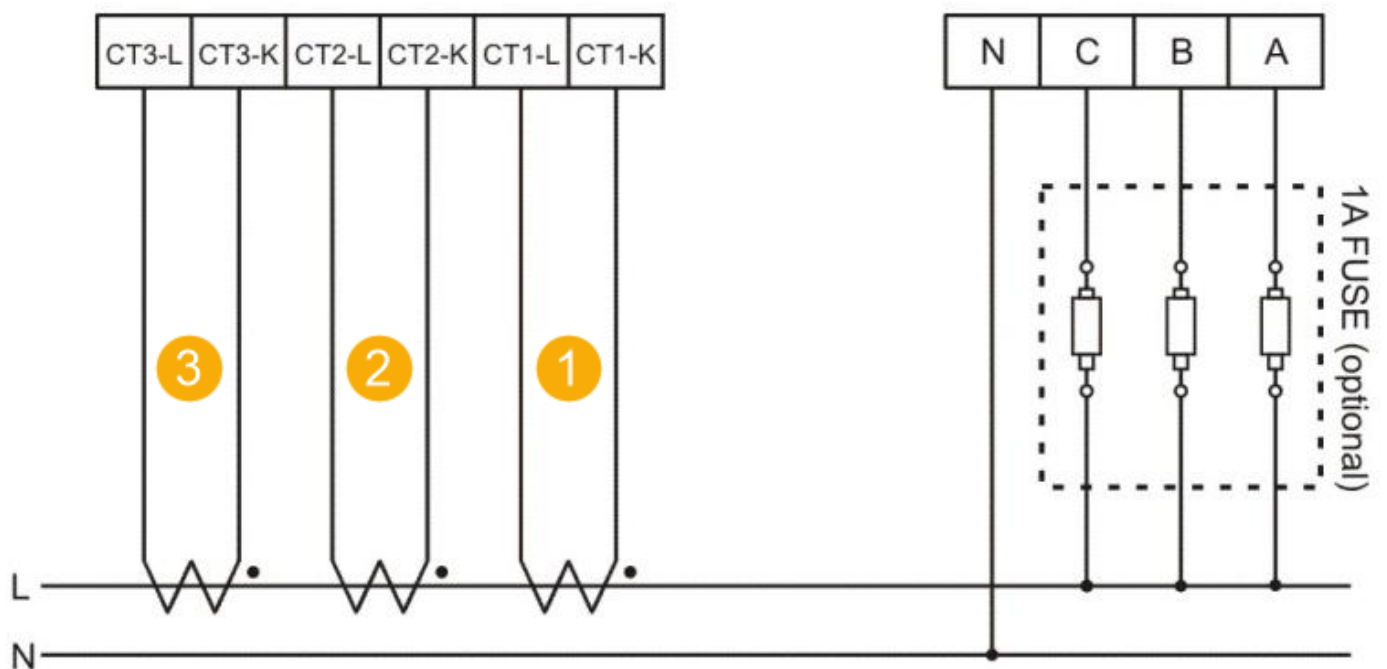


- 1P3W-2CT
(Single-phase, Single-circuit) (Configuration required via software)

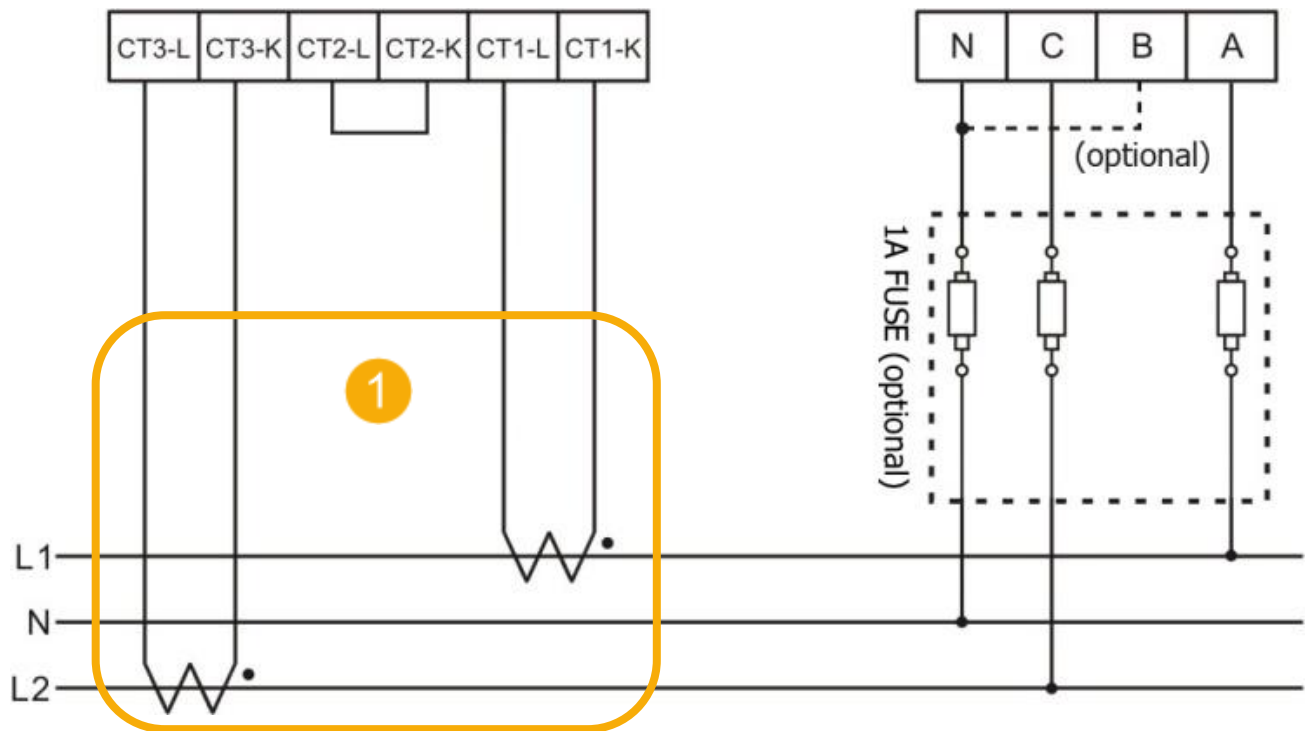


- 3P3W-3CT (Can be configured via software or DIP switch)

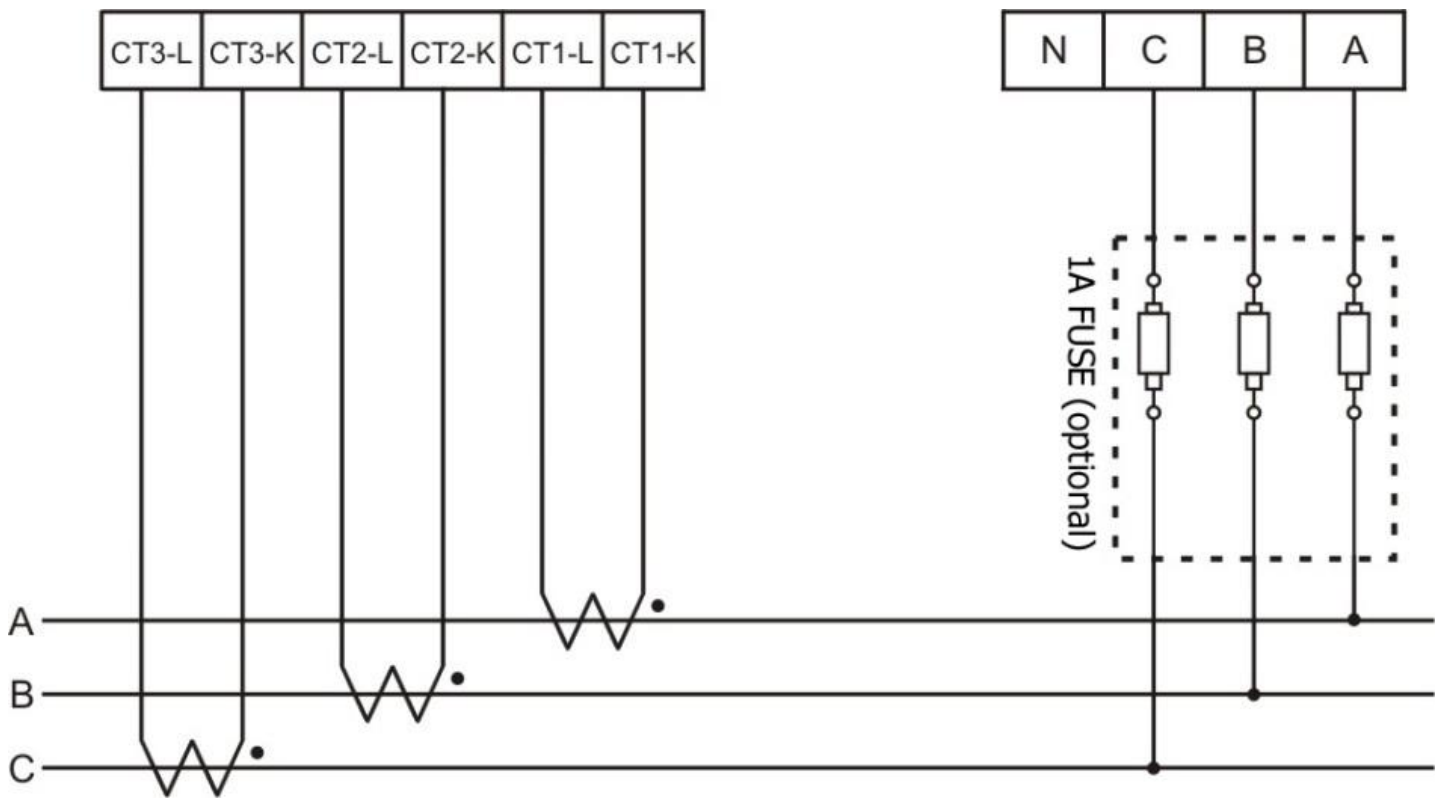

- 3P4W-3CT (Can be configured via software or DIP switch)

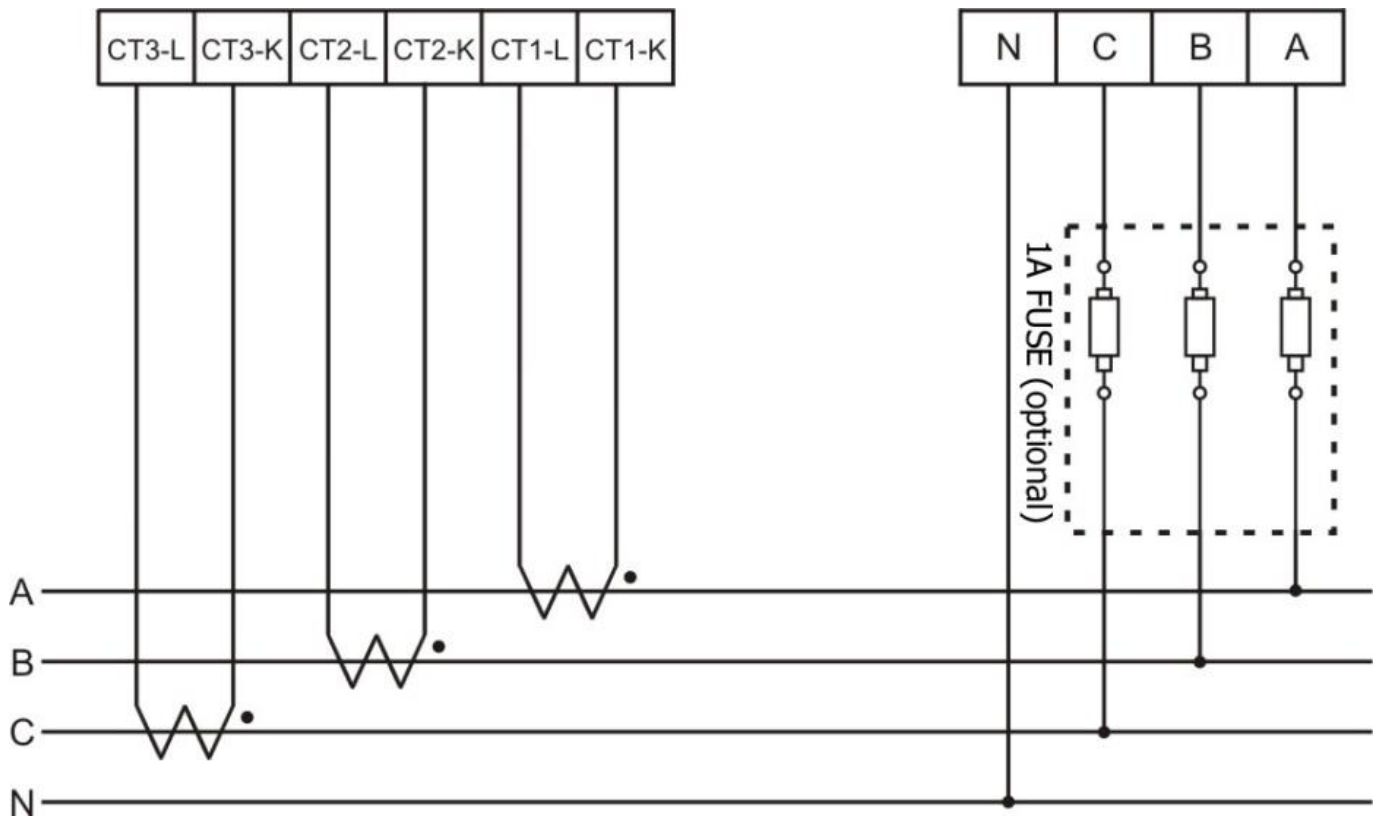

- 3P3W-2CT (Can be configured via software or DIP switch)

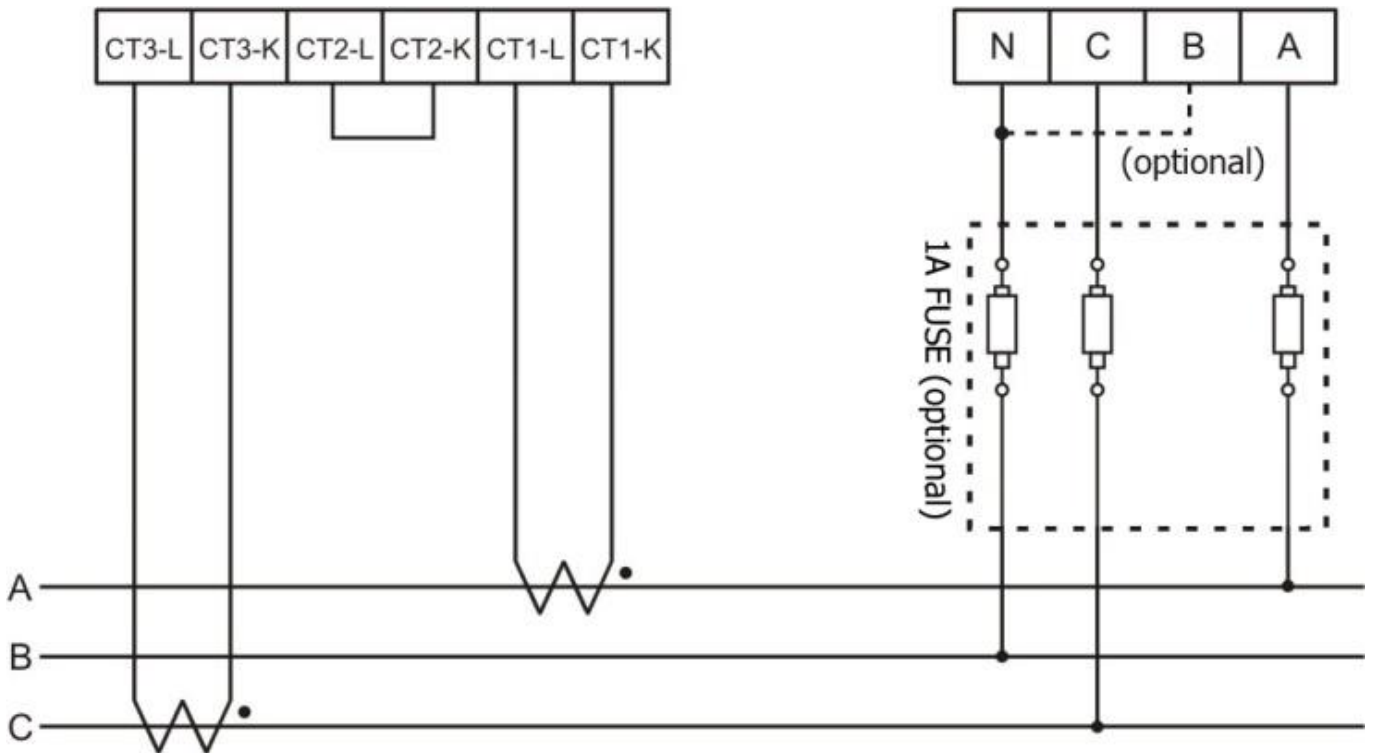

Notes:

1. If phase B is in a floating state, it may pick up induced voltage signals. To avoid this, phase B can be connected to the neutral (N) line.
2. The 3P3W 2CT method is only suitable for **balanced three-phase systems with low harmonic distortion**. For unbalanced loads or systems with significant harmonics, the **3P3W 3CT method** is recommended for accurate measurement. For detailed information, please refer to the Appendix “Questions and Answers” section of the manual.

3. Communication

3.1. RS-485 & CAN setting

- Default setting for RS-485: **19200, n, 8, 1** ,for CAN: **125K bps**
- DIP switch (SW1-SW6) is used for Modbus address(or CANopen Node ID) setting, default is 1, i.e. all OFF



For example: Modbus address(or CANopen Node ID) is 10 · find the table of DIP switch 1-6 is **ON, OFF, OFF, ON, OFF, OFF**


- SW1 — SW6 setting

Setting Modbus-RTU address/CANopen Node ID for communication (1-64)

Modbus Address	SW 1	SW 2	SW 3	SW 4	SW 5	SW 6
1	OFF	OFF	OFF	OFF	OFF	OFF
2	ON	OFF	OFF	OFF	OFF	OFF
3	OFF	ON	OFF	OFF	OFF	OFF
4	ON	ON	OFF	OFF	OFF	OFF
5	OFF	OFF	ON	OFF	OFF	OFF
6	ON	OFF	ON	OFF	OFF	OFF
7	OFF	ON	ON	OFF	OFF	OFF
8	ON	ON	ON	OFF	OFF	OFF
9	OFF	OFF	OFF	ON	OFF	OFF
10	ON	OFF	OFF	ON	OFF	OFF

- SW7 — SW8 For Baud Rate Setting

RS-485	CAN	SW 7	SW8
9600 bps	125k (Default) bps	OFF	OFF
19200 (Default) bps	250k bps	ON	OFF
38400 bps	500k bps	OFF	ON
115200 bps	1M bps	ON	ON

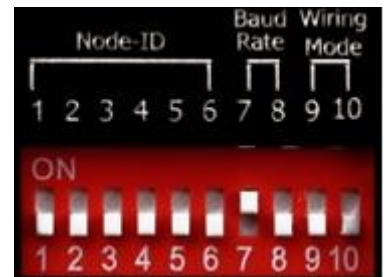

- Select the different wiring mode
(Please select the Software setting, if 1P2W-1CT or 1P3W-2CT is used)

Models	PM-3133P PM-3133iP		PM-3133P -MTCP/ PM-3133iP -MTCP	
Wiring	SW 9	SW 10	SW 1	SW 2
Software setting	OFF	OFF	OFF	OFF
3P3W-2CT	ON	OFF	ON	OFF
3P3W-3CT	OFF	ON	OFF	ON
3P4W-3CT	ON	ON	ON	ON



Ethernet default settings :

For recovering to default settings, dip Init/Run Switch (SW 4) to Init position for 10 seconds after power on, the settings will be changed as default values. Must dip back to Run position and repower on after settings changed. User also can recover settings to default value by Modbus command.

IP Address	192.168.255.1
Subnet mask	255.255.0.0
Gateway	192.168.0.1
Port	502

Questions & Answers:

PC and meter cannot make the connection with RS-485 ?

Add the Bias Resistor on RS-485 Network for stable signal

The RS-485 master is required to provide the bias for PM-3133 series. Otherwise, the tM-SG4 or SG-785 should be added to provide the bias. All ICP DAS controllers and converters provide the bias.



What problem is while the measured readings of the power consumption (kw) is negative?

- (1) First check the current input end – line terminal, (check the connection should be **CT1-K, CT1-L, CT2-K, CT2-L, CT3-K, CT3-L**) · base on white black, white black, white black follow the sequence order
- (2) Check the field current direction(K→L)is same as the inner arrow direction of the split type clip-on CT.
- (3) Incorrect voltage or current wiring sequence may lead to phase angle calculation errors, causing the power meter to misinterpret the direction of power flow. This may also result in an abnormally low Power Factor (PF) reading.

4. Power Meter Utility

Power Meter Utility has to be installed on PC and it enables to retrieve and display the power measurement values that measured by power meter via COM Port or Ethernet. The users will be able to read the power measurement values and to perform parameter settings of the meter.

Visit www.icpdas.com/, search [Power Meter Utility], and download the tool.

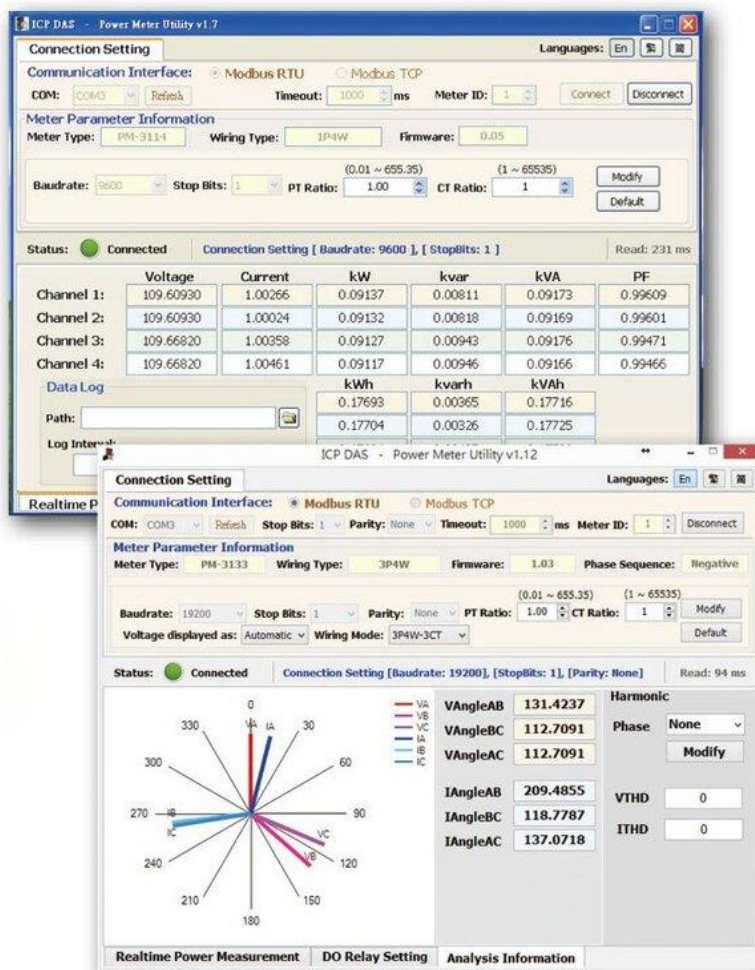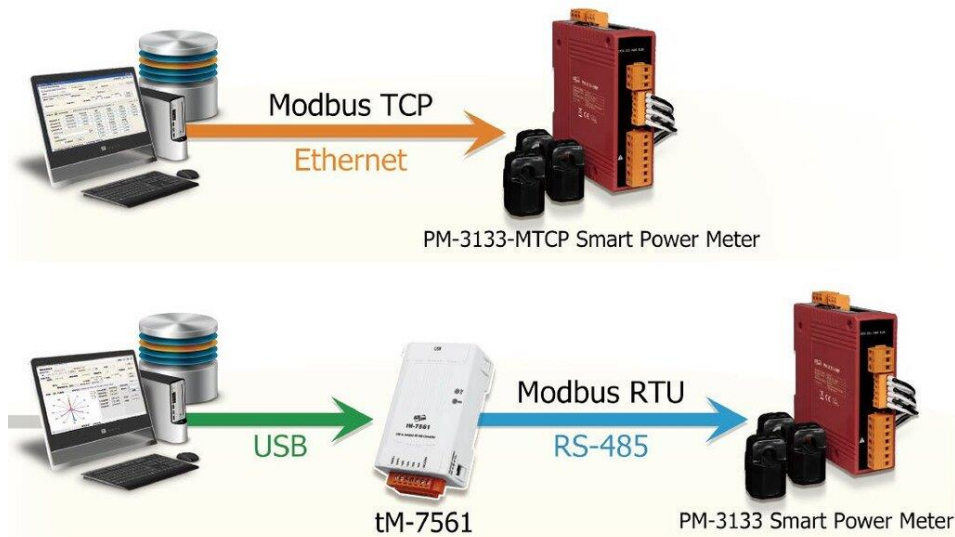

5. CANopen Master Utility

Visit www.icpdas.com/, search [CANopen Master Utility], and download the tool.



CANopen Master Utility

Module AddNode Load EDS Test About

COM6: I-7565-CPM: 1000 k bps

- Node: 001 - PM-3133-CPS
 - SYNC: 0x80
 - EMCY: 0x81
 - SDO Object:
 - RxPDO Objects:
 - 0x201
 - TxPDO Objects:
 - 0x181
 - 0x281
 - 0x381
 - 0x481
 - Demo:

NMT SYNC EMCY SDO RxPDO TxPDO Demo

Power Meter Information

Meter Type: **PM-3133-CPS** Wiring Type: **3P4W** Firmware: **3.3** Phase Sequence: **Negative**

Voltage displayed as: **Automat** Wiring Mode: **3P4W-3C1** PT Ratio: **1.00** CT Ratio: **1**

Status: **Connected** **33** Read: 298ms

	Voltage	Current	kW	kvar	kVA	PF
Channel A: (CT-1)	0.00000000	0.00000000	0.00000000	0.00000000	0.00000000	0.00000000
Channel B: (CT-2)	0.00000000	0.00000000	0.00000000	0.00000000	0.00000000	0.00000000
Channel C: (CT-3)	0.00000000	0.00000000	0.00000000	0.00000000	0.00000000	0.00000000
AvgTotal:	0.00000000	0.00000000	0.00000000	0.00000000	0.00000000	0.00000000

Data Log

Path:

Log Interval: **1** sec.

	kWh	kvarh	kVAh	Frequency
	0.00324098	0.00313443	0.00463171	0.00000000
	0.00050968	0.00005562	0.00050942	0.00000000
	0.00051019	0.00003039	0.00050996	0.00000000
	0.00426085	0.00297029	0.00565109	0.00000000

Realtime Measure DO Output Status Analysis Info. Harmonics Voltage Dip Swell