



Packing List

In addition to this guide, the package includes the following items:




PM-4324-xxxP /
 PM-4324A-xxxP * 1



Screw Driver * 1



Cable ties * 24

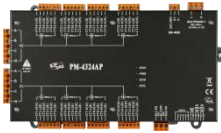

PM-4324P /
 PM-4324AP * 1




Screw Driver * 1

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

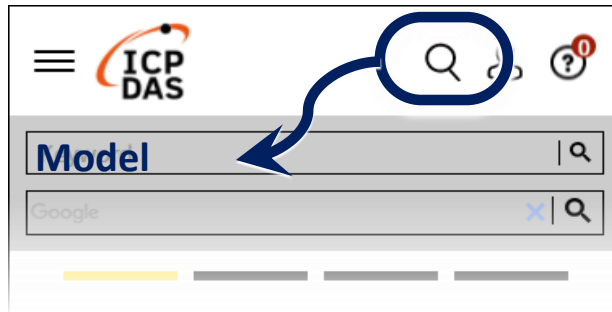

Technical Support

service@icpdas.com
www.icpdas.com

- For Desktop Web



1.1. Caution & Warning



The meter contains hazardous voltages, and should never be disassembled. Failing to follow this practice will result in serious injury or death. Any work on or near energized meters, meter sockets, or other metering equipment could induce a danger of electrical shock. It is strongly recommended that all work should be performed only by qualified industrial electricians and metering specialist. ICP DAS assumes no responsibility if your electrical installer does not follow the appropriate national and local electrical codes.

ICP DAS assumes no liability for any damage resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, not for any infringements of patents or other rights of third parties resulting from its use.

1.2. Limitation of Warranty

This warranty does not apply to defects resulting from unauthorized modification, misuse, or use for reason other than electrical power monitoring. The supplied meter is not a user-serviceable product.

2. Installation

Please use the soft dry clothes to clean the instrument.

Please do not use any chemical or detergent or volatile solvents to clean the instrument, in order to avoid any possibility of the cover damage.

- Please read this operation manual carefully before using.
- Please re-confirm the measure position.
- Reconfirm the RST (ABC) phase sequence of the power system.
- Meter auxiliary power is AC +100V ~+240V.

2.1.Connection

Please ensure that the arrow direction marking on the CT aligns with the current flow direction (K→L).

Note: it must be in the same direction.

Connect the voltage input terminal N C B A. for PM-4324P/PM-4324AP series, in the three phase order as follows on N C B A.

2.2.Voltage Input

1. Input Voltage up to 500V.

For any higher Input Voltage large than 500V, please add the PT (power transformer), and Change PT RATIO setup for reference voltage.

2. Confirm the RST (ABC) phase sequence.

3. CT to Reference Voltage Mapping:

PM-4324P/PM-4324P-xxxP:

CT1 ~ CT24 for reference voltage V1.


PM-4324AP/ PM-4324AP-xxxP:

CT1 ~ CT12 for reference voltage V1; CT13 ~ CT24 for reference voltage V2.

2.3. PM-4324A/PM-4324A-xxxP Single Main Circuit Wiring

Example:

Single Main Circuit 3P4W

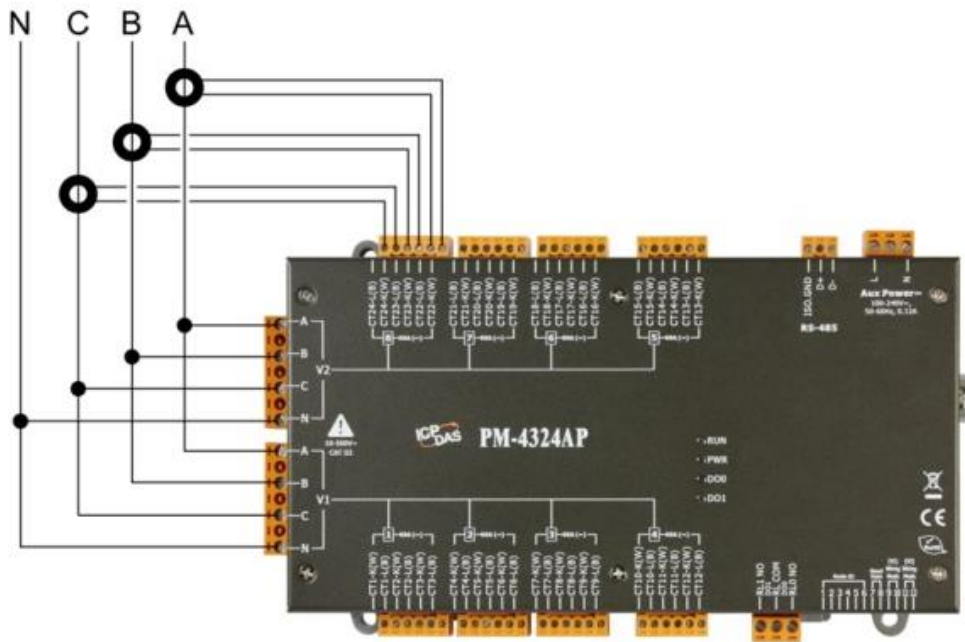


The voltage ratio, display settings, and wiring configuration of V1 and V2 must be identical.

PM-4324P/PM-4324-xxxP Single Main Circuit Wiring


Example:

Single Main Circuit 3P4W

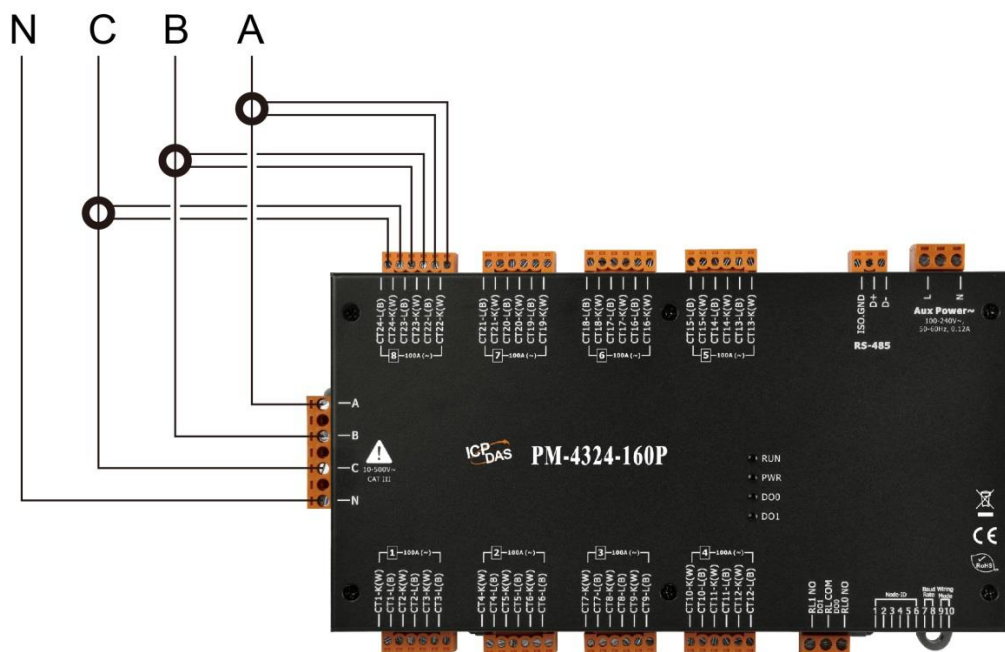


PM-4324A/PM-4324A-xxxP Dual Main Circuit Wiring Example:

Dual Main Circuit 3P4W + 1P2W

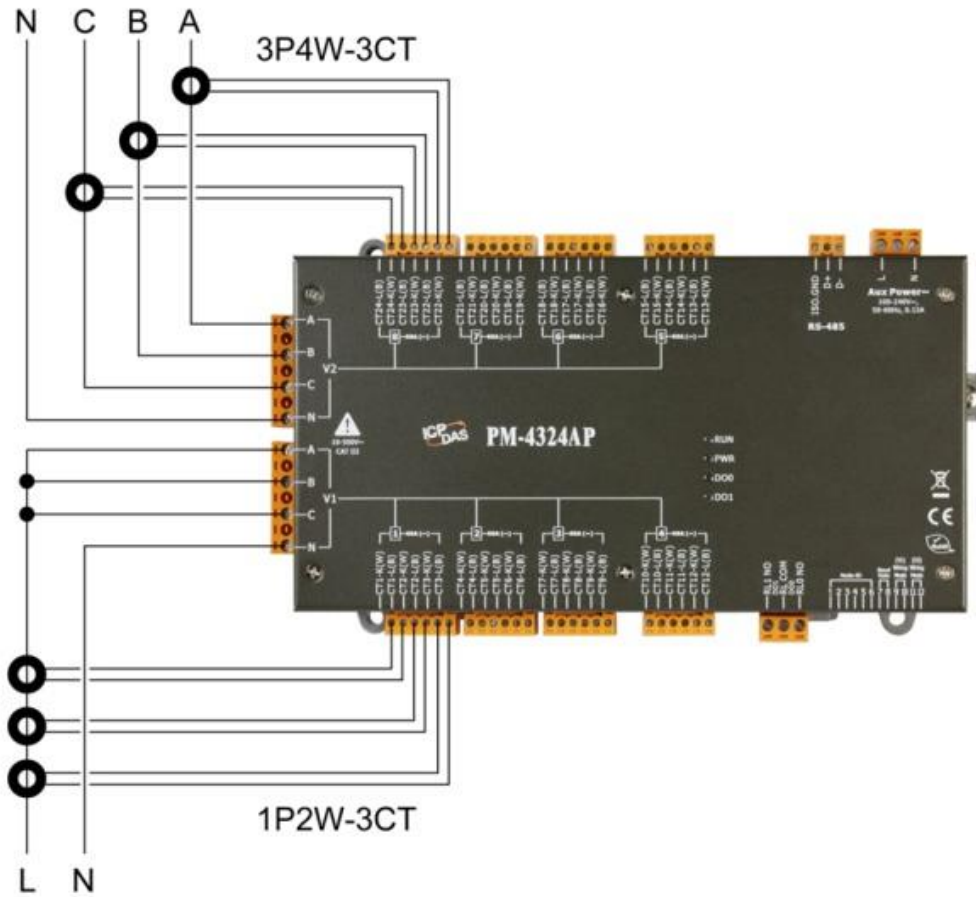


2.4.Wiring


- 1P2W-1CT:

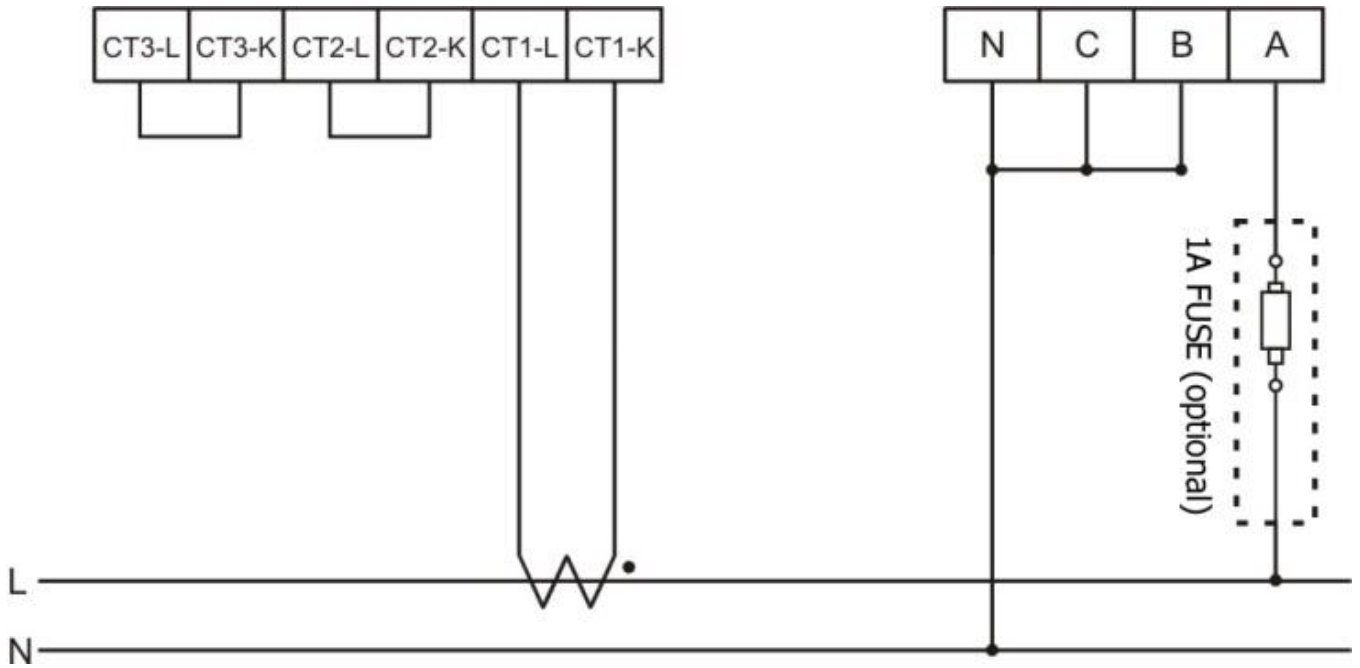

- 1P2W-3CT: Select "1P2W-1CT" as the wiring configuration.

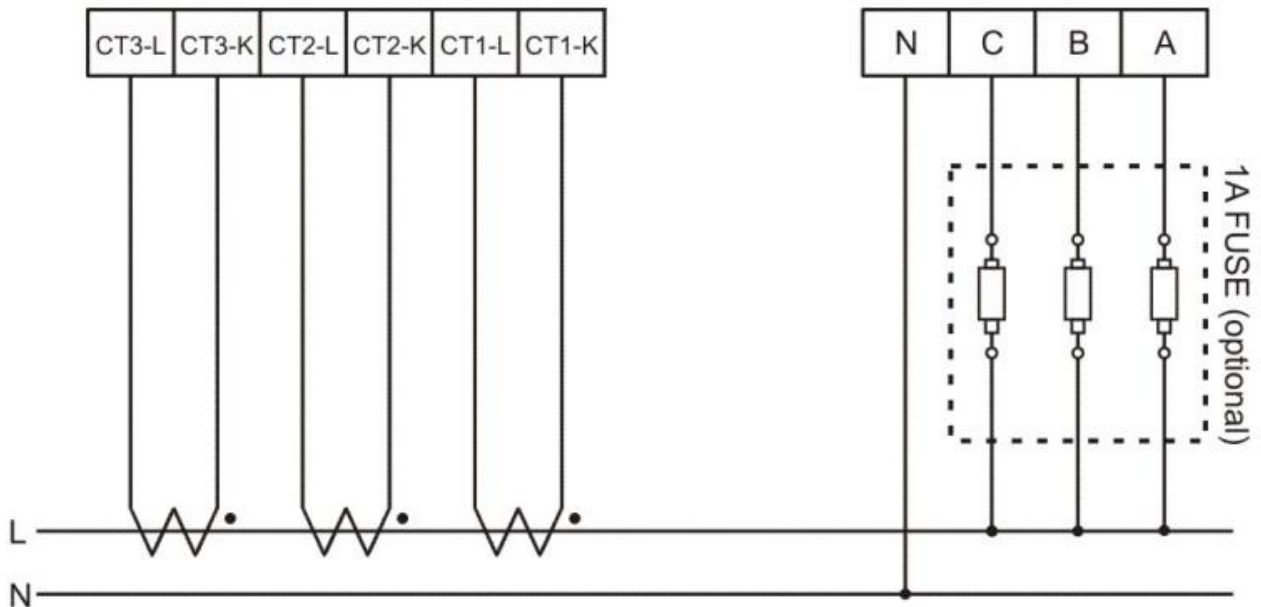


- 1P3W-2CT:

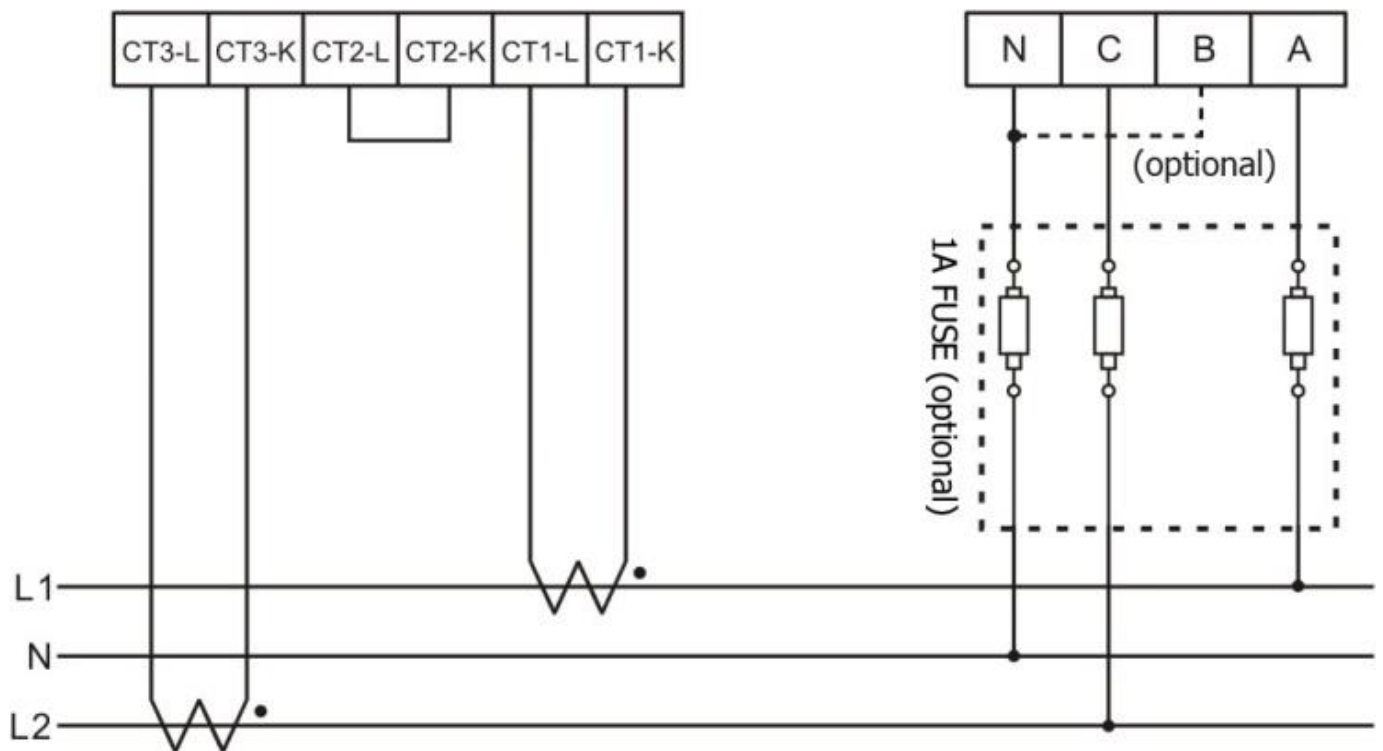


- 3P3W-2CT:


(If phase B is in a floating state, it may pick up induced voltage signals. To avoid this, phase B can be connected to the neutral (N) line.)

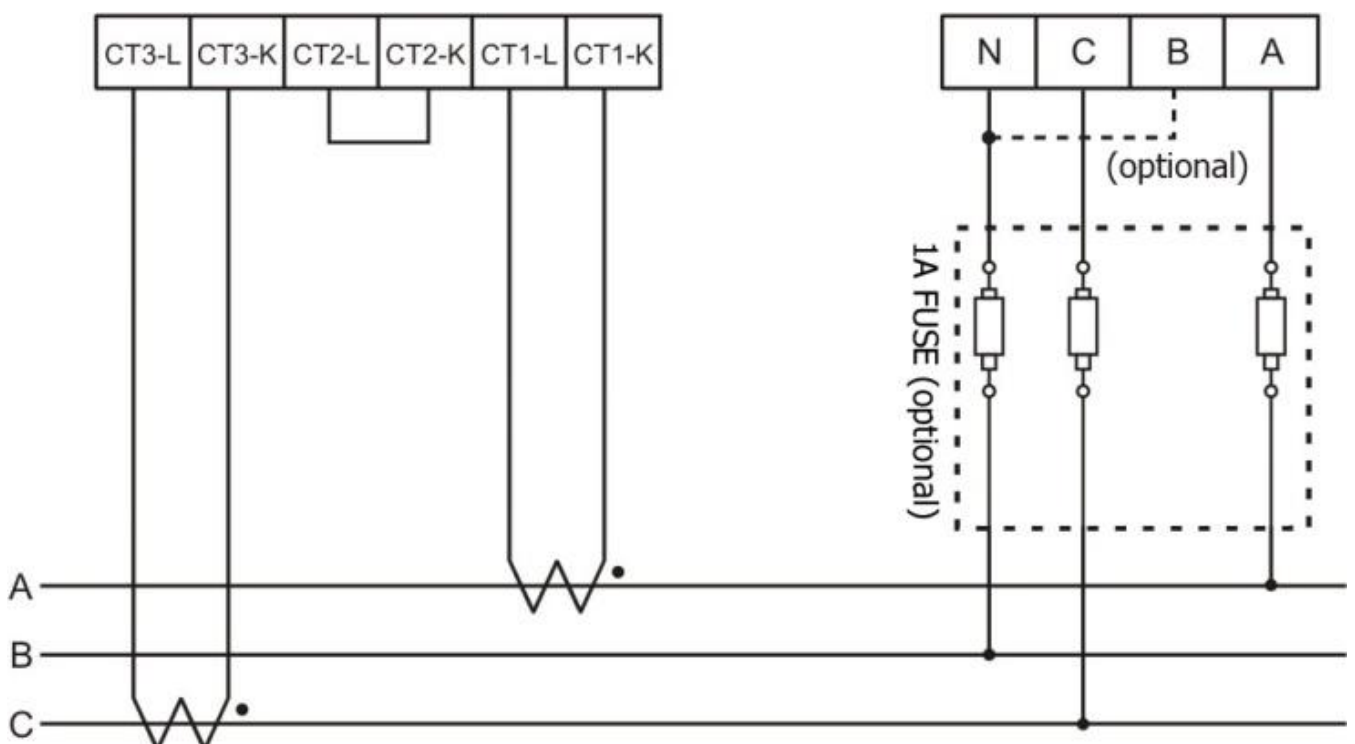

● 3P3W-3CT:

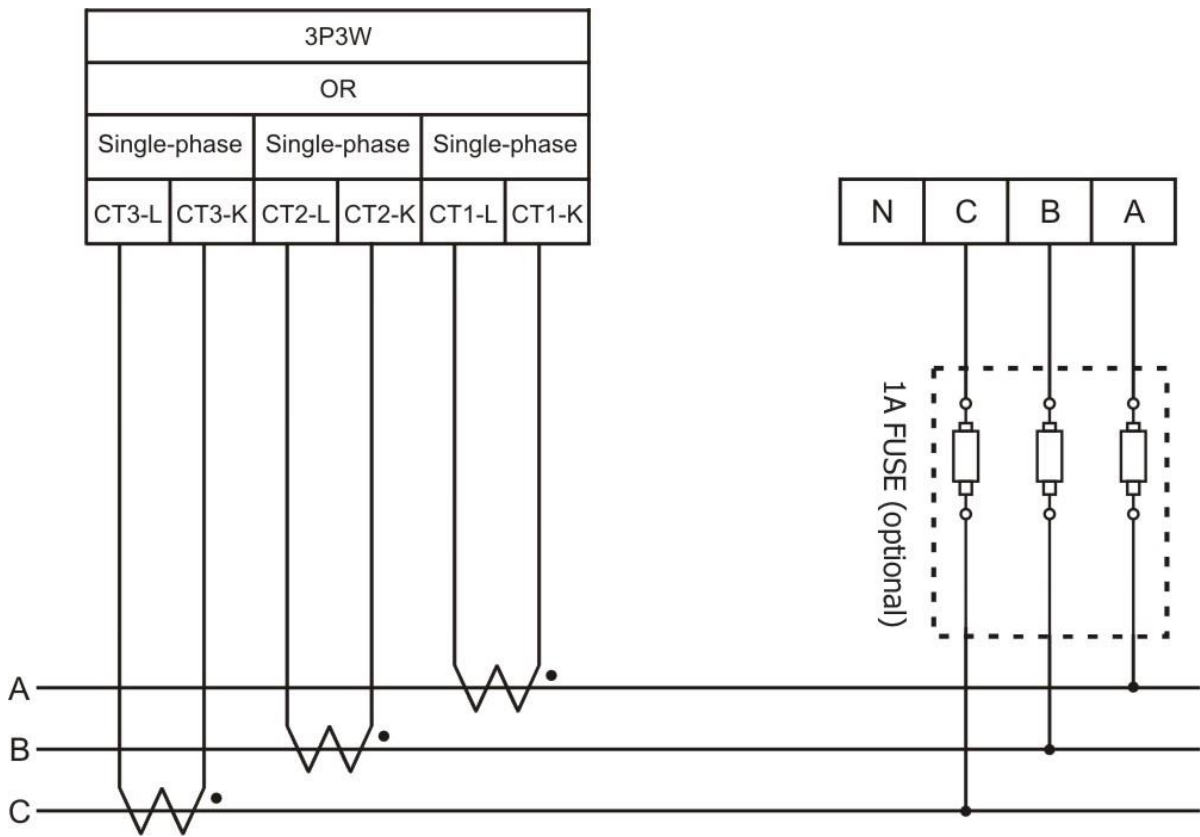

● 3P4W-3CT:

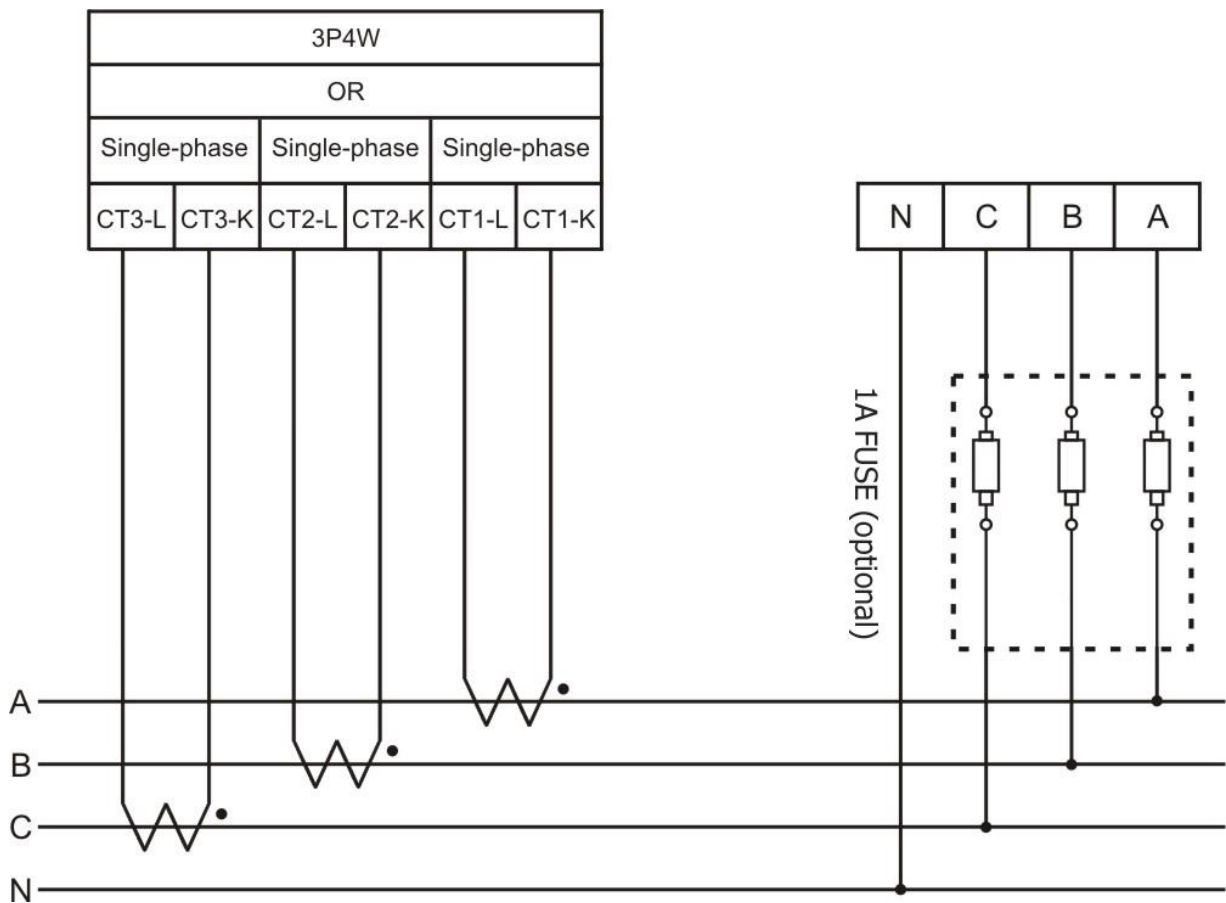

2.5. PM-4324P/PM-4324AP Current Input

1. The external CT's are fragile, please handle with care.
2. This instrument is designed to accept current transformer (CT) inputs in the millivolt (mV) range. Using CTs that provide high-current outputs (e.g., 5A panel-mounted CTs) may result in equipment damage.
3. CT to Reference Voltage Mapping:
 PM-4324P:
 CT1 ~ CT24 for reference voltage V1.
 PM-4324AP:
 CT1 ~ CT12 for reference voltage V1; CT13 ~ CT24 for reference voltage V2.

4. CT Selection Considerations:

Adding current transformer (333mV Output CTs) has the effect of reducing the measured current by the CT ratio (let's say 40:1 for 200A CT as example). So a current of 200A becomes 5A. Since the meter sees 5A, many of the measurements it reports will be low by a factor of 40 unless they are scaled up by 40.

Current transformer	CT Ratio	Current transformer	CT Ratio
50A CT	10:1	400A CT	80:1
60A CT	12:1	800A CT	160:1
100A CT	20:1	1000A CT	200:1
200A CT	40:1	1200A CT	240:1

Note:


- A. Please use low phase angle error CTs: essential for accurate power and energy measurements. (Example: phase error <math><2^\circ</math>)
- B. Primary CT accuracy will influence the measurement.
- C. PM-4324P/PM-4324AP only for external 333mV Output CTs (**Rogowski coils are not supported**).
 Safe: burden resistor built-in, 333 mVac voltage output at rated full scale current, no shorting blocks needed.
- D. This meter requires external CT(s) to operate:
 1P2W-1CT requires 1 CT per meter.
 3P3W-2CT/1P3W-2CT requires 2 CTs per meter.
 3P4W-3CT/3P3W-3CT requires 3 CTs per meter.

2.6. PM-4324-xxxP/PM-4324A-xxxP Wire Disconnection


1. Unlock the CT clip and remove the CT from the power cable, avoiding disconnecting the CT terminal wires if possible (do not disconnect the terminal wires first).

Warning! If you need to remove the CT terminal wires, make sure to first detach the CT before removing the CT terminal wires. This is to prevent high open-circuit secondary voltage being generated on the secondary side of the CT, which could cause electric shock or damage to the CT and connected equipment in the secondary circuit.

2. Disconnect the voltage input wires from the terminals and wrap the wire ends with insulating tape.
3. Disconnect the communication wires from the terminal.
4. Disconnect the auxiliary power from the terminal, then wrap the wire ends with insulating tape.

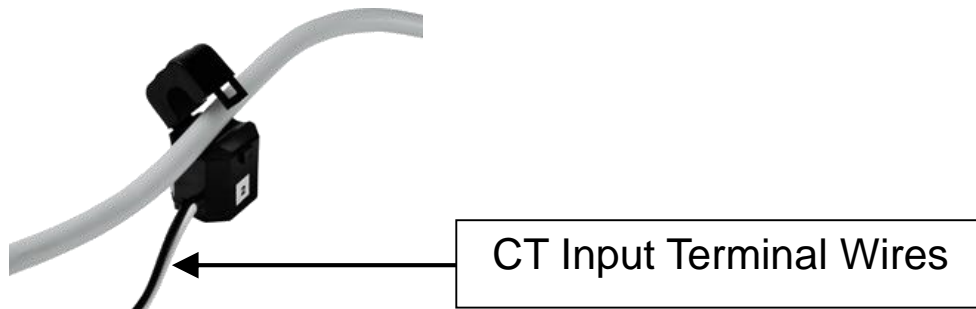

2.7. PM-4324-xxxP/PM-4324A-xxxP CT Installation Steps

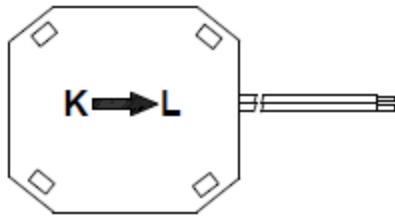


Bottom view



- At the bottom of the CT, there is a “K→L” mark.
- Open the CT clip.



- Make sure the power current direction follow the “K→L” marking on the CT and then close the CT clip.
- Complete the Installation.

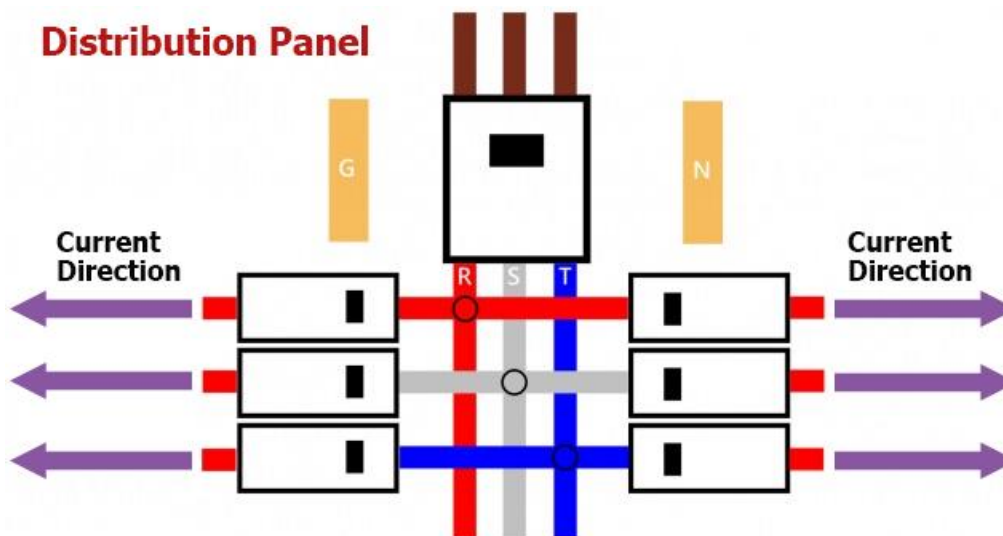

2.8.Communication

RS-485 & CAN setting

- Default setting for RS-485: **19200, n, 8, 1** ,for CAN: **125K bps**
- DIP switch (SW1-SW6) is used for Modbus address(or CANopen Node ID) setting, default is 1, i.e. all OFF

For example: Modbus address(or CANopen Node ID) is 10 · find the table of DIP switch 1-6 is **ON, OFF, OFF, ON, OFF, OFF**

- SW1 – SW6 setting: Setting Modbus-RTU address/ CANopen Node ID for communication (1-64)

Modbus Address	SW 1	SW 2	SW 3	SW 4	SW 5	SW 6
1	OFF	OFF	OFF	OFF	OFF	OFF
2	ON	OFF	OFF	OFF	OFF	OFF
3	OFF	ON	OFF	OFF	OFF	OFF
4	ON	ON	OFF	OFF	OFF	OFF
5	OFF	OFF	ON	OFF	OFF	OFF
6	ON	OFF	ON	OFF	OFF	OFF

- SW7 – SW8 setting: For Baud Rate Setting

RS-485	CAN	SW 7	SW8
9600 bps	125k (Default) bps	OFF	OFF
19200 (Default) bps	250k bps	ON	OFF
38400 bps	500k bps	OFF	ON
115200 bps	1M bps	ON	ON

Select the different wiring mode:

(Please select the Software setting, if 1P2W-1CT, 1P2W-3CT or 1P3W-2CT is used)

Reference voltage	V1		V2	
	PM-4324-xxxP/ PM-4324A-xxxP/ PM-4324P/ PM-4324AP		PM-4324A-xxxP/ PM-4324AP	
Wiring	SW 9	SW 10	SW 11	SW 12
Software setting	OFF	OFF	OFF	OFF
3P3W-2CT	ON	OFF	ON	OFF
3P3W-3CT	OFF	ON	OFF	ON
3P4W-3CT	ON	ON	ON	ON

Ethernet default settings :

For recovering to default settings, dip Init/Run Switch (SW 7) to Init position for 10 seconds after power on, the settings will be changed as default values. Must dip back to Run position and repower on after settings changed. User also can recover settings to default value by Modbus command.

IP Address	192.168.255.1
Subnet mask	255.255.0.0
Gateway	192.168.0.1
Port	502

3. Common Malfunction Analysis:

3.1. PC and meter cannot make the connection with RS-485 ?

Add the Bias Resistor on RS-485 Network for stable signal
The RS-485 master is required to provide the bias for PM-4324 series. Otherwise, the tM-SG4 or SG-785 should be added to provide the bias. All ICP DAS controllers and converters provide the bias.

3.2. What problem is while the measured readings of the power consumption (kw) is negative?

- (1)First check the current input end – line terminal, (check the connection should be **CT1-K, CT1-L, CT2-K, CT2-L, CT3-K, CT3-L**) · base on white black, white black, white black follow the sequence order
- (2)Check the field current direction(K→L)is same as the inner arrow direction of the split type clip-on CT.
- (3)Incorrect voltage or current wiring sequence may lead to phase angle calculation errors, causing the power meter to misinterpret the direction of power flow. This may also result in an abnormally low Power Factor (PF) reading.