

| | | | | | |
|----------------|-----------------------------------|-----------------------------------|---|---|----------------------------------|
| Classification | <input type="checkbox"/> tDS | <input type="checkbox"/> tGW | <input checked="" type="checkbox"/> PETL/tET/tPET | <input type="checkbox"/> DS/PDS/PPDS | <input type="checkbox"/> tM-752N |
| | <input type="checkbox"/> I/O Card | <input type="checkbox"/> VXC Card | <input type="checkbox"/> VxComm | <input checked="" type="checkbox"/> Other | |
| Author | Mike Chou | Date | 2020-06-16 | NO. | FAQ052 |

Q: How can I use the multiple ET-2200 / t(P)ET modules to implement the Pair-connection ?

A: (Note: This FAQ apply to ET-2200 and t(P)ET series, the following content using the ET-2200 as the representative)

The Pair-connection technology of the ET-2200 module based on the TCP/IP or UDP/IP protocol mirrors the DIO port of the ET-2200 module to the DIO port of the remote ET-2200 module through the Ethernet to achieve the remoting-control application.

Next, this FAQ will introduce how the Pair-connection works and how to configure the ET-2200 module in the “One-to-Many” and “Many-to-One” architecture.

| Mode/Application | One-to-Many | Many-to-One |
|------------------|---------------------------|---------------------------|
| PUSH | Example 1 | Example 2 |
| PULL | Example 3 | Example 4 |

Pair-connection Mode (PUSH / PULL / Disable)

Based on the Modbus TCP/UDP protocol, the mode of the Pair-connection can be divided to 3 types:

Push

This ET-2200 module is a Master. The module reads the **Local DI** and transmits the DI-state to the **Remote DO** (Slave).

This mode supports the TCP and UDP protocol. (Modbus TCP/UDP)

Pull

This ET-2200 module is a Master. The module reads the **Remote DI** and updates the **Local DO** with the DI-state of the **Remote DI** (Slave).

This mode only supports the TCP protocol. (Modbus TCP)

Disable

Disable this Pair-connection setting row.


PUSH Mode (Local DI → Remote DO)

The **ET-2200#1** will be Client mode (Modbus Master) when setting to **PUSH** mode. The **ET-2200#1** will read the **Local DI** and transmit the DI-state to the **Remote DO**.

The updating method of the PUSH mode can be divided into two ways:

1. If the state of the **Local DI** is changed, the **ET-2200#1** will transmit the updating packet immediately.
2. If the state of the **Local DI** is unchanged, the **ET-2200#1** will transmit the updating packet periodically according the setting of the **Scan Time**.

Note: The Remote DO (ET-2200#2) can be replaced by the Modbus Slave DO device which supports the Modbus TCP/UDP protocol.

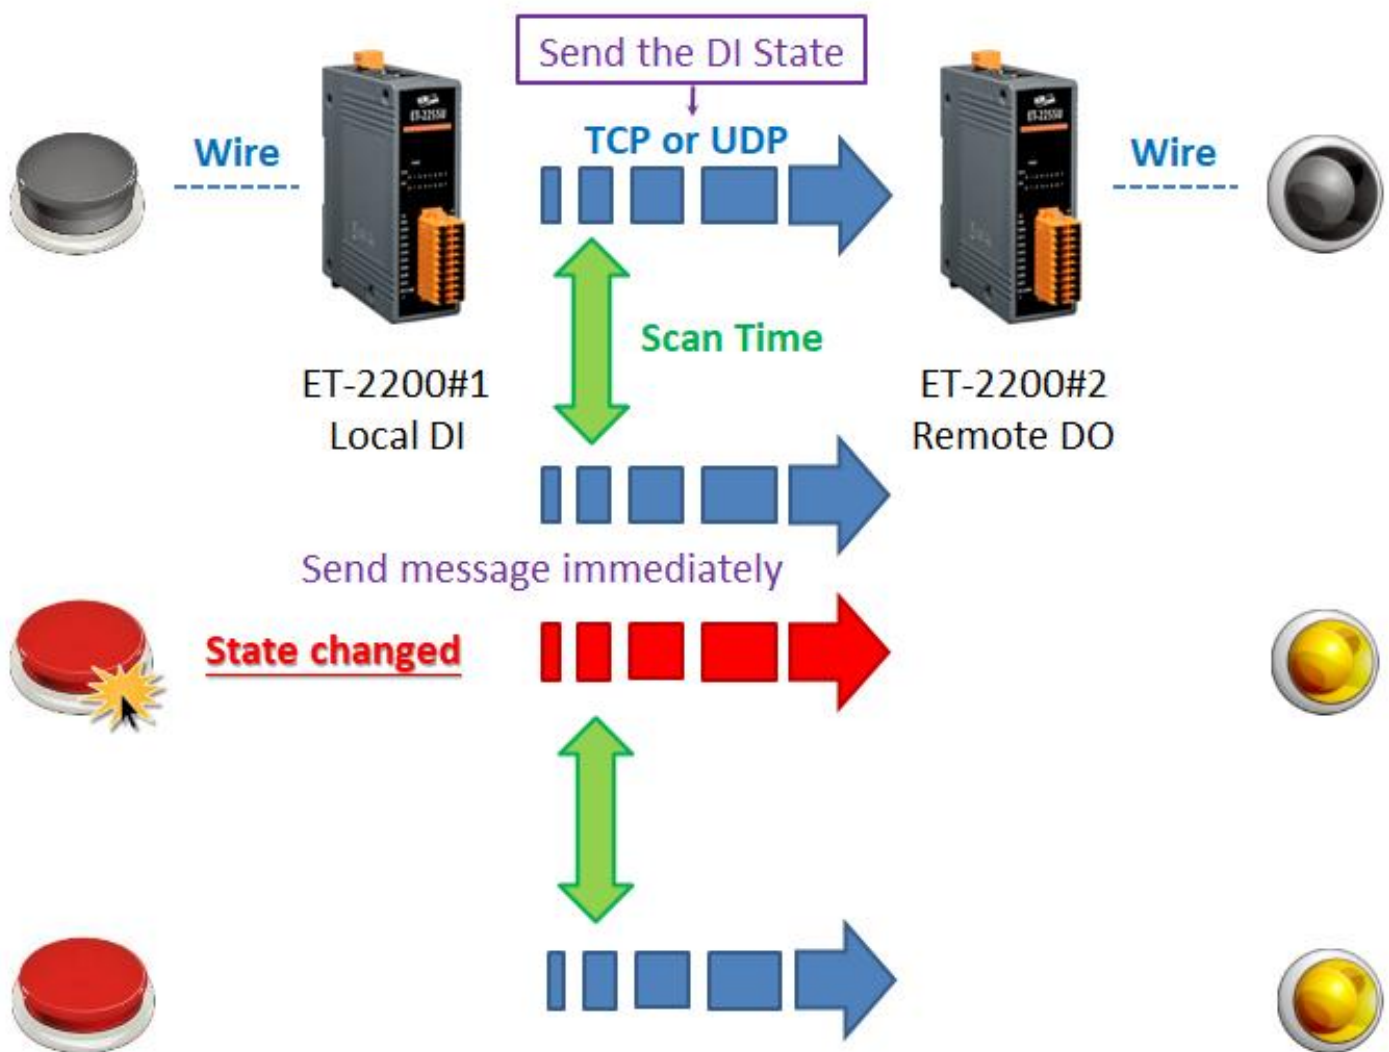

Example 1 (PUSH Mode/One-to-Many)


[back](#)

The **ET-2200#1** is a **Local DI** module (Client/Master) in this example. The **ET-2200#1** transmits the **Local DI** state to two **Remote DO** modules (Server/Slave), i.e., **ET-2200#2** and **ET-2200#3**. This is an implement of the One-to-Many for controlling the **Remote DO**.

This example uses a single DI group to correspond multiple DO groups. The general application mostly uses a single DI group to correspond a single DO group. Please adjust the architecture according to actual requirement.

The following figure shows the situation of **Local DI** changes, the **ET-2200#1** module will transmit the updating packet to all **Remote DO** modules immediately when the button is pressed.

If the state of the **Local DI** is unchanged, the **ET-2200#1** will transmit the updating packet periodically according the setting of the **Scan Time**.

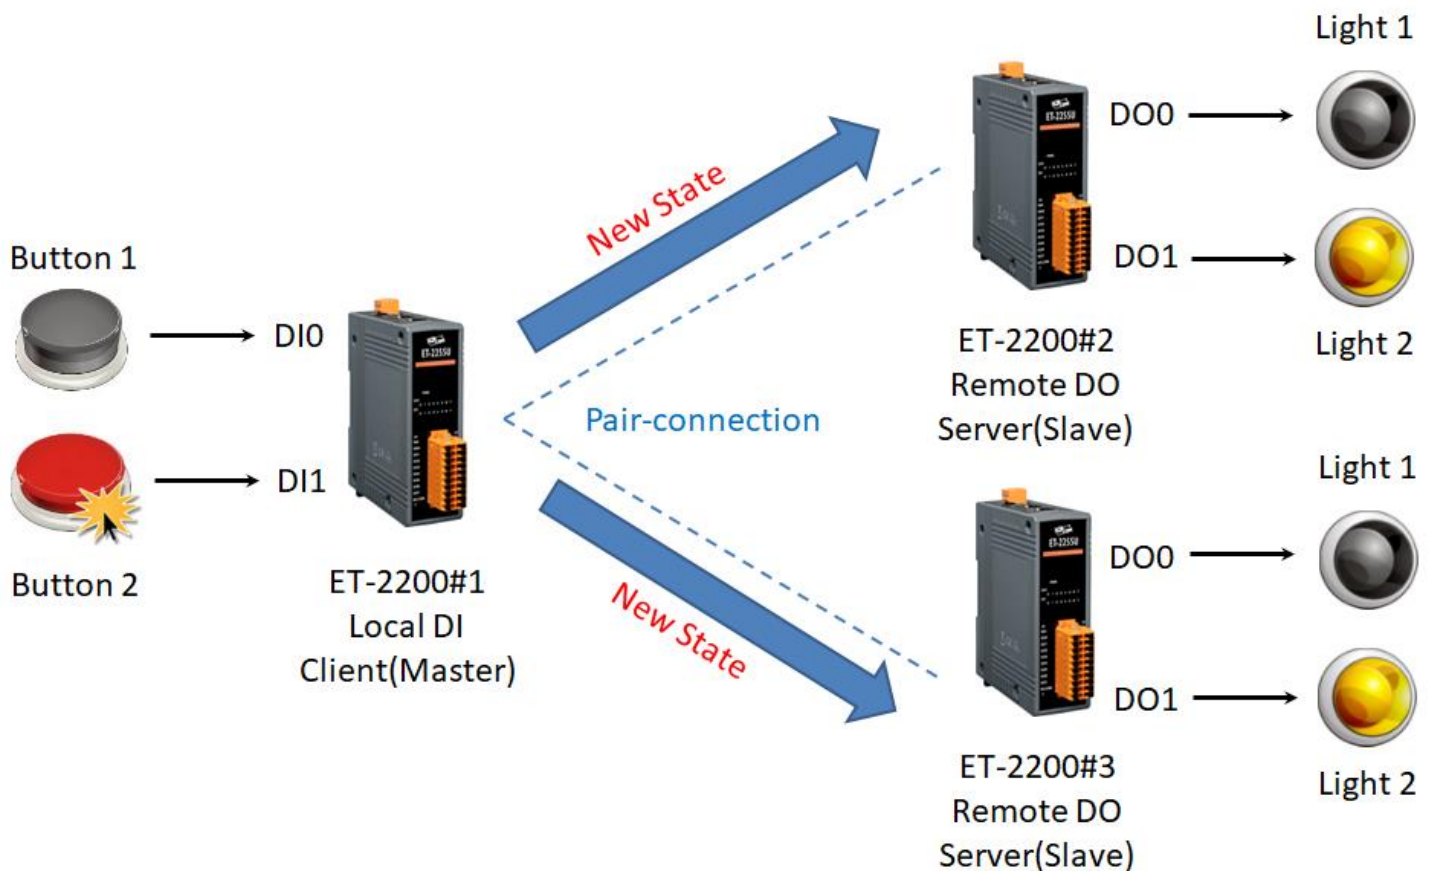

| module | Module specification | | | | | | | |
|-----------|----------------------|------------|------|--------|-----------|---------|-----------|---------|
| | Modbus | IP | Port | Net ID | DI Number | DI Addr | DO Number | DO Addr |
| ET-2200#1 | Master | 10.0.8.101 | 502 | 1 | 2 | 0 | - | - |
| ET-2200#2 | Slave | 10.0.8.102 | 502 | 2 | - | - | 2 | 0 |
| ET-2200#3 | Slave | 10.0.8.103 | 502 | 3 | - | - | 2 | 0 |

Note: The module specification is the assumed value. Please adjust the Pair-connection settings according to your module model when testing.

Pair-connection settings (PUSH)

Step 1 Enter the Pair-connection page of the **ET-2200#1**.

Ethernet I/O Module

Home | Network | I/O Settings | Sync | PWM | **Pair** | Filter | Monitor | Password | Logout
MQTT (Topics: DO | DI)

Step 2 On the **ET-2200#1** page, add the **ET-2200#2** module to the Pair-connection list #01 and click the **Submit** button.

In the PUSH mode:

DI represents the Local DI. Please enter the ET-2200#1 module specification;

DO represents the Remote DO. Please enter the ET-2200#2 module specification.

Step 3 On the **ET-2200#1** page, add the **ET-2200#3** module to the Pair-connection list #02 and click the **Submit** button.

In the PUSH mode:

DI represents the Local DI. Please enter the ET-2200#1 module specification;

DO represents the Remote DO. Please enter the ET-2200#3 module specification.

| # | Mode | Remote IP | | | | Remote Port | Net ID | Scan Time | DI Count | DI Addr | DO Addr | TCP/UDP | Update |
|----|--------|-----------|---|---|-----|-------------|--------|-----------|----------|---------|---------|---------|--------|
| 01 | PUSH ▾ | 10 | 0 | 8 | 102 | 502 | 2 | 1000 ms | 2 | 0 | 0 | TCP ▾ | Submit |
| 02 | PUSH ▾ | 10 | 0 | 8 | 103 | 502 | 3 | 1000 ms | 2 | 0 | 0 | TCP ▾ | Submit |

Step 4 Reboot the **ET-2200#1** module and test the Pair-connection function.

Example 2 (PUSH Mode/Many-to-One)


[back](#)

The **ET-2200#1** and **ET-2200#2** are two **Local DI** modules (Client/Master) in this example. The **ET-2200#1** and **ET-2200#2** transmit the **Local DI** states to the same **Remote DO** module (Server/Slave), i.e., **ET-2200#3**. This is an implement of the Many-to-One for controlling the **Remote DO**.

Note: The ET-2200#3 DO addresses which are mirrored by ET-2200#1 and ET-2200#2 can't overlap. In general, one DO point should be controlled by only one DI point.

The following figure shows the situation of **Local DI** changes, the **ET-2200#1** and **ET-2200#2** modules will transmit the updating packet to the same **Remote DO** module immediately when the button is pressed.

If the state of the **Local DI** is unchanged, the **ET-2200#1** and **ET-2200#2** will transmit the updating packet periodically according the setting of the **Scan Time**.

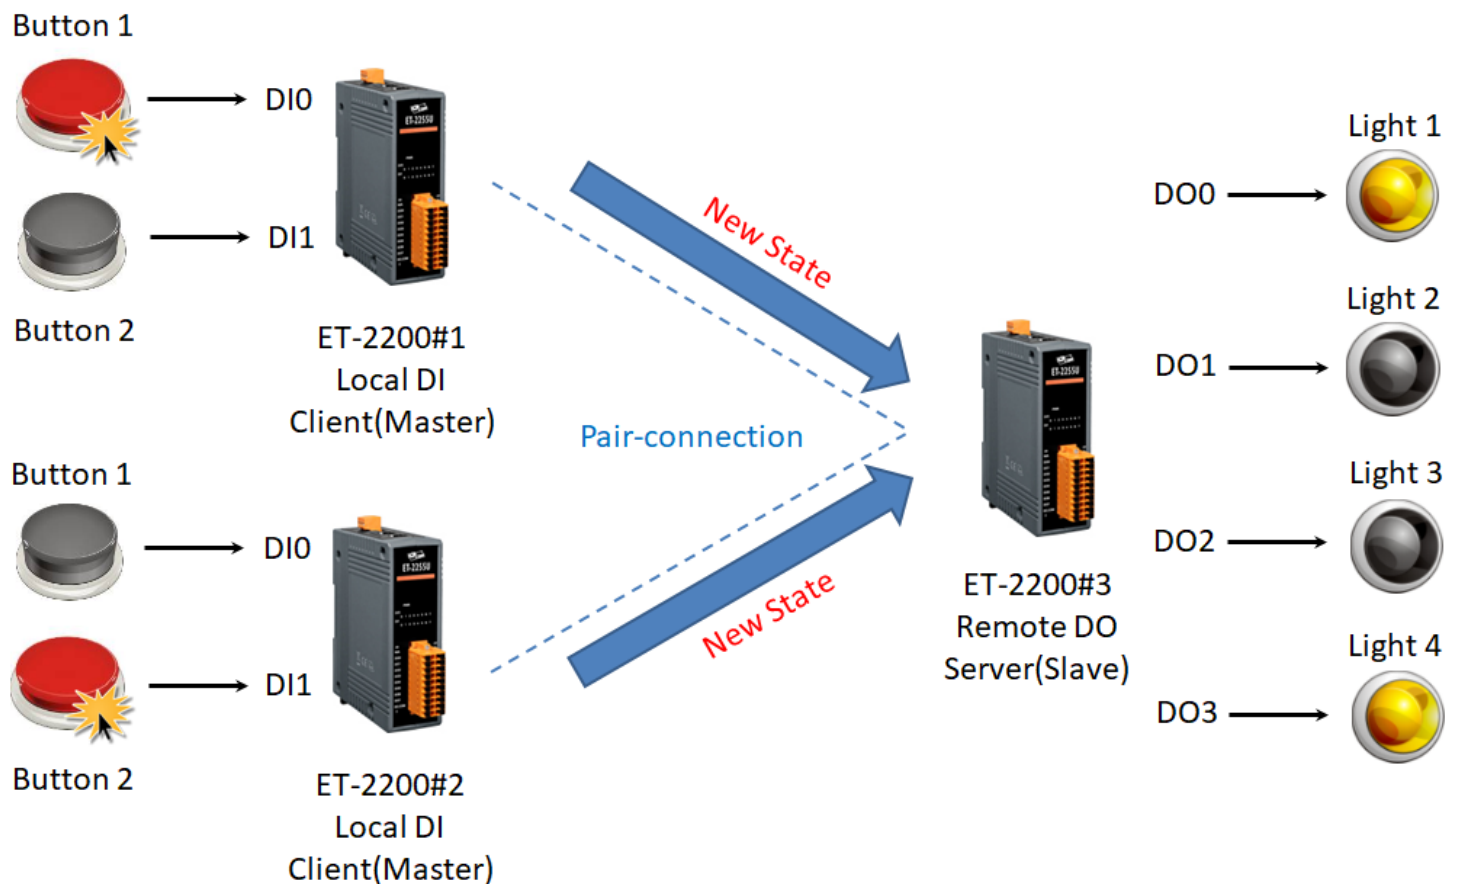

| module | Module specification | | | | | | | |
|-----------|----------------------|------------|------|--------|-----------|---------|-----------|---------|
| | Modbus | IP | Port | Net ID | DI Number | DI Addr | DO Number | DO Addr |
| ET-2200#1 | Master | 10.0.8.101 | 502 | 1 | 2 | 0 | - | - |
| ET-2200#2 | Slave | 10.0.8.102 | 502 | 2 | 2 | 0 | - | - |
| ET-2200#3 | Slave | 10.0.8.103 | 502 | 3 | - | - | 4 | 0 |

Note: The module specification is the assumed value. Please adjust the Pair-connection settings according to your module model when testing.

Pair-connection settings (PUSH)

Step 1 Enter the Pair-connection pages of the **ET-2200#1** and **ET-2200#2** individually.

Ethernet I/O Module

Home | Network | I/O Settings | Sync | PWM | **Pair** | Filter | Monitor | Password | Logout
MQTT (Topics: DO | DI)

Step 2 On the **ET-2200#1** page, add the **ET-2200#3** module to the Pair-connection list #01 and click the **Submit** button.

In the PUSH mode:

DI represents the Local DI. Please enter the ET-2200#1 module specification;

DO represents the Remote DO. Please enter the ET-2200#3 module specification.

ET-2200#1 DI0、DI1 ↔ ET-2200#3 DO0、DO1

| # | Mode | Remote IP | | | | Remote Port | Net ID | Scan Time | DI Count | DI Addr | DO Addr | TCP/UDP | Update |
|----|--------|-----------|---|---|-----|-------------|--------|-----------|----------|---------|---------|---------|--------|
| 01 | PUSH ▾ | 10 | 0 | 8 | 103 | 502 | 3 | 1000 ms | 2 | 0 | 0 | TCP ▾ | Submit |

Step 3 On the **ET-2200#2** page, add the **ET-2200#3** module to the Pair-connection list #01 and click the **Submit** button.

In the PUSH mode:

DI represents the Local DI. Please enter the ET-2200#2 module specification;

DO represents the Remote DO. Please enter the ET-2200#3 module specification.

ET-2200#2 DI0、DI1 ↔ ET-2200#3 DO2、DO3


| # | Mode | Remote IP | | | | Remote Port | Net ID | Scan Time | DI Count | DI Addr | DO Addr | TCP/UDP | Update |
|----|--------|-----------|---|---|-----|-------------|--------|-----------|----------|---------|---------|---------|--------|
| 01 | PUSH ▾ | 10 | 0 | 8 | 103 | 502 | 3 | 1000 ms | 2 | 0 | 2 | TCP ▾ | Submit |

Step 4 Reboot the **ET-2200#1** and **ET-2200#2** modules and test the Pair-connection function.

PULL Mode (Remote DI → Local DO)

The **ET-2200#1** will be Client mode (Modbus Master) when setting to **PULL** mode. The **ET-2200#1** will query the DI state of the **Remote DI** device and then update the **Local DO** according to the response.

Note: The Remote DI (ET-2200#2) can be replaced by the Modbus Slave DI device which supports the Modbus TCP protocol.

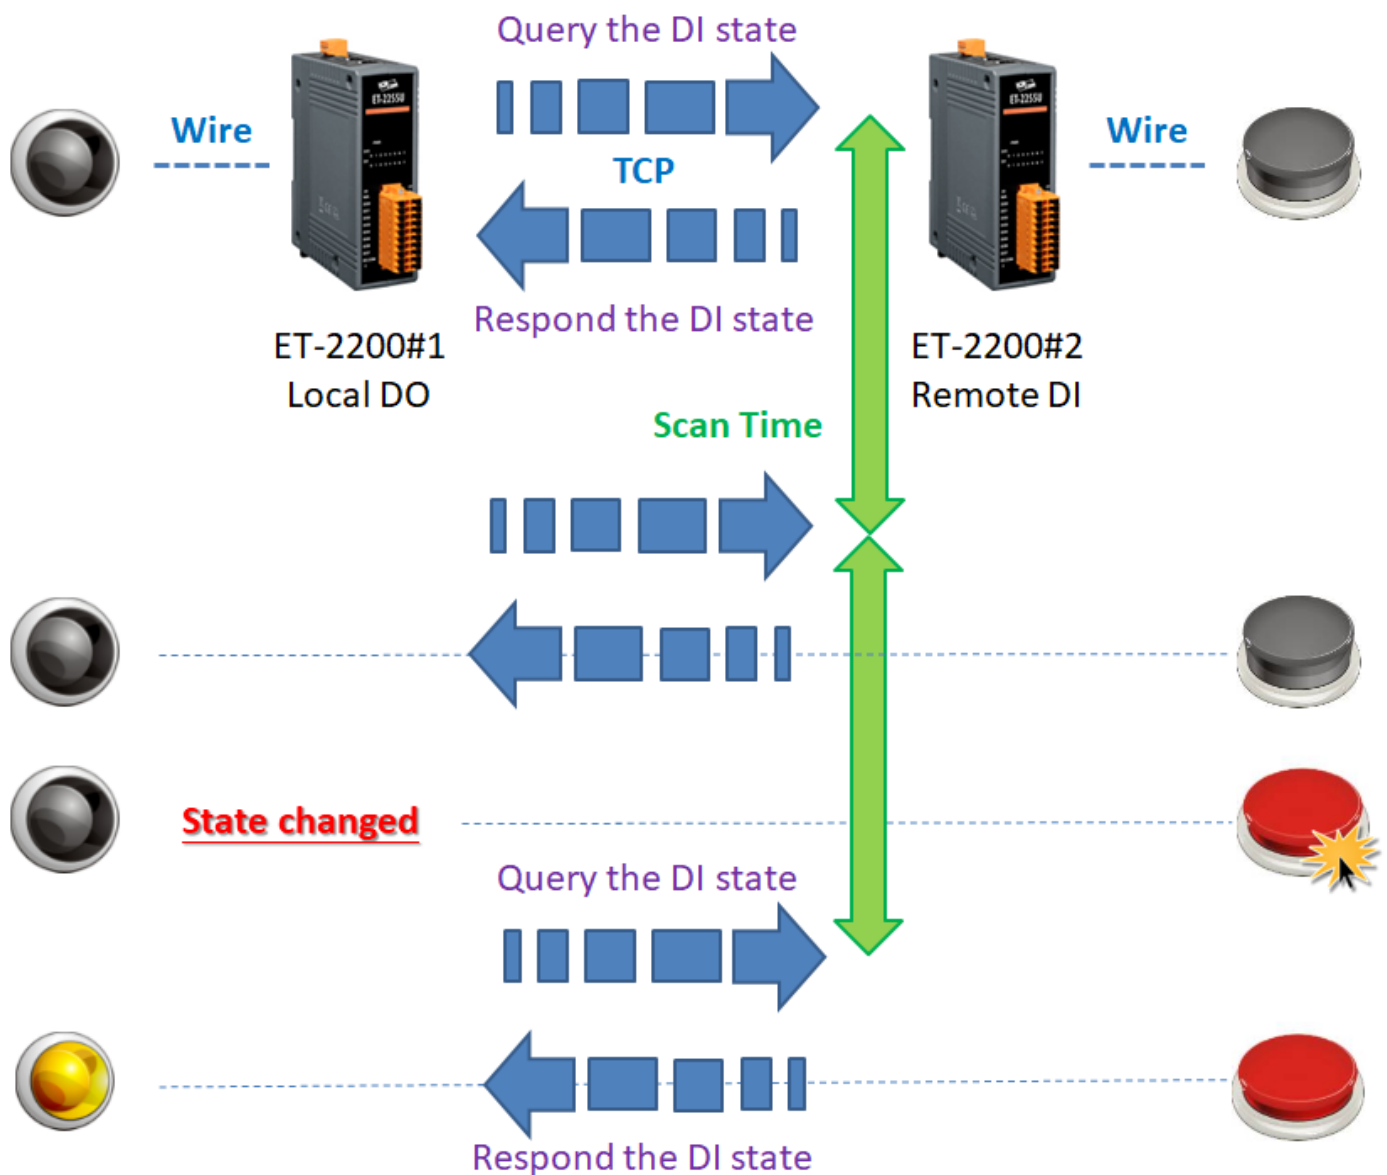


Example 3 (PULL Mode/ One-to-Many)

[back](#)

The **ET-2200#1** is a **Local DO** module (Client/Master) in this example. The **ET-2200#1** queries two DI states of **Remote DI** modules (Server/Slave), i.e., **ET-2200#2** and **ET-2200#3**, individually by Pair-connection function, and updates the **Local DO** state according to the responses of **Remote DI** modules. This is an implement of the One-to-Many for reading the **Remote DI**.

Note: The ET-2200#1 DO addresses which are mirrored by ET-2200#2 and ET-2200#3 can't overlap. In general, one DO point should be controlled by only one DI point.

Regardless of whether the Button is pressed, the **ET-2200#1** always queries the newest DI states periodically according the setting of the **Scan Time**, and then updating the **Local DO** state.

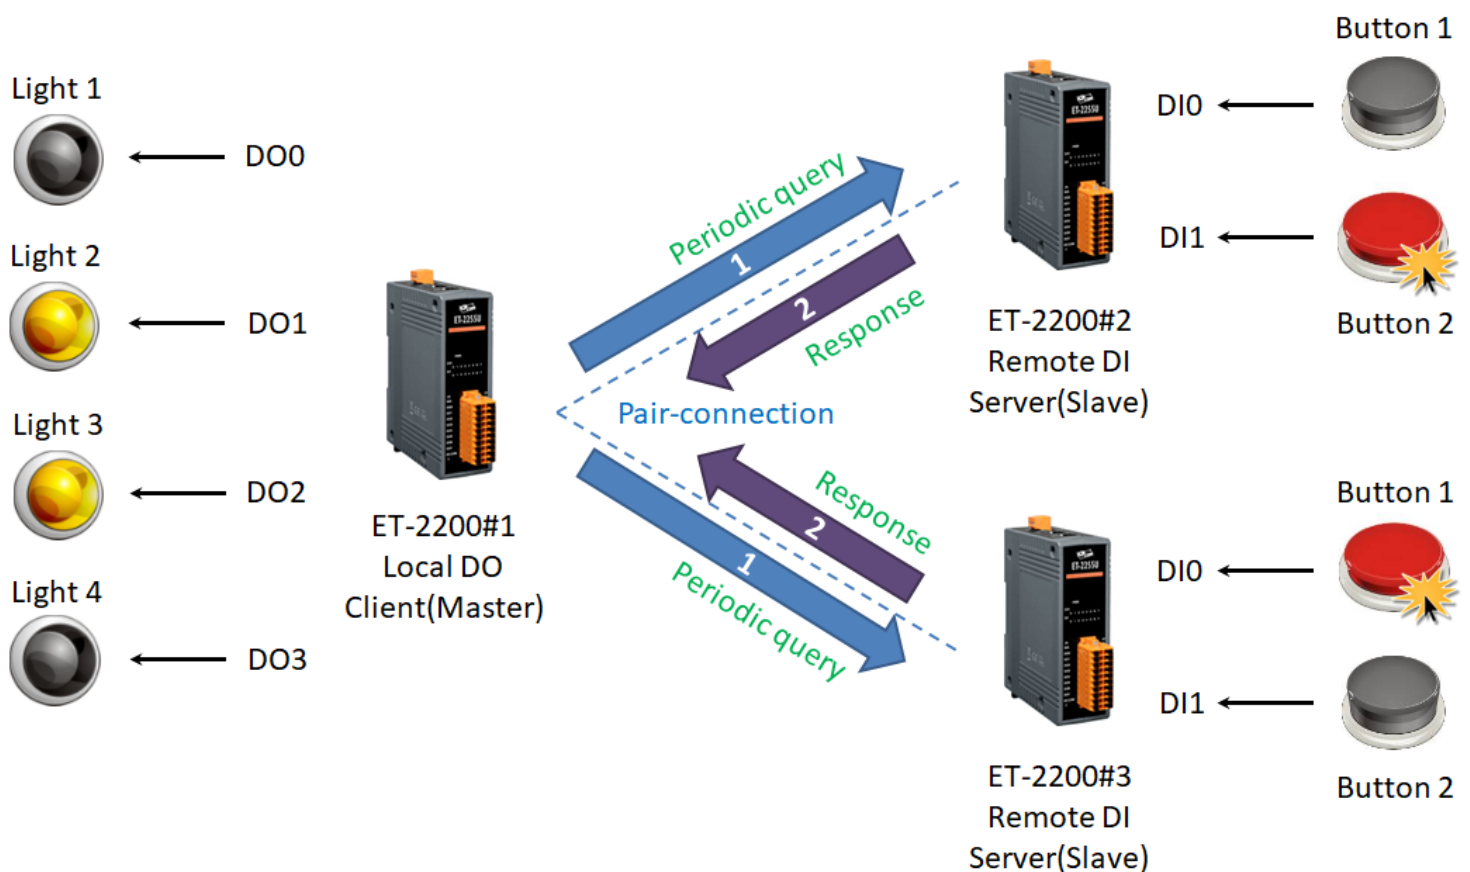

| module | Module specification | | | | | | | |
|-----------|----------------------|------------|------|--------|-----------|---------|-----------|---------|
| | Modbus | IP | Port | Net ID | DI Number | DI Addr | DO Number | DO Addr |
| ET-2200#1 | Master | 10.0.8.101 | 502 | 1 | - | - | 4 | 0 |
| ET-2200#2 | Slave | 10.0.8.102 | 502 | 2 | 2 | 0 | - | - |
| ET-2200#3 | Slave | 10.0.8.103 | 502 | 3 | 2 | 0 | - | - |

Note: The module specification is the assumed value. Please adjust the Pair-connection settings according to your module model when testing.

Pair-connection settings (PULL)

Step 1 Enter the Pair-connection page of the **ET-2200#1**.

Ethernet I/O Module

Home | Network | I/O Settings | Sync | PWM | **Pair** | Filter | Monitor | Password | Logout
MQTT (Topics: DO | DI)

Step 2 On the **ET-2200#1** page, add the **ET-2200#2** module to the Pair-connection list #01 and click the **Submit** button.

In the PULL mode:

DI represents the Remote DI. Please enter the ET-2200#2 module specification;

DO represents the Local DO. Please enter the ET-2200#1 module specification.

ET-2200#1 DO0、DO1 ↔ ET-2200#2 DI0、DI1

Step 3 On the **ET-2200#1** page, add the **ET-2200#3** module to the Pair-connection list #02 and click the **Submit** button.

In the PULL mode:

DI represents the Remote DI. Please enter the ET-2200#3 module specification;

DO represents the Local DO. Please enter the ET-2200#1 module specification.

ET-2200#1 DO2、DO3 ↔ ET-2200#3 DI0、DI1

| # | Mode | Remote IP | | | | Remote Port | Net ID | Scan Time | DI Count | DI Addr | DO Addr | TCP/UDP | Update |
|----|--------|-----------|---|---|-----|-------------|--------|-----------|----------|---------|---------|---------|--------|
| 01 | PULL ▼ | 10 | 0 | 8 | 102 | 502 | 2 | 1000 ms | 2 | 0 | 0 | TCP ▼ | Submit |
| 02 | PULL ▼ | 10 | 0 | 8 | 103 | 502 | 3 | 1000 ms | 2 | 0 | 2 | TCP ▼ | Submit |

Step 4 Reboot the **ET-2200#1** module and test the Pair-connection function.


Example 4 (PULL Mode/ Many-to-One)

[back](#)

The **ET-2200#1** and **ET-2200#2** are two **Local DO** modules (Client/Master) in this example. The **ET-2200#1** and **ET-2200#2** query the same **DI** state of **Remote DI** module (Server/Slave), i.e., **ET-2200#3**, by Pair-connection function, and update the **Local DO** states individually according to the response of **Remote DI** module. This is an implement of the Many-to-One for reading the **Remote DI**.

This example uses a single **DI** group to correspond multiple **DO** groups. The general application mostly uses a single **DI** group to correspond a single **DO** group. Please adjust the architecture according to actual requirement.

Regardless of whether the Button is pressed, the **ET-2200#1** and **ET-2200#2** always query the newest **DI** state periodically according the settings of the **Scan Time**, and then updating the **Local DO** states.

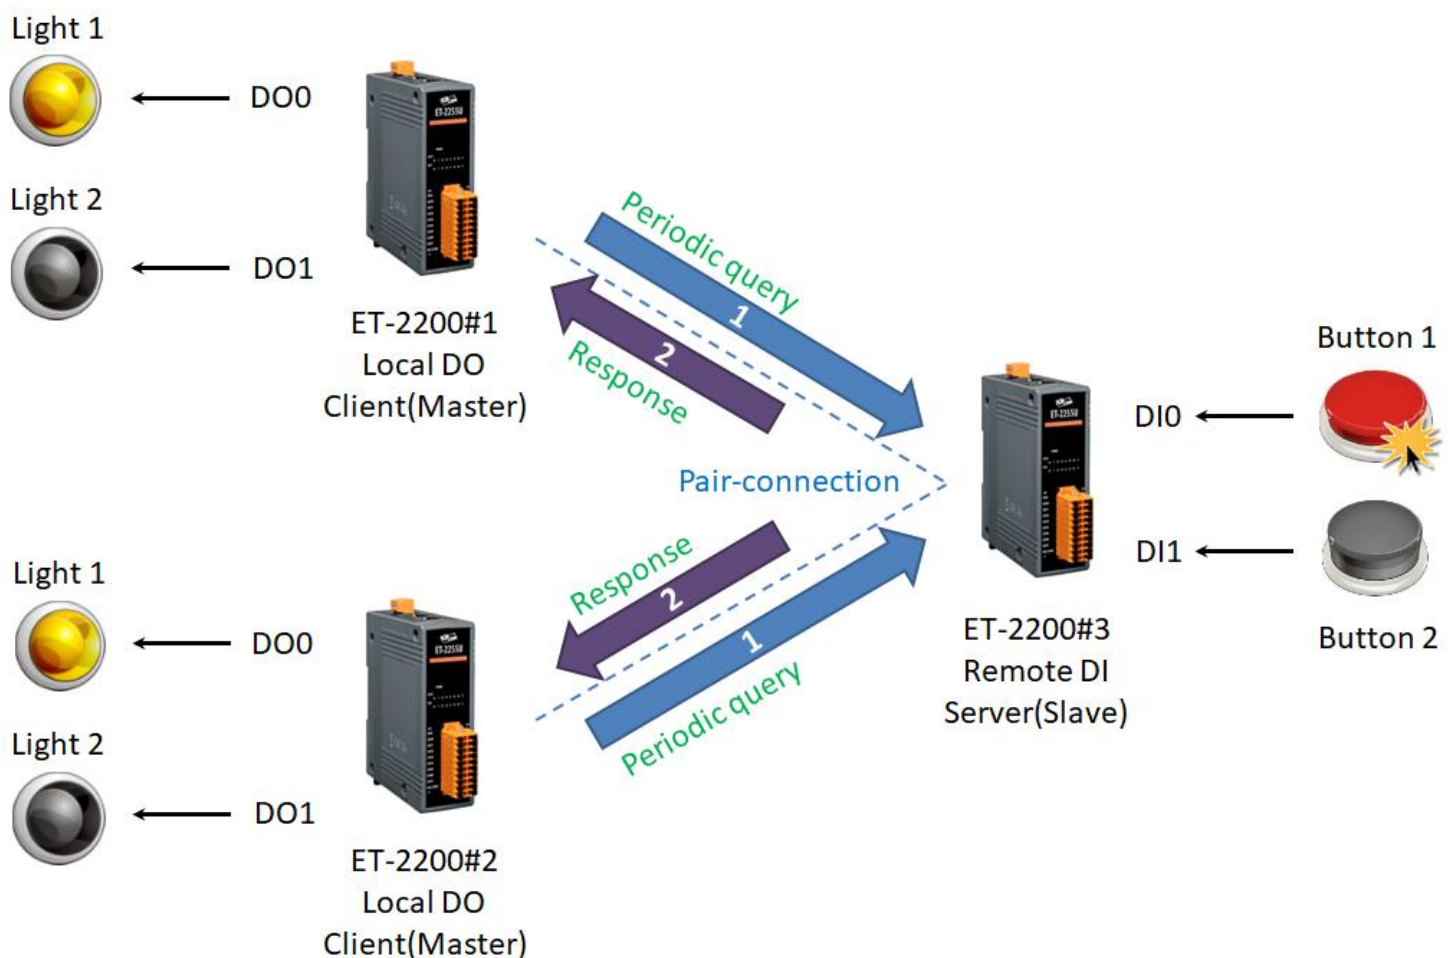

| module | Module specification | | | | | | | |
|-----------|----------------------|------------|------|--------|-----------|---------|-----------|---------|
| | Modbus | IP | Port | Net ID | DI Number | DI Addr | DO Number | DO Addr |
| ET-2200#1 | Master | 10.0.8.101 | 502 | 1 | - | - | 2 | 0 |
| ET-2200#2 | Slave | 10.0.8.102 | 502 | 2 | - | - | 2 | 0 |
| ET-2200#3 | Slave | 10.0.8.103 | 502 | 3 | 2 | 0 | - | - |

Note: The module specification is the assumed value. Please adjust the Pair-connection settings according to your module model when testing.

Pair-connection settings (PULL)

Step 1 Enter the Pair-connection pages of the **ET-2200#1** and **ET-2200#2** individually.

Ethernet I/O Module

Home | Network | I/O Settings | Sync | PWM | **Pair** | Filter | Monitor | Password | Logout
MQTT (Topics: DO | DI)

Step 2 On the **ET-2200#1** page, add the **ET-2200#3** module to the Pair-connection list #01 and click the **Submit** button.

In the PULL mode:

DI represents the Remote DI. Please enter the ET-2200#3 module specification;

DO represents the Local DO. Please enter the ET-2200#1 module specification.

| # | Mode | Remote IP | | | | Remote Port | Net ID | Scan Time | DI Count | DI Addr | DO Addr | TCP/UDP | Update |
|----|--------|-----------|---|---|-----|-------------|--------|-----------|----------|---------|---------|---------|--------|
| 01 | PULL ▾ | 10 | 0 | 8 | 103 | 502 | 3 | 1000 ms | 2 | 0 | 0 | TCP ▾ | Submit |

Step 3 On the **ET-2200#2** page, add the **ET-2200#3** module to the Pair-connection list #01 and click the **Submit** button.

In the PULL mode:

DI represents the Remote DI. Please enter the ET-2200#3 module specification;

DO represents the Local DO. Please enter the ET-2200#2 module specification.

| # | Mode | Remote IP | | | | Remote Port | Net ID | Scan Time | DI Count | DI Addr | DO Addr | TCP/UDP | Update |
|----|--------|-----------|---|---|-----|-------------|--------|-----------|----------|---------|---------|---------|--------|
| 01 | PULL ▾ | 10 | 0 | 8 | 103 | 502 | 3 | 1000 ms | 2 | 0 | 0 | TCP ▾ | Submit |

Step 4 Reboot the **ET-2200#1** and **ET-2200#2** modules and test the Pair-connection function.

Disable Mode

The ET-2200 module is the **Disable** mode in default setting. If the list adopts the **Disable** mode, it only represents this Pair-connection setting row is not enabled.